

Industrial Plugs

56P and 56PA Series

3, 4 and 5 Pin 32A, 40A and 50A

Wiring Instructions

56P and 56PA Series

Wiring Instructions

 Strip flexible cord as shown, pass through gland nut, thrust washer, cord gland, cable entry gland then through the plug cover under the cord clamp. If cord diameter is too large, auxilary cord clamp may be discarded

Depending on cable size remove the required internal segments of the cord gland to achieve a close fit around the outside diameter of the flexible cord. This is important to maintain the IP rating

- Place appropriate conductors into plug pin housing assembly terminals and tighten screws to secure bared conductors and ensure good electrical contact
- 3. Pull excess cord in plug cover until pin housing assembly seats itself in cover
- 4. Tighten cord clamp onto cord sheathing and re-assemble plug
- 5. Check Earth wire is connected to E \downarrow terminal

N.B: These instructions are the same for Straight and Angled 56 Series Plugs and designed for use with ordinary duty flexible cords, heavy duty flexible cords and flexible cables.

Minimum acceptable cable outside diameter = 9mm. Maximum acceptable cable outside diameter = 28mm.

Wiring Diagrams



Stripping Detail

(Actual Size in mm)



Product of Clipsal Australia Pty Ltd

A member of Schneider Electric

clipsal.com

Contact us clipsal.com/feedback

National Customer Service Enquiries:

Tel 1300 2025 25 Fax 1300 2025 56

Clipsal Australia Pty Ltd reserves the right to change specifications, modify designs and discontinue items without incurring obligation and whilst every effort is made to ensure that descriptions, specifications and other information in this catalogue are correct, no warranty is given in respect thereof and the company shall not be liable for any error therein.

© Clipsal Australia Pty Ltd. The identified trademarks and copyrights are the property of Clipsal Australia Pty Ltd unless otherwise noted.

F323/02

CLIPCOM 16267 June 2008