




This instruction applies to MMDM grid plates for 1-gang, 2-gang, 3-gang, 4-gang configurations and for push button dimmer.

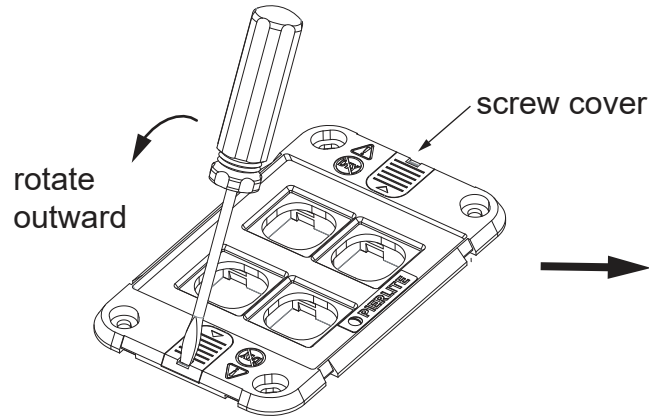


Step 1: Open the screw cover halfway using a flat-head screwdriver.

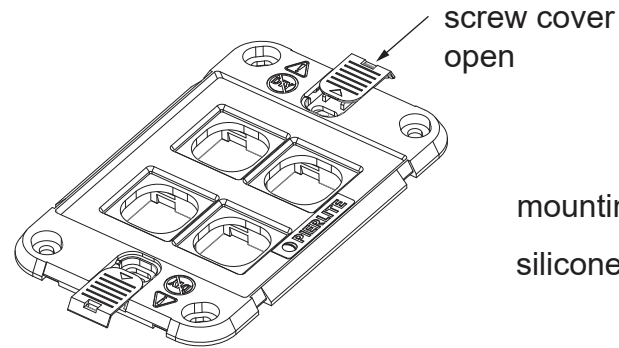


Step 2: Install the mounting screw and silicone ring.

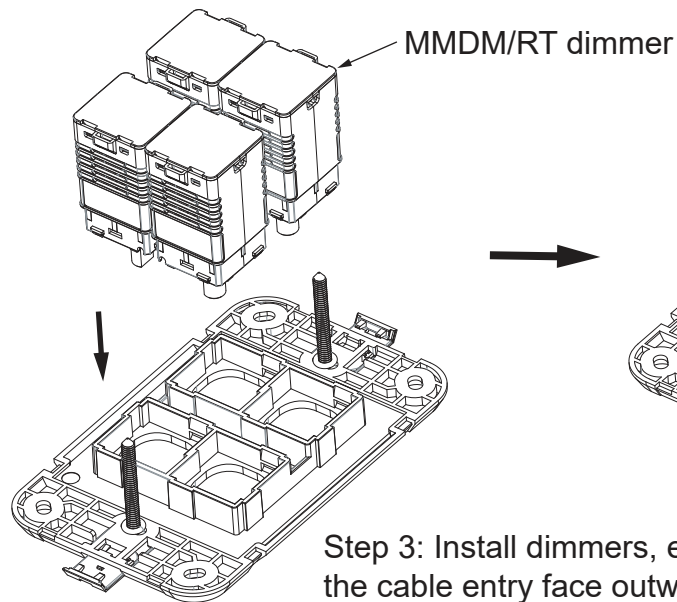


Step 3: Install dimmers, ensuring the cable entry face outward.

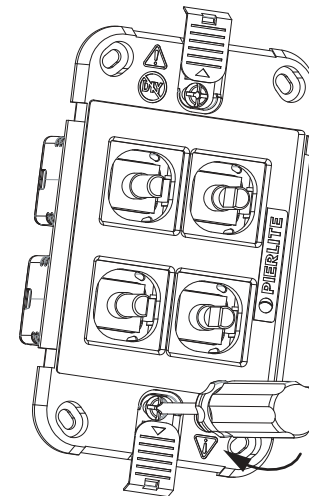

Step 4: Wire the components, then mount the grid plate on the wall. Tighten screws using a Phillips screwdriver.

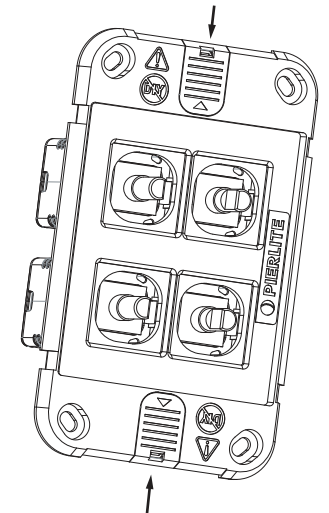

Step 5: Close the screw cover by pushing it with your finger.

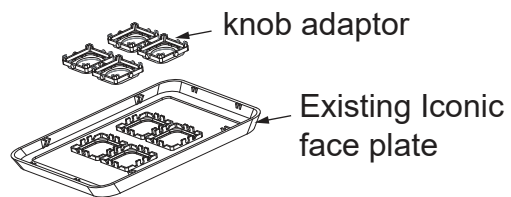



Step 6: Install the knob adaptor into the existing Iconic face plate. then fit the face plate to the grid plate.

PUSH BUTTON DIMMER MMDM/PB INSTALLATION


Follow steps 1 to 6 with these changes:

- At step 3: Use MMDM/PB (push button dimmer).
- At step 6: Instead of Knob adaptor, fit Iconic push button dolly 40APB.
- Fit push button adaptor to dimmer before assembly.

Existing Iconic face plate

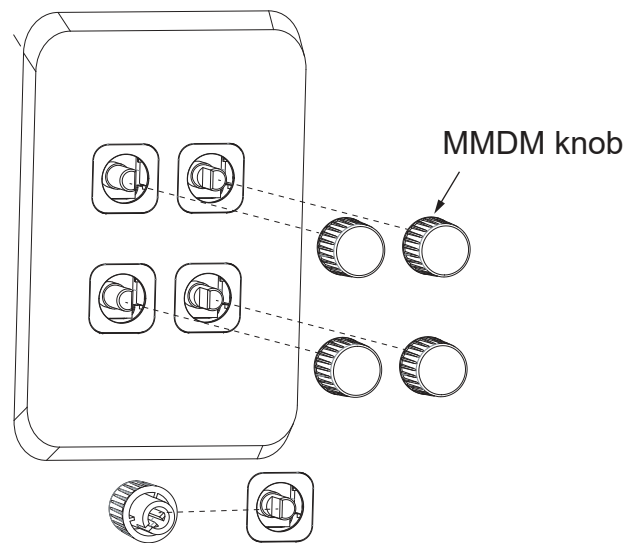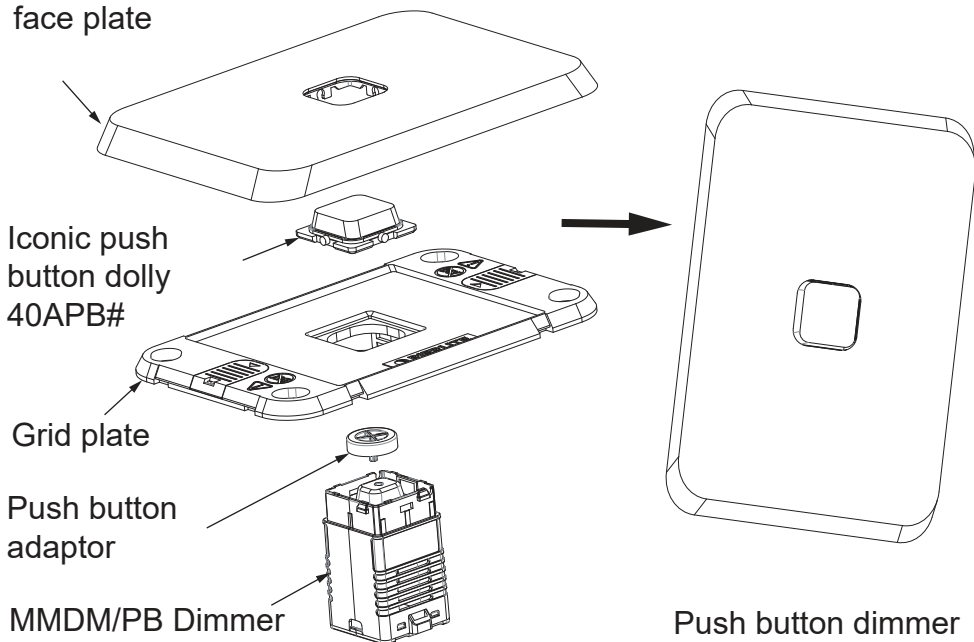


Step 7: Align the flat face on the shaft of the dimmer with the flat face on the inside of the MMDM dimmer knob.

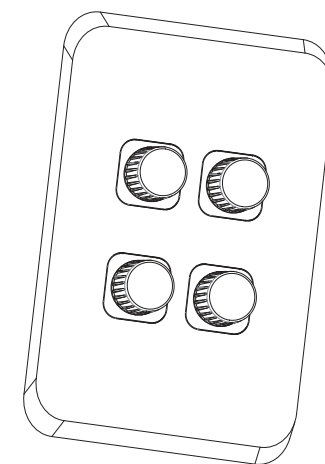


Step 8: Push the dimmer knob onto the shaft.


Example shows MMDMGP4G: 4 gang dimmer.

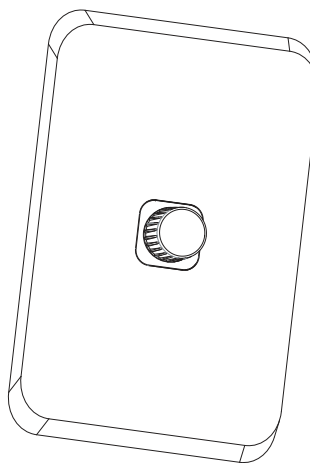

MMDMGP1G:
• 1 gang dimmer

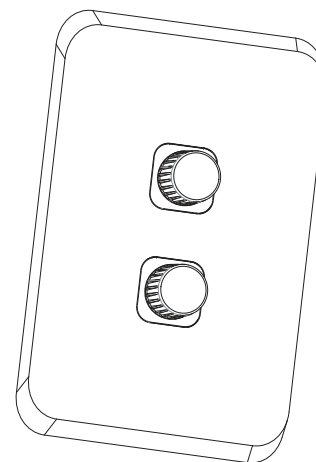

MMDMGP2G:
• 2 gang dimmer

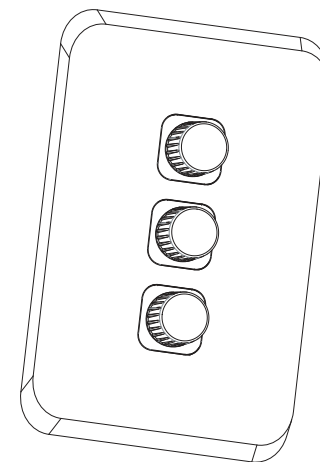


MMDMGP3G:
• 3 gang dimmer




DIGINET MEDM DIMMER: GRID PLATE INSTALL INSTRUCTIONS FOR 40M CLIPSAL/PDL ICONIC WALL SWITCH


This instruction applies to MEDM grid plates for 2-gang, 3-gang, 4-gang, 5-gang, and 6-gang configurations.

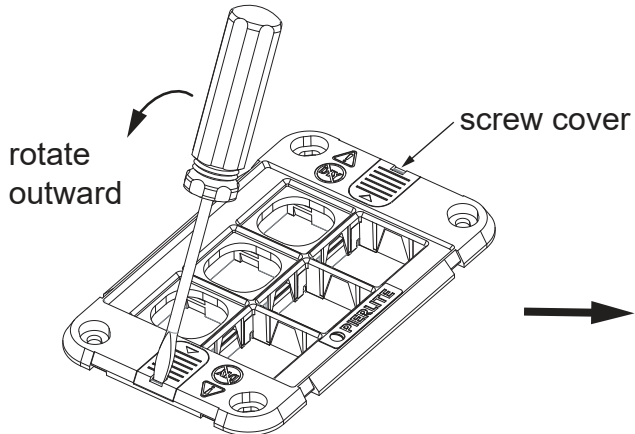


Step 1: Open the screw cover halfway using a flat-head screwdriver.

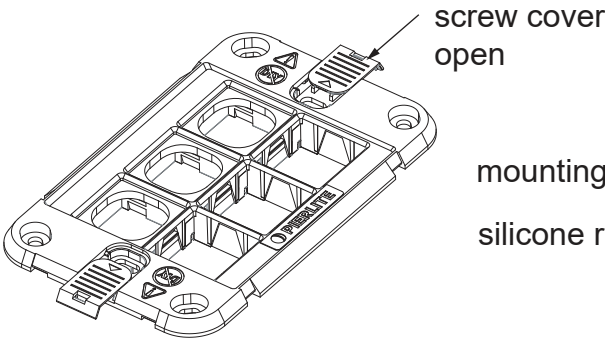


Step 2: Install the mounting screw and silicone ring.

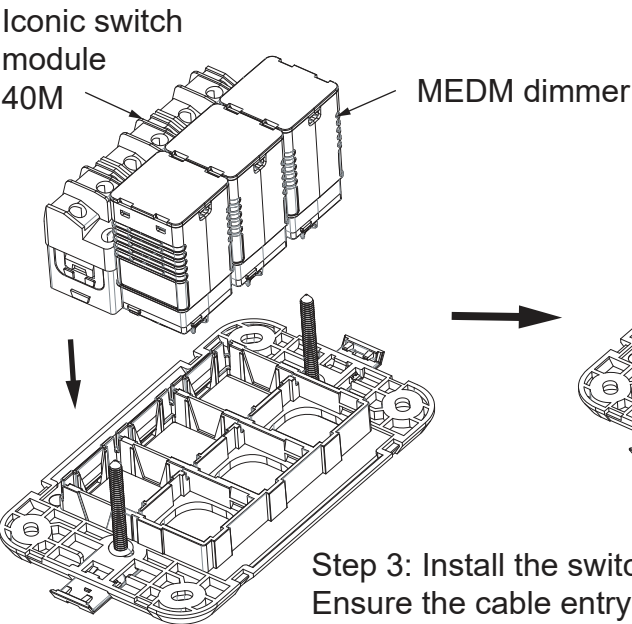

Step 3: Install the switch module and dimmer. Ensure the cable entry and terminal holes face outward.

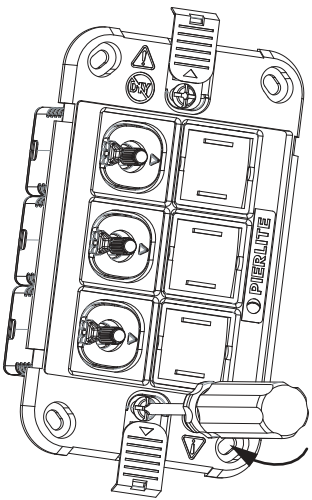


Step 4: Wire the components, then mount the grid plate on the wall. Tighten screws using a Phillips screwdriver.

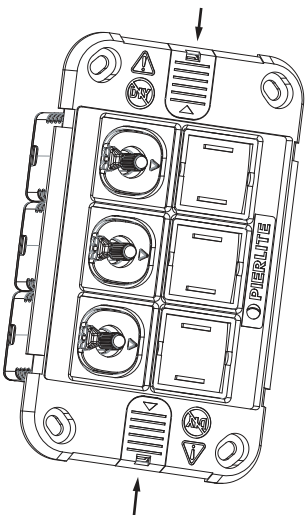


Step 5: Close the screw cover by pushing it with your finger.


DIGINET and PIERLITE are registered trademarks and brands of Signify Holding B.V., Registered Design. Copyright Pierlite 2025.
The Diginet MEDM grid plates are specifically designed for use in conjunction with Diginet MEDM dimmers and Iconic switch modules. No other dimmers are authorised for use in the Diginet Grid Plates.
In Australia, Clipsal and Iconic are registered trademarks and brands of Schneider Electric (Australia) Pty Limited. In New Zealand, PDL and Iconic are registered trademarks and brands of Schneider Electric (NZ) Pty Limited. 40M switches and Iconic face plates are purchased separately.

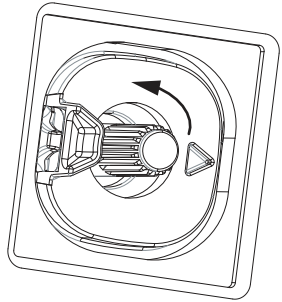


Step 6: Turn the dimmer shaft anti-clockwise until the required minimum brightness level is reached.

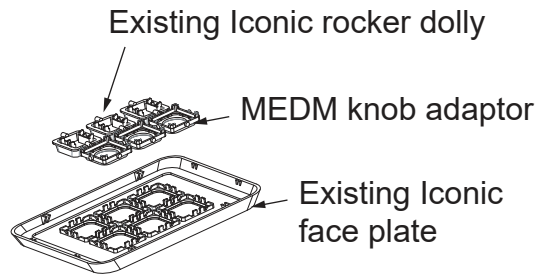

Step 7: Install the Iconic rocker buttons and knob adaptor on the existing Iconic face plate. Then fit the face plate to the grid plate.

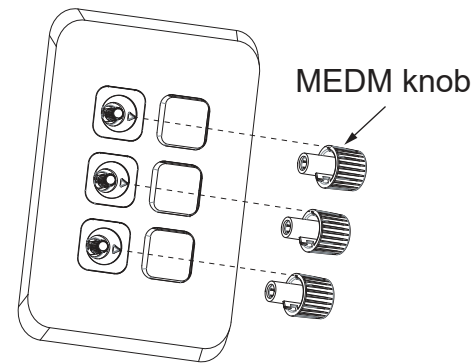


Step 8: Align the triangular marker on the front face of the dimmer with the triangular marker on the inside of the MEDM dimmer knob.

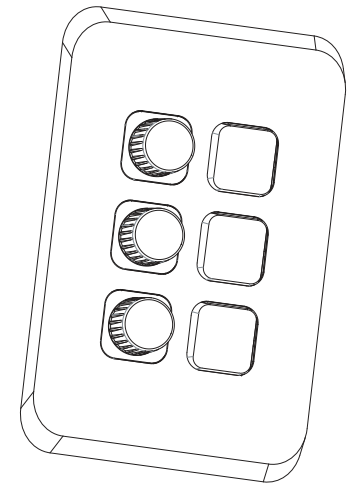


Step 9: Push the dimmer knob onto the shaft so that the triangular markers remain aligned.


Example shows MEDMG6G: 6 gang - 3 dimmers and 3 switches.

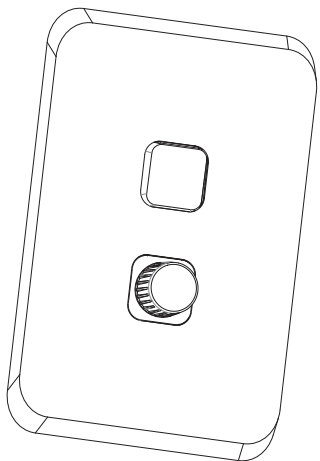


MEDMG2G:
2 gangs:
• 1 dimmer
• 1 switch

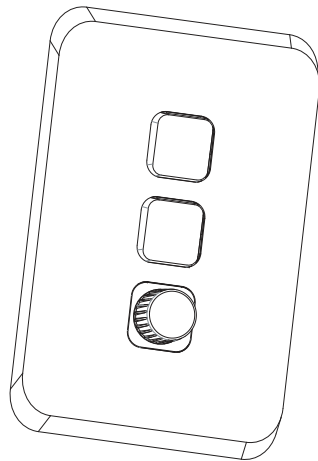


MEDMG3G:
3 gangs:
• 1 dimmer
• 2 switches

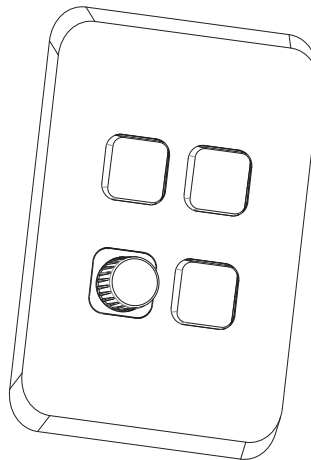

MEDMG4G:
4 gangs:
• 1 dimmer
• 3 switches

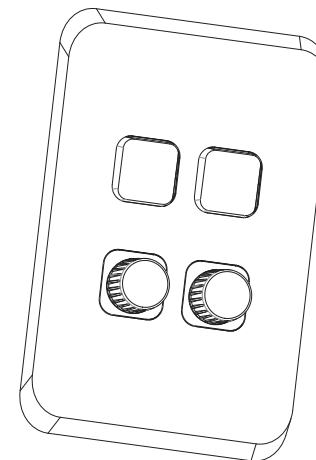

MEDMG4G:
4 gangs:
• 2 dimmer
• 2 switches

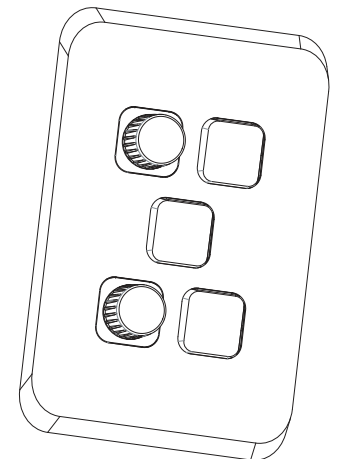

MEDMG5G:
5 gangs:
• 2 dimmer
• 3 switches