






Residual current circuit breaker with overcurrent protection (RCBO) Compliant with AS/NZS 61009.1

#### **PLEASE NOTE**

- The installation, maintenance and eventual replacement of this device must only be carried out by a qualified electrician.
- This device must not be repaired.
- All applicable local, regional and national regulations must be complied with during the installation, use, maintenance and replacement of this device.
- This device should not be installed if, when unpacking it, you observe that it is damaged.
- Schneider Electric cannot be held responsible in the event of noncompliance with the instructions in this document and in the documents to which it refers.
- The service instruction must be observed throughout the life time of this device.

### Description

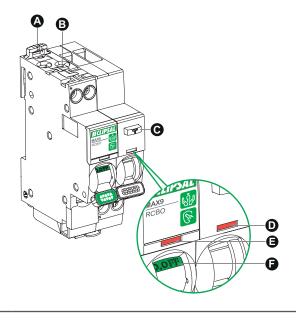

- Clip for DIN rail mounting
- Connection terminals
- Test button
- VISI-TRIP: Earth leakage fault tripping
- Short-circuit and overload fault tripping
- ∇ISI-SAFE: Positive contact indication


## Installation


### **A** A DANGER


#### HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- $\blacksquare$  Turn off all power supplying this device before working on it.
- Use a voltage tester with a suitable rated voltage, in order to check that all active conductors aren't energized.

Failure to follow these instructions will result in death or serious injury.

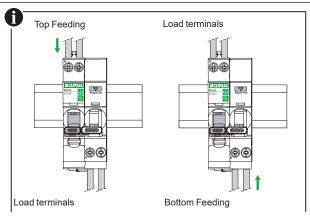

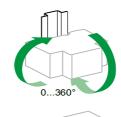


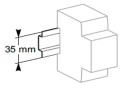


14 mm	116 mm²	110 mm <sup>2</sup>
G c		8
2 N.m	5.5 mm	PZ2

# Regular test

Note: Test the device at regular intervals by pressing the Test button (marked T), following the intervals defined in your local regulations or monthly.

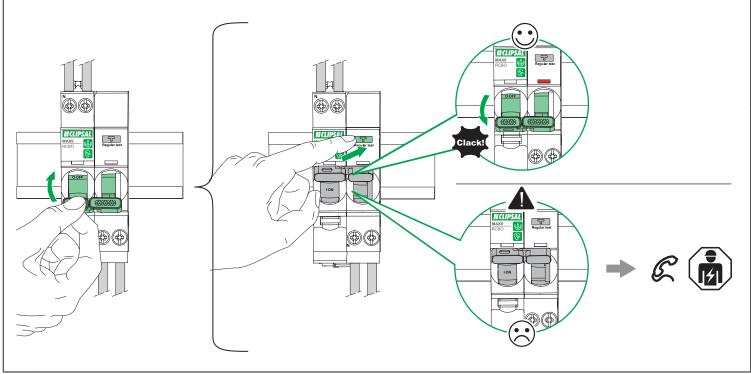

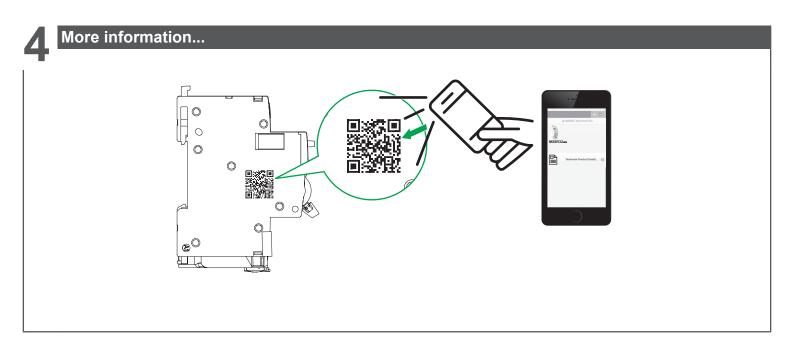

Clipsal by Schneider Electric (Australia) Pty Ltd 33-37 Port Wakefield Road

Gepps Cross South Australia 5094

Customer Care Centre Tel: 1300 369 233 Email: customercare.au@se.com Fax: 1300 369 288

Fax: 1300 369 288 www.clipsal.com JYT3818400-00