

User Manual

1-phase Hybrid Inverter

SH8.0RS/SH10RS



All Rights Reserved

All Rights Reserved

No part of this document can be reproduced in any form or by any means without the prior written permission of Sungrow Power Supply Co., Ltd (hereinafter "SUNGROW").

Trademarks

SUNGROW and other Sungrow trademarks used in this manual are owned by SUNGROW.

All other trademarks or registered trademarks mentioned in this manual are owned by their respective owners.

Software Licenses

- It is prohibited to use data contained in firmware or software developed by SUNGROW, in part or in full, for commercial purposes by any means.
- It is prohibited to perform reverse engineering, cracking, or any other operations that compromise the original program design of the software developed by SUNGROW.

About This Manual

The manual mainly contains the product information, as well as guidelines for installation, operation, and maintenance. The manual does not include complete information about the photovoltaic (PV) system. Readers can get additional information at www.sungrowpower.com or on the webpage of the respective component manufacturer.

Validity

This manual is valid for the following model of low-power grid-connected PV string inverters:

- SH8.0RS
- SH10RS

It will be referred to as "inverter" hereinafter unless otherwise specified.

Target Group

This manual is intended for professional technicians who are responsible for installation, operation, and maintenance of inverters, and users who need to check inverter parameters.

The inverter must only be installed by professional technicians. The professional technician is required to meet the following requirements:

- Know electronic, electrical wiring and mechanical expertise, and be familiar with electrical and mechanical schematics.
- Have received professional training related to the installation and commissioning of electrical equipment.
- Be able to quickly respond to hazards or emergencies that occur during installation and commissioning.
- Be familiar with local standards and relevant safety regulations of electrical systems.
- Read this manual thoroughly and understand the safety instructions related to operations.

How to Use This Manual

Please read this manual carefully before using the product and keep it properly at a place for easy access.

All contents, pictures, marks, and symbols in this manual are owned by SUNGROW. No part of this document may be reprinted by the non-internal staff of SUNGROW without written authorization.

Contents of this manual may be periodically updated or revised, and the actual product purchased shall prevail. Users can obtain the latest manual from support.sungrowpower.com or sales channels.

Symbols

This manual contains important safety instructions, which are highlighted with the following symbols, to ensure personal and property safety during usage, or to help optimize the product performance in an efficient way.

Please carefully understand the meaning of these warning symbols to better use the manual.

 **DANGER**

Indicates high-risk potential hazards that, if not avoided, may lead to death or serious injury.

 **WARNING**

Indicates moderate-risk potential hazards that, if not avoided, may lead to death or serious injury.

 **CAUTION**

Indicates low-risk potential hazards that, if not avoided, may lead to minor or moderate injury.

NOTICE

Indicates potential risks that, if not avoided, may lead to device malfunctions or financial losses.



“NOTE” indicates additional information, emphasized contents or tips that may be helpful, e.g., to help you solve problems or save time.

Contents

| | |
|---|-----------|
| All Rights Reserved | I |
| About This Manual | II |
| 1 Safety Instructions | 1 |
| 1.1 Unpacking and Inspection | 2 |
| 1.2 Installation Safety | 2 |
| 1.3 Electrical Connection Safety | 3 |
| 1.4 Operation Safety | 5 |
| 1.5 Maintenance Safety | 5 |
| 1.6 Disposal Safety | 6 |
| 2 Product Description | 7 |
| 2.1 System Introduction | 7 |
| 2.2 Product Introduction | 8 |
| 2.3 Symbols on the Product | 9 |
| 2.4 LED Panel | 10 |
| 2.5 DC Switch | 11 |
| 2.6 PV Energy Storage System (PV ESS) | 12 |
| 2.6.1 PV Energy Storage System (PV ESS) | 12 |
| 2.6.2 Declaration For Back-Up Function | 13 |
| 2.7 Whole Home Backup | 14 |
| 2.8 Retrofitting the Existing PV System | 14 |
| 3 Function Description | 17 |
| 3.1 Safety Function | 17 |
| 3.1.1 Protection | 17 |
| 3.1.2 Earth Fault Alarm | 17 |
| 3.2 Energy Conversion and Management | 17 |
| 3.2.1 Power Derating | 17 |
| 3.2.2 DRM (“AU”/“NZ”) | 18 |
| 3.2.3 Regular Operational Voltage Range | 18 |
| 3.2.4 Regular Operational Frequency Range | 18 |
| 3.2.5 Reactive Power Regulation | 19 |
| 3.3 Battery Management | 19 |

| | |
|--|-----------|
| 3.3.1 Charge Management..... | 20 |
| 3.3.2 Discharge Management..... | 21 |
| 3.4 PID Zero | 21 |
| 3.5 Communication and Configuration | 23 |
| 3.6 Import Power Limit Function | 23 |
| 4 Unpacking and Storage | 25 |
| 4.1 Unpacking and Inspection | 25 |
| 4.2 Scope of Delivery | 26 |
| 4.3 Inverter Storage | 27 |
| 5 Mechanical Mounting | 28 |
| 5.1 Safety During Mounting..... | 28 |
| 5.2 Location Requirements | 29 |
| 5.2.1 Environment Requirements..... | 29 |
| 5.2.2 Carrier Requirements | 29 |
| 5.2.3 Angle Requirements..... | 30 |
| 5.2.4 Clearance Requirements | 30 |
| 5.3 Installation Tools..... | 31 |
| 5.4 Moving the Inverter | 33 |
| 5.5 Installing the Inverter..... | 33 |
| 6 Electrical Connection | 36 |
| 6.1 Safety Instructions | 36 |
| 6.2 Terminal Description | 38 |
| 6.3 Electrical Connection Overview | 39 |
| 6.4 Backup Wiring Diagram | 41 |
| 6.5 External Protective Grounding Connection | 44 |
| 6.5.1 External Protective Grounding Requirements | 45 |
| 6.5.2 Connection Procedure..... | 45 |
| 6.6 AC Cable Connection | 47 |
| 6.6.1 AC Side Requirements | 47 |
| 6.6.2 Connecting the AC Cable | 47 |
| 6.7 DC Cable Connection | 50 |
| 6.7.1 PV Input Configuration | 52 |
| 6.7.2 Assembling the PV Connectors | 53 |
| 6.7.3 Installing PV Connector | 54 |
| 6.8 Emergency Load Connection (Backup) | 55 |
| 6.9 Battery Connection | 58 |

| | |
|--|-----------|
| 6.9.1 Installing the Battery Connector..... | 59 |
| 6.10 Communication Connection..... | 61 |
| 6.10.1 WiNet-S2/EyeM4 Connection..... | 61 |
| 6.10.2 COM2 Terminal Connection | 66 |
| 6.11 Protective Cover Installation (Optional)..... | 74 |
| 7 Commissioning | 77 |
| 7.1 Inspection Before Commissioning..... | 77 |
| 7.2 Powering on the System | 77 |
| 7.3 App Preparation | 78 |
| 7.4 Plant Creation | 78 |
| 8 iSolarCloud App | 86 |
| 8.1 Brief Introduction | 86 |
| 8.2 Installing App | 86 |
| 8.3 Account Registration..... | 87 |
| 8.4 Login | 88 |
| 8.4.1 Requirements | 88 |
| 8.4.2 Login Procedure | 88 |
| 8.5 Initial Settings..... | 90 |
| 8.5.1 Feed-in Limitation | 90 |
| 8.5.2 Backup Mode..... | 90 |
| 8.6 Function Overview..... | 91 |
| 8.7 Home | 91 |
| 8.8 Run Information..... | 92 |
| 8.9 Records..... | 93 |
| 8.9.1 Chart..... | 93 |
| 8.9.2 Fault Alarm Record | 94 |
| 8.9.3 Event Record..... | 95 |
| 8.10 More..... | 95 |
| 8.10.1 System Parameters..... | 96 |
| 8.10.2 Running Time | 97 |
| 8.10.3 Regular Parameters | 97 |
| 8.10.4 Off-grid Parameters..... | 98 |
| 8.10.5 Active Power Regulation..... | 98 |
| 8.10.6 Reactive Power Regulation | 99 |
| 8.10.7 Battery Discharge Time | 103 |
| 8.10.8 Battery Forced Charge Time | 103 |
| 8.10.9 Communication Parameters..... | 104 |

| | |
|---|------------|
| 8.10.10 Firmware Update..... | 105 |
| 8.10.11 Grounding Detection..... | 106 |
| 8.10.12 Frequency Shift Power Control..... | 106 |
| 8.10.13 Import Power Limit..... | 107 |
| 9 System Decommissioning | 108 |
| 9.1 Decommissioning the Inverter | 108 |
| 9.1.1 Disconnecting Inverter..... | 108 |
| 9.1.2 Dismantling the Inverter..... | 108 |
| 9.1.3 Disposal of Inverter | 109 |
| 9.2 Decommissioning the Battery | 109 |
| 10 Troubleshooting and Maintenance | 110 |
| 10.1 Troubleshooting..... | 110 |
| 10.2 Maintenance | 119 |
| 10.2.1 Maintenance Notices..... | 119 |
| 10.2.2 Routine Maintenance..... | 120 |
| 11 Appendix | 121 |
| 11.1 Technical Data..... | 121 |
| 11.2 Quality Assurance..... | 123 |
| 11.3 Contact Information..... | 124 |

1 Safety Instructions

When installing, commissioning, operating, and maintaining the product, strictly observe the labels on the product and the safety requirements in the manual. Incorrect operation or work may cause:

- Injury or death to the operator or a third party.
- Damage to the product and other properties.

WARNING

- **Do not operate the product and cables (including but not limited to moving the product, installing the product, operating the product and cables, powering up the product, maintaining the product, and working at heights) in harsh weather conditions such as flooding, lightning, rain, snow, and level 6 or stronger wind.**
- **In case of fire, evacuate from the building or product area and call the fire alarm. Re-entry into the burning area is strictly prohibited under any circumstances.**

NOTICE

- **Tighten the screws with the specified torque using tools when fastening the product and terminals. Otherwise, the product may be damaged. And the damage caused is not covered by the warranty.**
- **Learn how to use tools correctly before using them to avoid hurting people or damaging the device.**
- **Maintain the device with sufficient knowledge of this manual and use proper tools.**



- The safety instructions in this manual are only supplements and cannot cover all the precautions that should be followed. Perform operations considering actual onsite conditions.
- SUNGROW shall not be held liable for any damage caused by violation of general safety operation requirements, general safety standards, or any safety instruction in this manual.
- When installing, operating, and maintaining the product, comply with local laws and regulations. The safety precautions in this manual are only supplements to local laws and regulations.

1.1 Unpacking and Inspection

WARNING

Check all safety signs, warning labels and nameplates on devices.

Ensure that the safety signs, warning labels and nameplates must be clearly visible and cannot be removed or covered before the device is decommissioned.

NOTICE

After receiving the product, check whether the appearance and structural parts of the device are damaged, and check whether the packing list is consistent with the actual ordered product. If there are problems with the above inspection items, do not install the device and contact your distributor first. If the problem persists, contact SUNGROW in time.

1.2 Installation Safety

DANGER

- **Make sure there is no electrical connection before installation.**
- **Before drilling, avoid the water and electricity wiring in the wall.**

CAUTION

Improper installation may cause personal injury!

- **If the product supports hoisting transport and is hoisted by hoisting tools, no one is allowed to stay under the product.**
- **When moving the product, be aware of the product weight and keep the balance to prevent it from tilting or falling.**

NOTICE

Before operating the product, must check and ensure that tools to be used have been maintained regularly.

1.3 Electrical Connection Safety

DANGER

Before electrical connections, please make sure that the inverter is not damaged, otherwise it may cause danger!

Before electrical connections, please make sure that the inverter switch and all switches connected to the inverter are set to "OFF", otherwise electric shock may occur!

DANGER

The PV string will generate lethal high voltage when exposed to sunlight.

- Operators must wear proper personal protective equipment during electrical connections.
- Must ensure that cables are voltage-free with a measuring instrument before touching DC cables.
- Respect all safety instructions listed in relevant documents about PV strings.

DANGER

Danger to life due to a high voltage inside the inverter!

- Be sure to use special insulation tools during cable connections.
- Note and observe the warning labels on the product, and perform operations strictly following the safety instructions.
- Respect all safety instructions listed in this manual and other pertinent documents.

DANGER

If the battery is short-circuited, the instantaneous current will be excessively high and a large amount of energy will be released, which may cause fire and personal injury.

Disconnect the battery from all voltage sources prior to performing any work on the battery.

Lethal voltages are present at the battery terminals and cables connecting to the inverter. Severe injuries or death may occur if the cables and terminals in the inverter are touched.

Observe all safety information provided by the battery manufacturer.

⚠ WARNING

Damage to the product caused by incorrect wiring is not covered by the warranty.

- **Electrical connection must be performed by professionals.**
- **Please use measuring devices with an appropriate range. Overvoltage can damage the measuring device and cause personal injury.**
- **All cables used in the PV generation system must be firmly attached, properly insulated, and adequately dimensioned.**
- **Do not damage the ground conductor. Do not operate the product in the absence of a properly installed ground conductor. Otherwise, it may cause personal injury or product damage.**

⚠ WARNING

Check the positive and negative polarity of the PV strings, and connect the PV connectors to corresponding terminals only after ensuring polarity correctness.

During the installation and operation of the inverter, please ensure that the positive or negative poles of PV strings do not short-circuit to the ground. Otherwise, an AC or DC short-circuit may occur, resulting in equipment damage. The damage caused by this is not covered by the warranty.

The interfaces of the battery in the system must be compatible with the inverter.

The entire battery voltage range must be completely within the permissible range of the inverter, and the battery voltage shall not exceed the maximum permissible DC input voltage of the inverter.

NOTICE

- **Comply with the safety instructions related to PV strings and the regulations related to the local grid.**
- **Install the external protective grounding cable first when performing electrical connection and remove the external protective grounding cable last when removing the inverter.**

1.4 Operation Safety

DANGER

When routing cables, ensure a distance of at least 30 mm between the cables and heat-generating components or areas to protect the insulation layer of cables from aging and damage.

When the product is working:

- Do not touch the product enclosure.
- It is strictly forbidden to plug and unplug any connector on the inverter.
- Do not touch any wiring terminal of the inverter. Otherwise, electric shock may occur.
- Do not disassemble any parts of the inverter. Otherwise, electric shock may occur.
- It is strictly forbidden to touch any hot parts of the inverter (such as the heat sink). Otherwise, it may cause burns.
- Do not connect or remove any battery. Otherwise, electric shock may occur.
- Do not connect or remove any PV string or any PV module in a string. Otherwise, electric shock may occur.
- If the inverter is equipped with a DC switch, do not operate it. Otherwise, it may cause device damage or personal injury.

1.5 Maintenance Safety

DANGER

Risk of inverter damage or personal injury due to incorrect service!

- Before maintenance, disconnect the AC circuit breaker on the grid side and then the DC switch. If a fault that may cause personal injury or device damage is found before maintenance, disconnect the AC circuit breaker and wait until the night before operating the DC switch. Otherwise, a fire inside the product or an explosion may occur, causing personal injuries.
- After the inverter is powered off for, measure the voltage and current with professional instrument. Only when there is no voltage nor current can operators who wear protective equipment operate and maintain the inverter.
- Even if the inverter is shut down, it may still be hot and cause burns. Wear protective gloves before operating the inverter after it cools down.

⚠ DANGER

Touching the power grid or the contact points and terminals on the inverter connected to the power grid may lead to electric shock!

- The power grid side may generate voltage. Always use a standard voltmeter to ensure that there is no voltage before touching.

⚠ CAUTION

To prevent misuse or accidents caused by unrelated personnel, post prominent warning signs or demarcate safety warning areas around the product.

NOTICE

To avoid the risk of electric shock, do not perform any other maintenance operations beyond those described in this manual. If necessary, contact your distributor first. If the problem persists, contact SUNGROW. Otherwise, the losses caused is not covered by the warranty.

NOTICE

- If the paint on the inverter enclosure falls or rusts, repair it in time. Otherwise, the inverter performance may be affected.
- Do not use cleaning agents to clean the inverter. Otherwise, the inverter may be damaged, and the loss caused is not covered by the warranty.
- As the inverter contains no parts that can be maintained, never open the enclosure of the inverter or replace any internal components without authorization. Otherwise, the loss caused is not covered by the warranty.

1.6 Disposal Safety

⚠ WARNING

Please scrap the product in accordance with relevant local regulations and standards to avoid property losses or casualties.

2 Product Description

2.1 System Introduction

The inverter is a transformerless 1-phase hybrid inverter. As an integral component in the power system, the inverter is designed to convert the direct current power generated from the PV modules or batteries into grid-compatible AC current and feeds the AC current to the utility grid.

The 1-phase hybrid inverters are applicable to both on-grid and off-grid PV systems. With the integrated Energy Management System (EMS), they can control and optimize the energy flow so as to increase the self-consumption of the system.

WARNING

- **The inverter must only be operated with PV strings with class II protection in accordance with IEC 61730, application class A. It is not allowed for the positive pole or the negative pole of the PV strings to be grounded. This can cause the inverter to be destroyed.**
- **Damages to the product due to a faulty or damaged PV installation are not covered by warranty.**
- **Any use other than the one described in this document is not permitted.**
- **During the installation and operation of the inverter, please ensure that the positive or negative polarities of PV strings and those of batteries do not short-circuit to the ground. Otherwise, an AC or DC short-circuit may occur, resulting in equipment damage. The damage caused by this is not covered by the warranty.**
- **Do not short-circuit the Backup port during operation. Otherwise, the inverter or power distribution system will be seriously damaged. The loss is not covered by the SUNGROW warranty.**
- **Do not connect any local load between the inverter and the AC circuit breaker.**


NOTICE

- **For the TT utility grid, the N line voltage to ground must be 30 V or less.**
- **The utility grid must be a TN system for the off-grid application.**
- **The system is not suitable for supplying life-sustaining medical devices. It cannot guarantee backup power in all circumstances.**
- **The inverter applies only to the scenarios described in this manual.**

2.2 Product Introduction

Model Description

The model description is as follows (take SH8.0RS as an example):

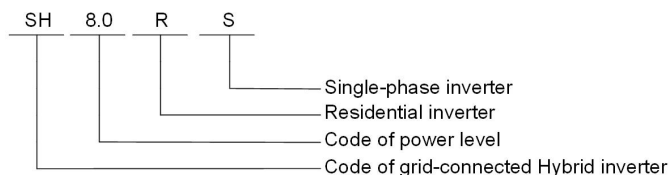

S007-G003

Appearance

The following figure shows the appearance of the inverter. The image shown here is for reference only. The actual product received may differ.

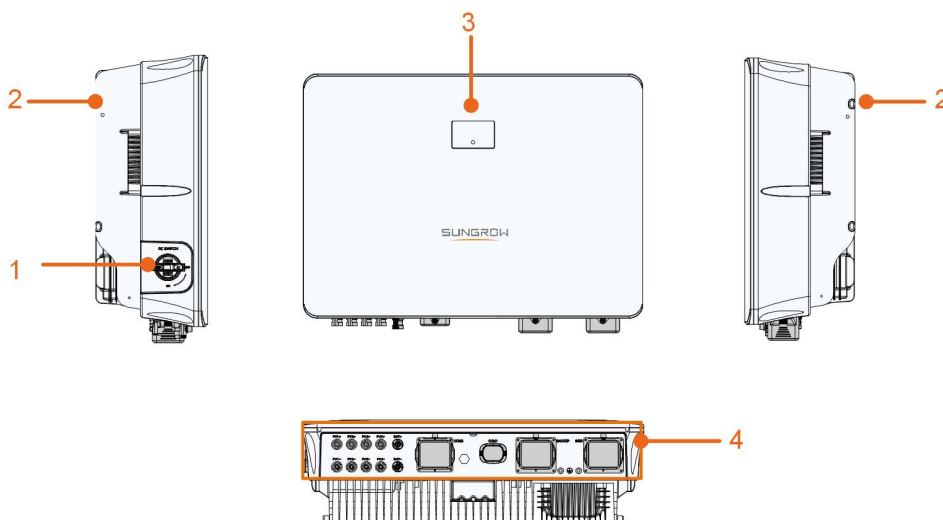


figure 2-1 Dimensions of the Inverter

| No. | Name | Description |
|-----|----------------------------|---|
| 1 | DC switch | To safely disconnect the DC circuit whenever necessary. |
| 2 | Hanger | To hang the inverter on the wall-mounting bracket. |
| 3 | LED panel | The LED screen indicates the running information and the LED indicator indicates the current working state of the inverter. |
| 4 | Electrical connection area | PV terminals, battery terminal, AC terminal, additional grounding terminal and communication terminals. |

Dimensions

The following figure shows the dimensions of the inverter.

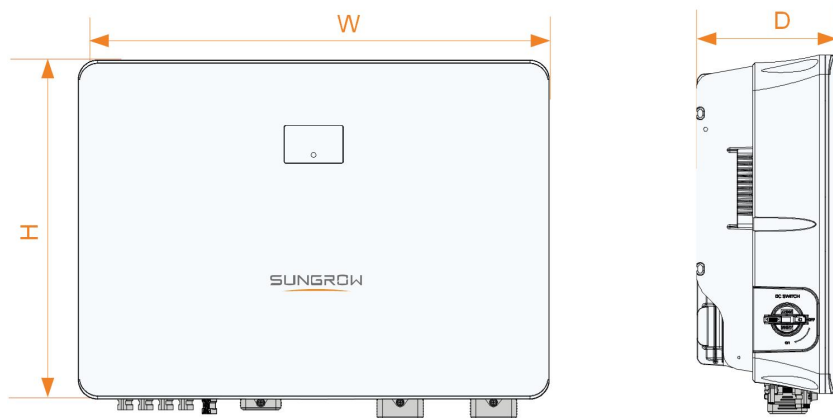









figure 2-2 Dimensions of the Inverter

| Inverter Model | W (mm) | H (mm) | D (mm) |
|------------------|--------|--------|--------|
| SH8.0RS / SH10RS | 605 | 435 | 181 |

2.3 Symbols on the Product

| Symbol | Explanation |
|--------|---|
| | DC parameters on the PV side. |
| | Parameters on the battery side. |
| | Parameters on the AC on-grid side. |
| | Parameters on the AC backup side. |
| | Regulatory compliance mark. |
| | TÜV mark of conformity. |
| | TÜVRheinland mark of conformity. |
| | UKCA mark of conformity. |
| | The inverter does not have a transformer. |
| | Do not dispose of the inverter together with household waste. |

| Symbol | Explanation |
|---|--|
|  | Disconnect the inverter from all the external power sources before maintenance! |
|  | Danger to life due to high voltages! |
|  | Read the user manual before maintenance! |
|  | Burn danger due to the hot surface that may exceed 60°C. |
|   | Danger to life due to high voltages! Do not touch live parts for 10 minutes after disconnection from the power sources. Only qualified personnel can open and maintain the inverter. |
|  | Additional grounding point. |

* The table shown here is for reference only. The actual product received may differ.

2.4 LED Panel

The LED panel with a display screen and an indicator is on the front of the inverter.

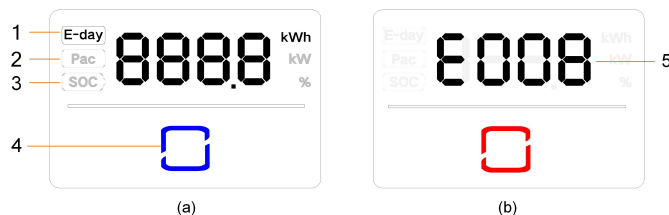


figure 2-3 LED Panel


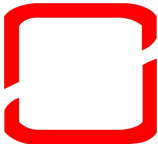

(a) Normal state

(b) Error state

| No. | Name | Description |
|-----|---------------|---|
| 1 | E-day | Today's energy yield |
| 2 | Pac | Real-time AC output power |
| 3 | SOC | Battery SOC (State of Charge) |
| 4 | LED indicator | To indicate the working state of the inverter. Touch it to switch the information in normal state or view multiple error codes in error state. |
| 5 | Error code | The error code in the figure is just an example. |

- In normal state, the E-day, Pac and SOC information will be displayed alternately. Also you can touch the LED indicator to switch the information.
- In error state, touch the LED indicator to view multiple error codes.
- If there is no operation for 5 minutes, the display screen will be off. Touch the LED indicator to activate it.

table 2-1 State description of the LED indicator

| LED color | State | Definition |
|--|----------|--|
|  Blue | On | The inverter is operating normally. |
| | Flashing | The inverter is at standby or startup state (not feeding power into the grid). |
|  Red | On | A system fault has occurred. |
|  Gray | Off | Both the AC and DC sides are powered down. |

⚠ WARNING

Voltage may still be present in AC side circuits after the indicator is off. Pay attention to the electricity safety during operating.

2.5 DC Switch

The DC-Switch is used to disconnect or connect the PV-DC circuit when AC is turned off or DC current is below 0,5A.

The inverter operates automatically when input and output requirements are met. Rotate the DC switch to the "OFF" position to stop the inverter when a fault occurs. When you need to stop the inverter normally please first turn off AC and shut down the hybrid via app.



Turn the DC switch to the "ON" position before restarting the inverter.

2.6 PV Energy Storage System (PV ESS)

NOTICE

When designing the system, ensure that the operating ranges of all devices that are connected to the inverter meet the requirements of the inverter.

2.6.1 PV Energy Storage System (PV ESS)

The following figure shows inverter application in a PV energy storage system.


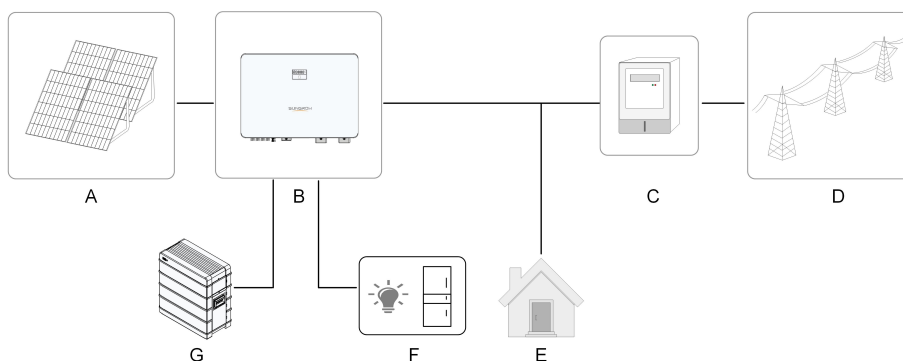


figure 2-4 PV Energy Storage System

| Item | Description | Note |
|------|-----------------------|--|
| A | PV strings | Compatible with monocrystalline silicon, polycrystalline silicon, and thin-film modules without grounding. |
| B | Inverter | SH8.0RS, SH10RS |
| C | Metering device | Meter cupboard with power distribution system. |
| D | Utility grid | TT , TN-C , TN-S, TN-C-S. |
| E | Loads | Common loads, which will be lack of power when grid is blackout. |
| F | Protected house loads | Loads, connected to inverter backup port, which need uninterrupted power supply. |
| G | Battery (optional) | A Li-ion battery. |

The following figure shows the common grid configurations.

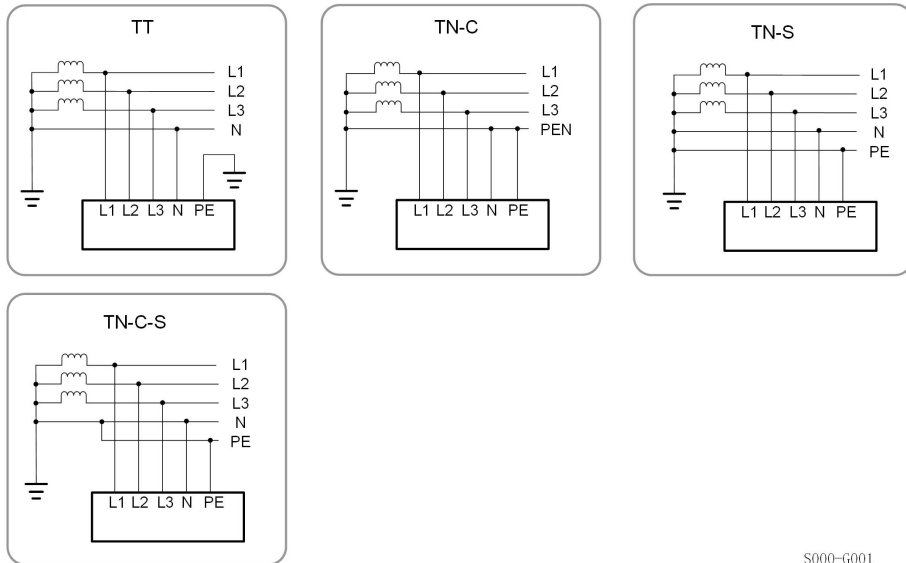

2.6.2 Declaration For Back-Up Function

⚠ DANGER

This product is not suitable for supplying power to life-sustaining medical devices since power outages may result in danger to life.

The following statement involves SUNGROW general policies about the hybrid inverters described in this document.

- 1 For hybrid inverters, the electrical installation typically includes connection of the inverter to both PV modules and batteries. If there is no available power from batteries or PV modules in backup mode, the backup power supply will be automatically terminated. SUNGROW shall hold no liability for any consequences arising from failing to observe this instruction.
- 2 Normally, the Back-Up switching time is less than 10 ms. However, some external factors or local regulations may cause the system to fail on Back-Up mode. Therefore, the users must be aware of conditions and follow the instructions as below:
 - Do not connect loads that are dependent on a stable energy supply for a reliable operation.
 - Do not connect the loads whose total capacity is greater than the maximum Back-Up capacity.
 - Due to the condition of the battery itself, battery current might be limited by some factors, including but not limited to the temperature and weather.


Declaration For Back-Up Overload Protection

The inverter will restart in case of overload protection. The time required for restarting will increase (10 min at most) if overload protection repeats. Try to reduce Back-Up load power

within maximum limitation or remove the loads which may cause very high start-up current surges.

2.7 Whole Home Backup

In this scenario, in the case of grid outage, energy stored in the PV modules and the battery will be used to supply the loads, so that home appliances can work normally during the outage.

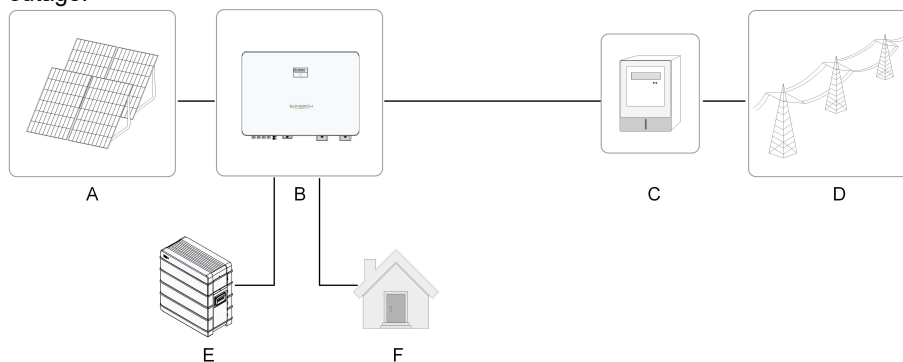

| Item | Description | Note |
|------|--------------------|--|
| A | PV strings | Compatible with monocrystalline silicon, polycrystalline silicon, and thin-film modules without grounding. |
| B | Inverter | SH8.0RS, SH10RS |
| C | Metering device | Meter cupboard with power distribution system. |
| D | Utility grid | TT, TN-C, TN-S, TN-C-S. |
| E | Battery (optional) | A Li-ion battery. |
| F | Loads | House loads, connected to inverter backup port. |

Note: 1. In this scenario, the household load should be connected to the backup port.


2. The power of household loads connected should not exceed the maximum backup output of the inverter.

2.8 Retrofitting the Existing PV System

The hybrid inverter is compatible with any single-phase PV grid-connected inverters. An existing PV system can be retrofitted to be a PV ESS with the addition of the hybrid inverter.

The power generation from the existing PV inverter will be firstly provided to the loads and then charge the battery. With the energy management function of the hybrid inverter, the self-consumption of the new system will be greatly improved.

Retrofit the Existing PV Inverter(s) to the Hybrid Inverter On-grid Port

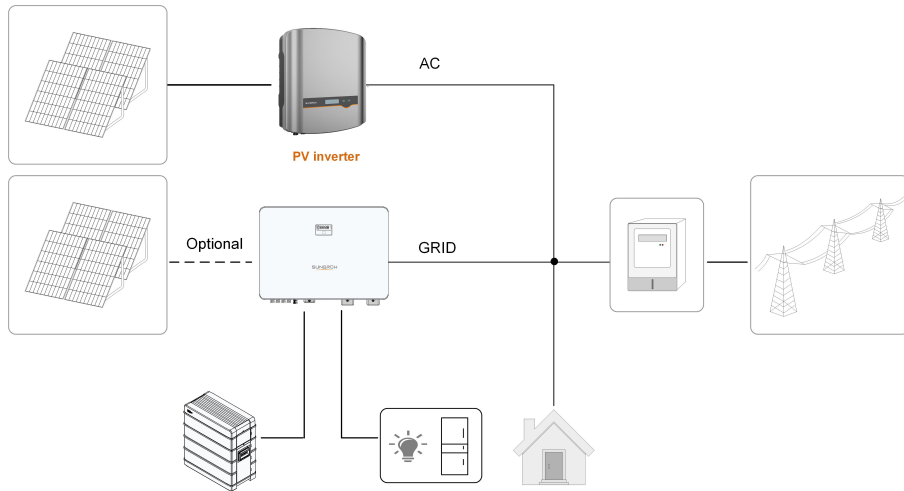


S007-G007

figure 2-5 Retrofit the Existing PV Inverter(s) to the Hybrid Inverter On-grid Port

The AC terminal of the PV inverter and the GRID terminal of the hybrid inverter are combined to the grid.

Retrofit the Existing PV Inverter(s) to the Hybrid Inverter Off-grid Port

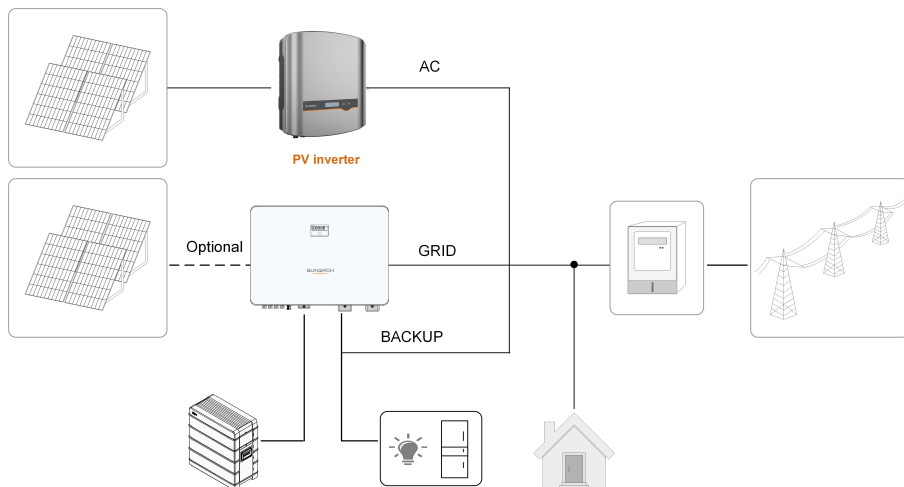

S007-G009

figure 2-6 Retrofit the Existing PV Inverter(s) to the Hybrid Inverter Off-grid Port

The off-grid port retrofits the existing PV system in order to maximize the use of PV energy by allowing the PV inverter to work even when off-grid.

The AC terminal of the PV inverter and the BACK-UP terminal of the hybrid inverter are combined to the backup loads.

The PV inverter power cannot exceed the nominal power of the hybrid inverter .



- In zero-export scenario, the hybrid inverter can only ensure no power exported to grid itself but does not ensure zero-export for the PV inverter. Please contact the PV inverter manufacturer for its zero-export solution.
- PV modules for hybrid inverter are optional.

3 Function Description

3.1 Safety Function

3.1.1 Protection

Several protective functions are integrated in the inverter, including short circuit protection, grounding insulation resistance surveillance, residual current protection, anti-islanding protection, DC overvoltage / over-current protection, etc.

3.1.2 Earth Fault Alarm

The device gives an alarm if there is a grounding fault. If the AC side is poorly grounded or not grounded, the buzzer rings, and the LED indicator turns red.

3.2 Energy Conversion and Management

The inverter converts the DC power from the PV array or the battery to the AC power, in conformity with the grid requirements. It also transmits the DC power from the PV panel to the battery.

With the bidirectional converter integrated inside, the inverter can charge or discharge the battery.

Multiple string MPP trackers are used to maximize the power from PV strings with different orientations, tilts, or module structures.

3.2.1 Power Derating

Power derating is a way to protect the inverter from overload or potential faults. In addition, the derating function can also be activated following the requirements of the utility grid. Situations requiring inverter power derating are:

- over-temperature (including ambient temperature and module temperature)
- high input voltage
- grid under-voltage
- grid over-voltage
- grid over-frequency
- power factor (when values out of the rated values)

3.2.2 DRM (“AU”/“NZ”)

The inverter provides a terminal block for connecting to a demand response enabling device (DRED). The DRED asserts demand response modes (DRMs). The inverter detects and initiates a response to all supported demand response commands within 2s.

The following table lists the DRMs supported by the inverter.

table 3-1 Demand Response Modes (DRMs)

| Mode | Explanation |
|------|--|
| DRM0 | The inverter is in the state of “Turn off”. |
| DRM1 | The import power from the grid is 0. |
| DRM2 | The import power from the grid is no more than 50 % of the rated power. |
| DRM3 | The import power from the grid is no more than 75 % of the rated power. |
| DRM4 | The import power from the grid is 100 % of the rated power, but subject to the constraints from other active DRMs. |
| DRM5 | The feed-in power to the grid is 0. |
| DRM6 | The feed-in power to the grid is no more than 50 % of the rated power. |
| DRM7 | The feed-in power to the grid is no more than 75 % of the rated power. |
| DRM8 | The feed-in power to the grid is 100 % of the rated power, but subject to the constraints from other active DRMs. |

The DRED may assert more than one DRM at a time. The following shows the priority order in response to multiple DRMs.

3.2.3 Regular Operational Voltage Range

The inverters can operate within the allowable voltage range for at least the specified observation time. The setting of the conditions depends on whether the connection is due to a normal operational start-up or an automatic reconnection after disconnection from grid.

When the voltage level is out of the operational and protection levels, the inverter will disconnect within the specified time from the grid. If a disturbance lasts longer than the required protection time, the inverter can reconnect to the grid once the voltage level goes back to normal levels after the disturbance.

3.2.4 Regular Operational Frequency Range

The inverter can operate within its frequency range for at least the specified observation time. The setting of conditions depends on whether the connection is due to a normal operational start-up or an automatic reconnection after disconnection from grid.

When the frequency level is outside the operational and protection levels, the inverter will disconnect from the grid. If a disturbance lasts longer than the required protection time, the inverter can reconnect to the grid once the frequency level goes back to normal levels after the disturbance.

3.2.5 Reactive Power Regulation

The inverter is capable of operating in reactive power regulation modes for the purpose of providing support to the grid. The reactive power regulation mode can be set via the iSolar-Cloud App.

3.3 Battery Management

Li-ion battery from SUNGROW and BYD are compatible with the PV ESS , further battery models will be made compatible in the future.

The currently supported battery brands and models are shown in the following table.

| Brand | Model | Firmware Version |
|-------|--------------------|------------------------|
| SUN- | SBR096/128/160/192 | ≥ SBRBCU-S_22011.01.05 |
| GROW | SBH100/150/200/250 | ≥SBRBCU-S_22011.04.01 |



The table is continually updated. If the battery model is not in the table, consult SUNGROW if it is supported.

To maximize the battery life, the inverter will perform battery charge, discharge, and battery maintenance based on the battery status communicated by the BMS.

NOTICE


The recommended parameters listed in this section may be updated or revised due to product development. Please refer to the manual supplied by the battery manufacturer for the latest information.

State Definition

In order to avoid overcharging or deep discharging of the battery, three battery statuses according to different voltage ranges has been defined, as shown in the following table.

table 3-2 Battery Status Definition

| Type | Port Voltage / SOC | | |
|-------------------------------------|--------------------|--------------|-------------|
| | Empty | Normal | Full |
| SUNGROW (SBR096/128/160/ 192) | SOC < 5 % | 5 %...100 % | SOC = 100 % |
| SUNGROW (SBH100/150/200/ 250) | | (by default) | |

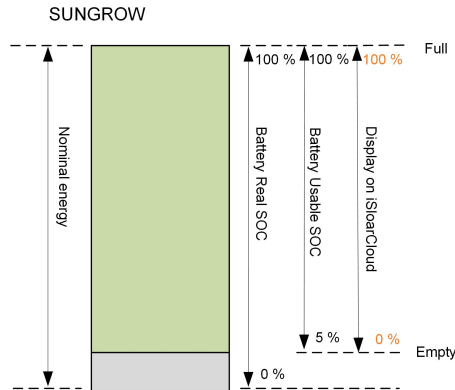

The SOC limits of Li-ion batteries can be modified via the iSolarCloud App by qualified personnel.

NOTICE

If the battery has not been used or fully charged for a long time, it is recommended to fully charge the battery manually every 15 days to ensure battery life and performance.

3.3.1 Charge Management

Backup Charge Management

The emergency charge management function is to protect the battery from the damage caused by long time excessive discharge. The inverter cannot respond to discharge command during emergency charge. The following tables describe the emergency charge conditions for different types of batteries.

table 3-3 Backup Charge Management for Li-ion Battery

| Status | Conditions |
|---------|--|
| Trigger | Either of the following conditions is met: |
| | <ul style="list-style-type: none"> SOC \leq (Min. SOC) – 3% (valid only when the Min. SOC is \geq 3 %). A battery under-voltage warning is triggered. An emergency charge command is reported to the inverter. |
| | All the following conditions are met: |
| Finish | <ul style="list-style-type: none"> SOC \geq (Min. SOC) – 1% (valid only when the Min. SOC is \geq 3 %). The battery under-voltage warning is cleared. The emergency charge command reported to the inverter is cleared. |

table 3-4 Default SOC Conditions for Li-ion Battery Backup Charge

| Type | Trigger SOC | Finishing SOC |
|-------------------------------------|----------------|----------------|
| SUNGROW | $SOC \leq 2\%$ | $SOC \geq 4\%$ |
| BYD (Battery-Box Premium HVM / HVS) | $SOC \leq 2\%$ | $SOC \geq 4\%$ |

Normal Charge Management

When the battery voltage is within the normal range, the inverter can charge the battery if the PV power is higher than the load power and can ensure that the battery is never over-charged.

The maximum allowable charge current is limited to the smaller value among the following:

- the maximum charge current of the inverter (50A);
- the maximum / recommended charge current from the battery manufacturer.

For this reason, the battery charge power may not reach the nominal power.



- If the PV voltage is higher than the upper limit value of MPP voltage (560 V), the battery cannot charge.
- The hybrid inverter will start to charge the battery when the export power value exceeds a pre-defined threshold value of 70 W.

3.3.2 Discharge Management

Discharge management can effectively protect the battery from deep discharging.

The maximum allowable discharge current is limited to the smaller value among the following:

- the maximum discharge current of the inverter (50A);
- the maximum / recommended discharge current from the battery manufacturer.

For this reason, the battery discharge power may not reach the nominal power.



- If the PV voltage is higher than the upper limit value of MPP voltage (560 V), the battery cannot discharge.
- The hybrid system will start to discharge the battery when the import power value exceeds a threshold value of 70 W.

3.4 PID Zero

The PID Zero function is applicable for both PV and DC-coupled PV plus storage systems. It can suppress PID during the day and intelligently repair PV panels damage caused by PID at night, by relieving or alleviating PV array voltage bias to PV-.

The traditional inverter needs boost circuit to extend the efficient generation time during the day, and break the symmetry of the PV array to the ground voltage, making it closer to the negative electrode. In addition, if the traditional inverter runs at night, the PV array to ground voltage is always limited to the lowest voltage point of the system, which increases the risk of PID.

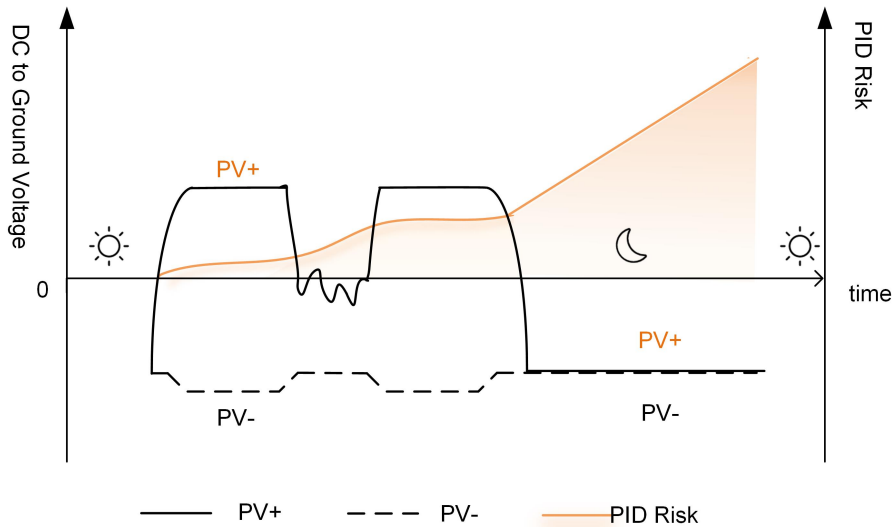


figure 3-1 PID Risk of Traditional Inverters

The following figure is the PID risk of the inverter equipped with PID Zero, it prevents the PV array voltage from approaching PV-, reduces the risk of PID during daily operation and repairs PV panels caused by PID at night. Details can be found in the *PID Zero White Paper*, which can be obtained on www.sungrowpower.com or from your distributor.

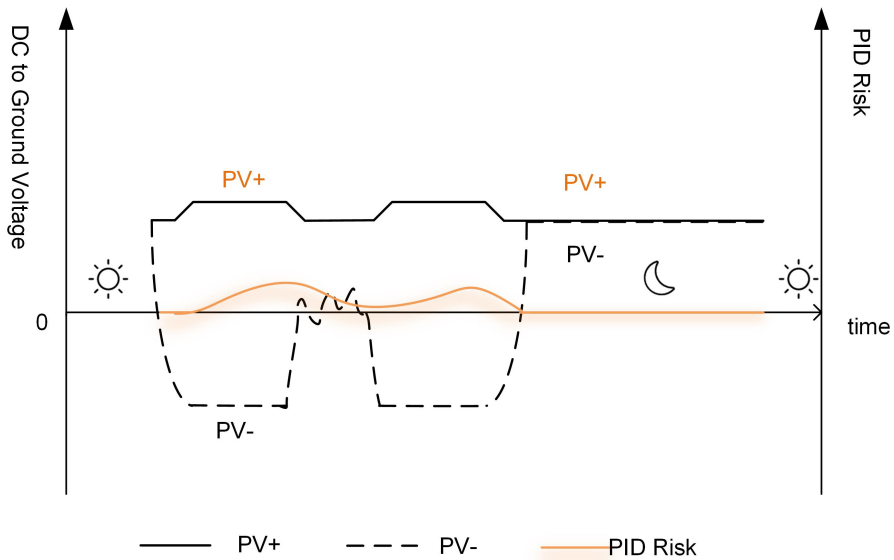


figure 3-2 PID Risk of Inverters Equipped with PID Zero

⚠ DANGER

Keep the DC switch "ON" in the PID Zero process. During the process, there is voltage hazard between inverter / PV panels live conductors and ground. Do not touch any of them.



- When the PID Zero function is enabled, there will be a power consumption of less than 30 W in the PID Zero process.
- PID Zero can be applied to P-type PV panels, as well as N-type PV panels of which the voltage between PV- and ground needs to be raised. Please disable this function for N-type PV panels of which the voltage between PV- and ground needs to be lowered. Contact the N-type PV panel supplier whether the voltage between PV- and ground needs to be raised for PID recovery.

3.5 Communication and Configuration

The inverter possesses various ports for device and system monitoring, including RS485, Ethernet, WLAN, and CAN; various parameters can be configured for optimal operation. The inverter information is accessible through the iSolarCloud App.

3.6 Import Power Limit Function

Import power means the total power purchased from grid, which includes power to charge the battery from grid via inverter, power consumed by local loads and loads connected to

inverter backup port from grid. Following local regulations, calculate the maximum system tolerable power based on the wire and circuit breaker that required by the selected model, and the value can be set as the **Import Power Limit**. **Import Power Limit** can be set on the iSolarCloud App.

4 Unpacking and Storage

4.1 Unpacking and Inspection

The product is thoroughly tested and strictly inspected before delivery. Nonetheless, damage may still occur during shipping. For this reason, please conduct a thorough inspection after receiving the product.

- Check the packing case for any visible damage.
- Check the scope of delivery for completeness according to the packing list.
- Check the inner contents for damage after unpacking.

Contact SUNGROW or the transport company in case of any damage or incompleteness, and provide photos to facilitate services.

Do not dispose of the original packing case. It is recommended to store the device in the original packing case when the product is decommissioned.

NOTICE

After receiving the product, check whether the appearance and structural parts of the device are damaged, and check whether the packing list is consistent with the actual ordered product. If there are problems with the above inspection items, do not install the device and contact your distributor first. If the problem persists, contact SUNGROW in time.

If any tool is used for unpacking, be careful not to damage the product.

4.2 Scope of Delivery

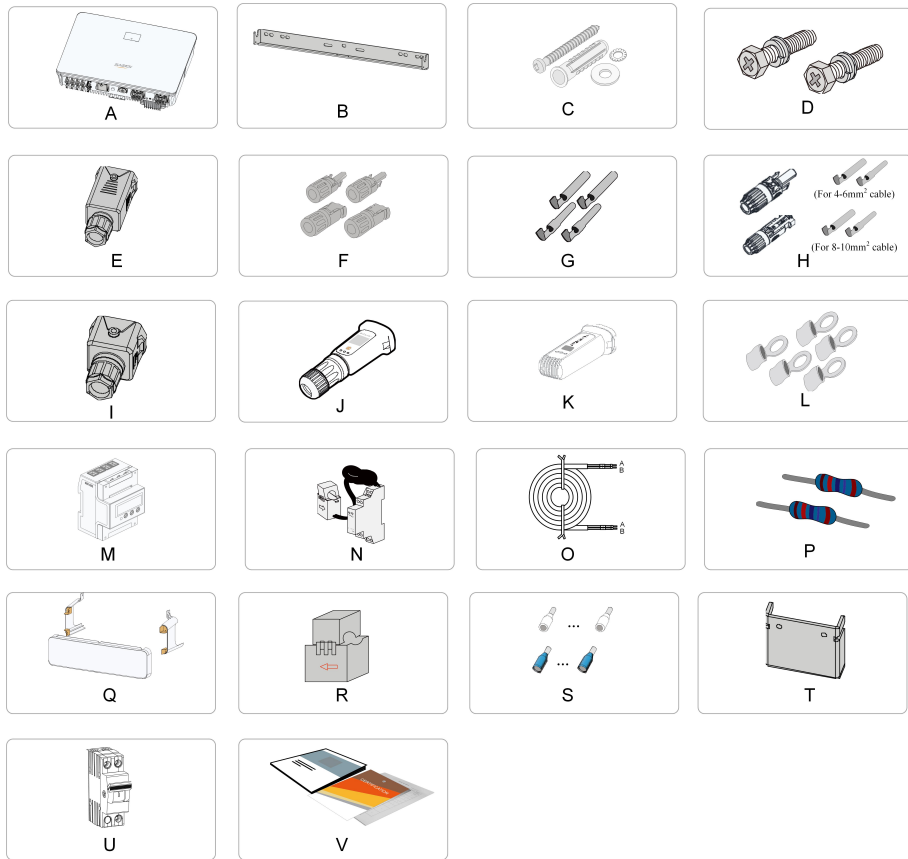


figure 4-1 Scope of delivery

| Item | Name | Quantity |
|------|-------------------------------------|----------|
| A | Inverter | 1 |
| B | Wall-mounting bracket * | 1 |
| C | Expansion plug set | 3 |
| D | M4×16 screws set | 4 |
| E | Backup connector set&Grid connector | 2 |
| F | PV connectors | 4 |
| G | Crimp contact | 4 |
| H | Battery connectors * | 1 |
| I | COM connector set | 1 |
| J | WiNet-S2 module ** | 1 |
| K | EyeM4 ** | 1 |
| L | OT terminal * | 10 |
| M | Smart Energy Meter** | 1 |
| N | Single-phase Meter** | 1 |
| O | Meter RS485 cable | 1 |

| Item | Name | Quantity |
|------|---------------------------------|----------|
| P | 120Ω resistor | 2 |
| Q | Protective Cover | 1 |
| R | Current Transformer(CT) | 2 |
| S | Cord and terminals (for COM2) * | 20 |
| T | Bottom Bracket | 1 |
| U | Manual changeover switch(63A) | 1 |
| V | Documents | 1 |

* The images shown here are for reference. The actual product and quantity are based on delivery.

** Types of equipment to be applied vary in different regions. Please consult local customer service for equipment type selection.

4.3 Inverter Storage

Proper storage is required if the inverter is not installed immediately.

- Store the inverter in the original packing case with the desiccant inside.
- The storage temperature must be always between -30°C and +70°C, and the storage relative humidity must be always between 0 and 95 %, non-condensing.
- In case of stacking storage, the number of stacking layers should never exceed the limit marked on the outer side of the packing case.
- The packing case should be upright.
- If the inverter needs to be transported again, pack it strictly before loading and transporting it.
- Do not store the inverter in places susceptible to direct sunlight, rain, and strong electric field.
- Do not place the inverter in places with items that may affect or damage the inverter.
- Store the inverter in a clean and dry place to prevent dust and water vapor from eroding.
- Do not store the inverter in places with corrosive substances or susceptible to rodents and insects.
- Carry out periodic inspections. Inspection shall be conducted at least once every six months. If any insect or rodent bites are found, replace the packaging materials in time.
- If the inverter has been stored for more than a year, inspection and testing by professionals are required before it can be put into operation.

NOTICE

Please store the inverter according to the storage requirements. Product damage caused by failure to meet the storage requirements is not covered by the warranty.

5 Mechanical Mounting

WARNING

Respect all local standards and requirements during mechanical installation.

5.1 Safety During Mounting

DANGER

Make sure there is no electrical connection before installation.
Before drilling, avoid the water and electricity wiring in the wall.

WARNING

Poor installation environment will affect system performance!

- Install the inverter in a well-ventilated place.
- Ensure that the heat dissipation system or vent is not blocked.
- Do not install the inverter in an environment with flammable and explosive objects or smoke.

CAUTION

Improper handling may cause personal injury!

- When moving the inverter, be aware of its weight and keep the balance to prevent it from tilting or falling.
- Wear proper protective equipment before performing operations on the inverter.
- The bottom terminals and interfaces of the inverter cannot directly contact the ground or other supports. The inverter cannot be directly placed on the ground.

NOTICE

When installing devices, ensure that no device in the system causes it hard for the DC switch and the AC circuit breaker to act or hinders maintenance personnel from operating.


If drilling is required during installation:

- Wear goggles and protective gloves when drilling holes.
- Make sure to avoid the water and electricity wiring in the wall before drilling.
- Protect the product from shavings and dust.

5.2 Location Requirements

To a large extent, a proper installation location ensures safe operation, service life, and performance of the inverter.


- The inverter with protection rating IP65 can be installed both indoors and outdoors.
- The inverter should be installed at a height that allows easy viewing of the LED indicator panel, as well as easy electrical connection, operation and maintenance.

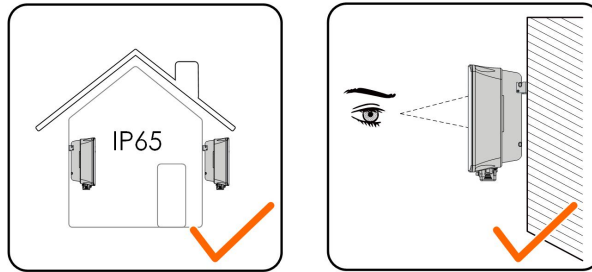

S006-I001

5.2.1 Environment Requirements

- The installation environment must be free of inflammable or explosive materials.
- The location should not be accessible to children.
- The ambient temperature and relative humidity must meet the following requirements.

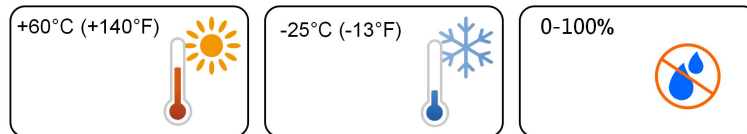

- Install the inverter in a sheltered area to avoid direct sunlight and bad weather (e.g. snow, rain, lightning, etc.). The inverter will derate in high temperature environments for protection. If the inverter is installed in direct sunlight, it may cause power reduction as the temperature rises.
- The inverter should be well ventilated. Ensure air circulation.
- It is strictly prohibited to install the inverter in environments with vibration and strong electromagnetic field. Strong-magnetic-field environments refer to places where magnetic field strength measures over 30A/m.

5.2.2 Carrier Requirements

The mounting structure where the inverter is installed must comply with local/national standards and guidelines. Ensure that the installation surface is solid enough to bear four times the weight of the inverter and is suitable for the dimensions of the inverter (e.g. cement walls, plasterboard walls, etc.).


The structure should meet the following requirements:



S006-I003

5.2.3 Angle Requirements


Install the inverter vertically. Never install the inverter horizontally, or at forward/backward tilted, side tilted, or upside down.

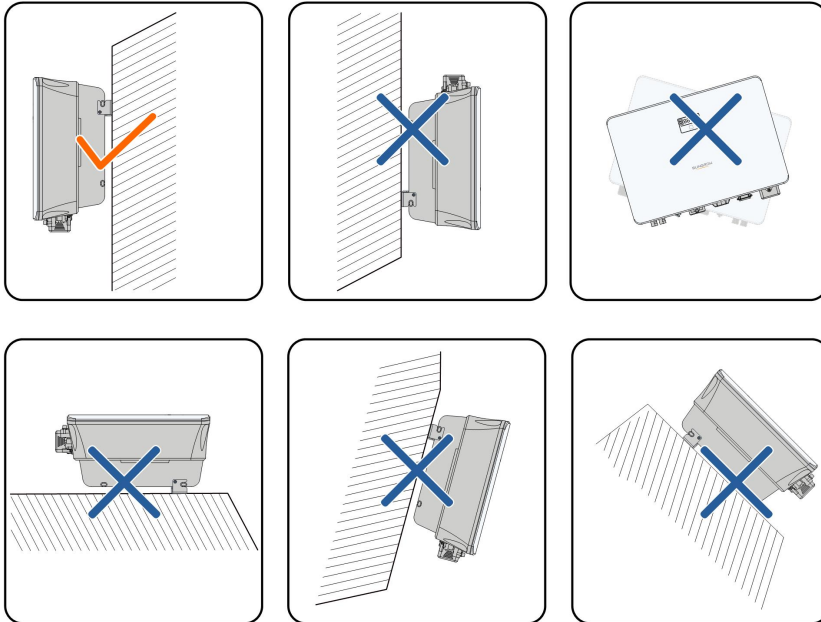


S007-I004

5.2.4 Clearance Requirements

Reserve enough clearance around the inverter to ensure sufficient space for heat dissipation.

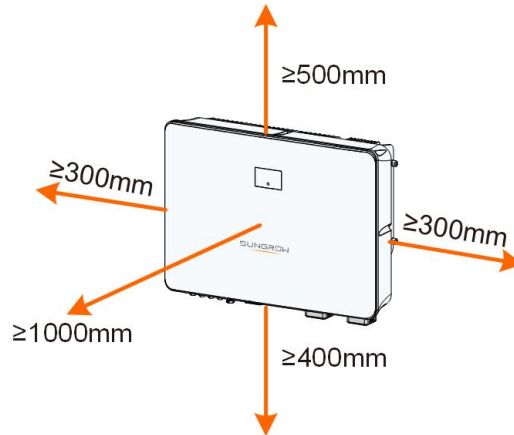

In case of multiple inverters, reserve specific clearance between the inverters.

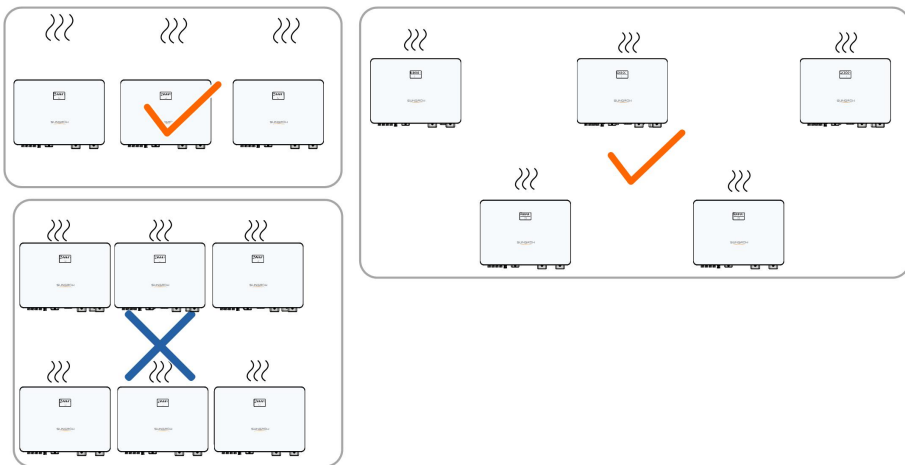


Install the inverter at an appropriate height for ease of viewing the screen and LED indicator and operating switch(es).


5.3 Installation Tools

Installation tools include but are not limited to the following recommended ones. If necessary, use other auxiliary tools on site.


table 5-1 Tool specification

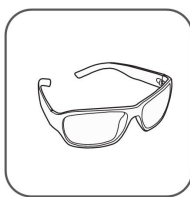

Goggles

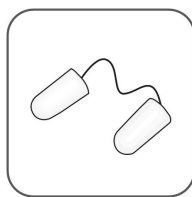

Earplugs

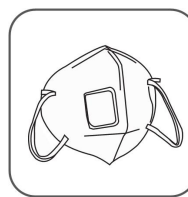

Dust mask




Protective gloves




Insulated shoes



Utility knife

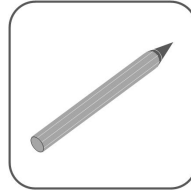


Marker

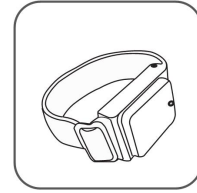


Wrist strap




Wire cutter

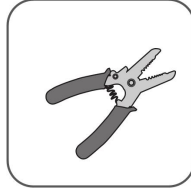

Wire stripper

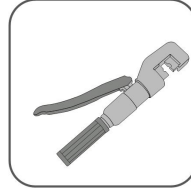

Hydraulic plier

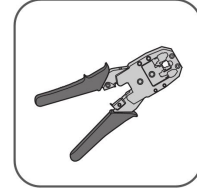

RJ45 crimping tool




MC4 terminal crimping tool (4 mm²–6 mm²)




Battery terminal crimping tool (4 mm²–6 mm²)




Open-end wrench kit

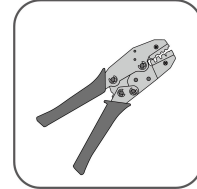


Tube terminal crimping tool (0.5 mm²–1.0 mm²)

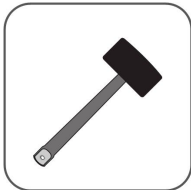


Rubber mallet

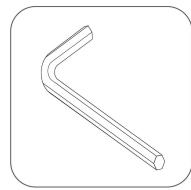

Allen wrench (T27)

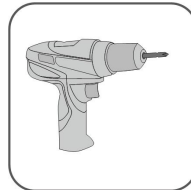

Electric screwdriver (M4, M5, M6)

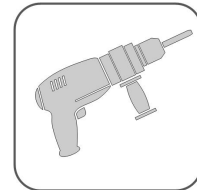


Hammer drill (φ10)




Phillips screwdriver (M4)



Vacuum cleaner

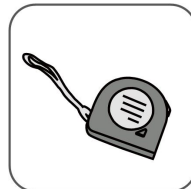


Measuring tape

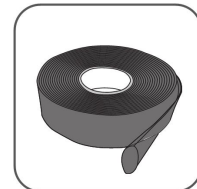


Heat shrink tubing



Heat gun

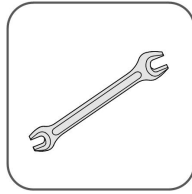

Wrench (33 mm, 35 mm)

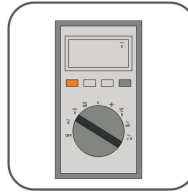Multimeter (≥ 600 Vdc)

5.4 Moving the Inverter

Before installation, remove the inverter from the packing case and move it to the installation site. Follow the instructions below as you move the inverter:

- Always be aware of the weight of the inverter.
- Lift the inverter using the handles positioned on both sides of the inverter.
- Move the inverter by one or two people or by using a proper transport tool.
- Do not release the equipment unless it has been firmly secured.

⚠ CAUTION


Improper handling may cause personal injury!

- **Arrange an appropriate number of personnel to carry the inverter according to its weight, and installation personnel should wear protective equipment such as anti-impact shoes and gloves.**
- **Attention must be paid to the center of gravity of the inverter to avoid tilting during handling.**
- **Placing the inverter directly on a hard ground may cause damage to its metal enclosure. Protective materials such as sponge pad or foam cushion should be placed underneath the inverter.**
- **Move the inverter by holding the handles on it. Do not move the inverter by holding the terminals.**

5.5 Installing the Inverter

Inverter is installed on the wall by means of wall-mounting bracket and the expansion plug sets.

The expansion plug set shown below is recommended for the installation.

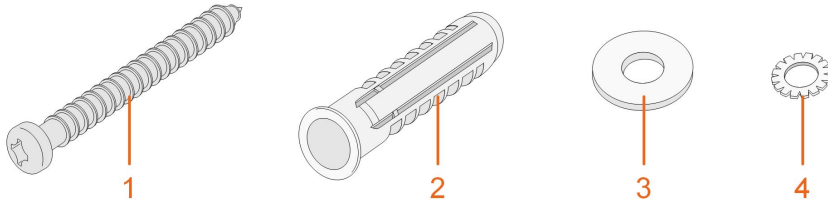


(1) Self-tapping screw M6 (2) Expansion tube (3) Fender washer (4) Spring washer

step 1 Place the wall-mounting bracket to a proper position on the wall. Mark the positions and drill the holes.

NOTICE

Observe the level on the bracket and adjust until the bubble is in the middle position.


The depth of the holes should be about 70 mm.

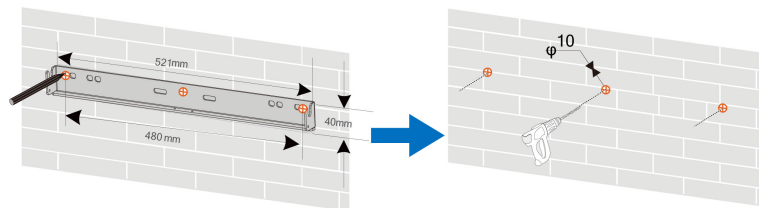

S006-1008


* The image shown here is for reference only. The actual product received may differ.

step 2 Place the expansion tubes into the holes. Then secure the wall-mounting bracket to the wall firmly with the expansion bolt sets.

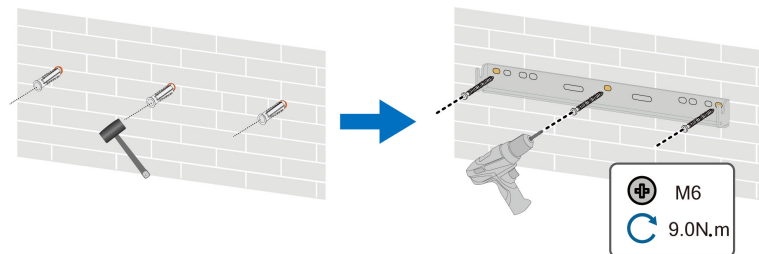


S006-1009

step 3 Install the bottom bracket to avoid the inverter tilting forward.

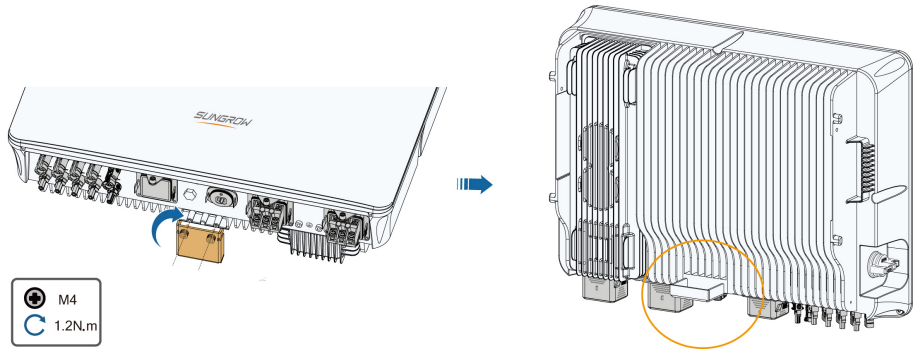

step 4 Lift the inverter and slide it down along the wall-mounting bracket to make sure they match perfectly. Use two screw sets to lock both left and right sides.

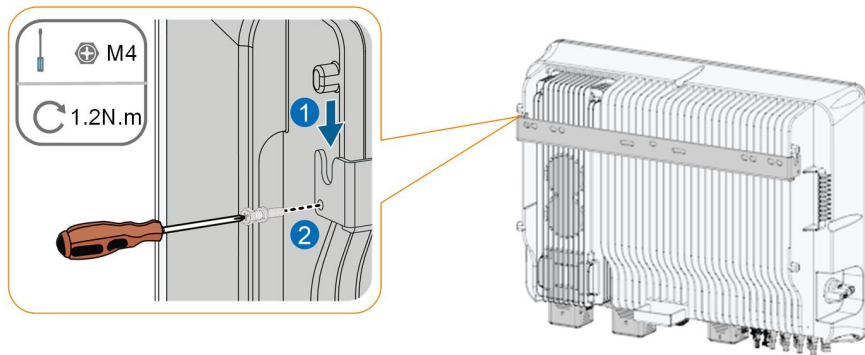

-- End

6 Electrical Connection

6.1 Safety Instructions

DANGER

The PV string will generate lethal high voltage when exposed to sunlight.

- Operators must wear proper personal protective equipment during electrical connections.
- Must ensure that cables are voltage-free with a measuring instrument before touching DC cables.
- Respect all safety instructions listed in relevant documents about PV strings.

DANGER

- Before electrical connections, please make sure that the inverter switch and all switches connected to the inverter are set to "OFF", otherwise electric shock may occur!
- Ensure that the inverter is undamaged and all cables are voltage free before performing electrical work.
- Do not close the AC circuit breaker until the electrical connection is completed.

WARNING

Do not damage the ground conductor. Do not operate the product in the absence of a properly installed ground conductor. Otherwise, it may cause personal injury or product damage.

Please use measuring devices with an appropriate range. Overvoltage can damage the measuring device and cause personal injury.

Damage to the product caused by incorrect wiring is not covered by the warranty.

- Electrical connection must be performed by professionals.
- Operators must wear proper personal protective equipment during electrical connections.
- All cables used in the PV generation system must be firmly attached, properly insulated, and adequately dimensioned. Cables used shall comply with the requirements of local laws and regulations.
- The factors that affect cable selection include rated current, cable type, routing mode, ambient temperature, and maximum expected line loss.

NOTICE

All electrical connections must comply with local and national/regional electrical standards.

- **Cables used by the user shall comply with the requirements of local laws and regulations.**
- **Only with the permission of the national/regional grid department, the inverter can be connected to the grid.**

NOTICE

- **Install the external protective grounding cable first when performing electrical connection and remove the external protective grounding cable last when removing the inverter.**
- **Keep the AC output cable and the DC input cable close to each other during electrical connection.**
- **Comply with the safety instructions related to PV strings and the regulations related to the utility grid.**

NOTICE


- **After being crimped, the OT terminal must wrap the wires completely, and the wires must contact the OT terminal closely.**
- **When using a heat gun, protect the device from being scorched.**
- **Keep the PV+ cable and PV- cable close to each other when connecting DC input cables.**
- **Before connecting a power cable (such as the AC cable, the DC cable, etc.), confirm that the label and identifier on the power cable are correct.**
- **When laying out communication cables, separate them from power cables and keep them away from strong interference sources to prevent communication interruption.**
- **All vacant terminals must be covered with waterproof covers to prevent affecting the protection performance.**
- **Ensure that AC output cables are firmly connected. Failing to do so may cause inverter malfunction or damage to its AC connectors.**
- **When the wiring is completed, seal the gap at the cable inlet and outlet holes with fireproof/waterproof materials such as fireproof mud to prevent foreign matter or moisture from entering and affecting the long-term normal operation of the inverter.**



The cable colors in figures in this manual are for reference only. Please select cables according to local cable standards.

6.2 Terminal Description

All electrical terminals are located at the bottom of the inverter.

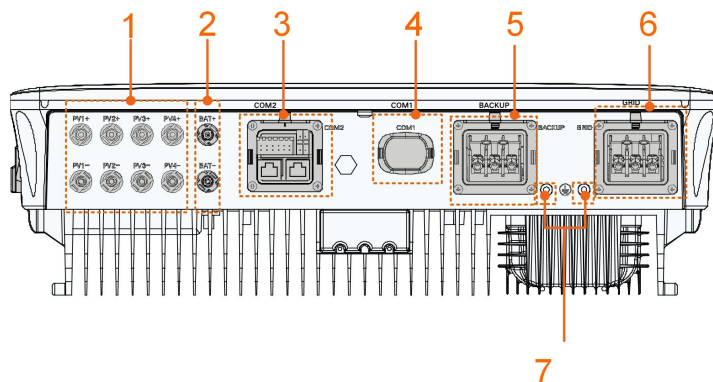


S007-E001

figure 6-1 Terminals

* The image shown here is for reference only. The actual product received may differ.

table 6-1 Terminal Description

| No. | Name | Description | Decisive Voltage Classification |
|-----|---|--|---------------------------------|
| 1 | PV1+, PV1-, PV2+, PV2-, PV3+, PV3-, PV4+, PV4- | MC4 terminals for PV input. The terminal number depends on inverter model. | DVC-C |
| 2 | BAT+, BAT- | Connectors for the battery power cables | DVC-C |
| 3 | COM2 | Communication connection for RSD, BMS, RS485, DRM/DI, DO and smart energy meter. | DVC-A |
| 4 | COM1 | Communication accessory port to be connected to WiNet-S2/EyeM4 communication module. | DVC-A |
| 5 | BACKUP | AC terminal for Backup loads | DVC-C |
| 6 | GRID | AC terminal to connect to the grid. | DVC-C |
| 7 |  | Additional grounding terminal. | Not applicable |

The pin definition of COM2 terminal is shown in the following label.

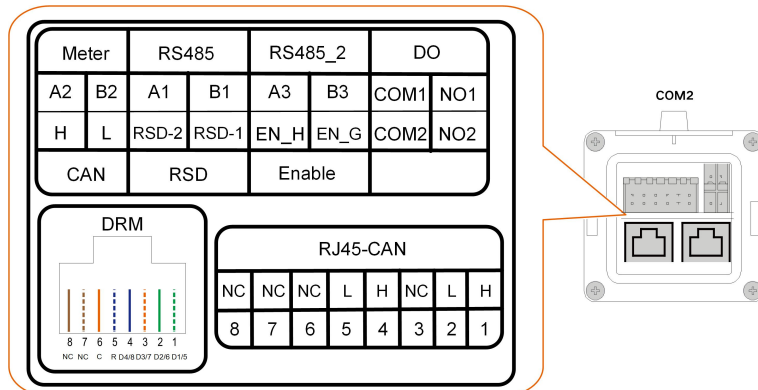



figure 6-2 Label of COM2 Terminal

table 6-2 Label Description of COM2 Terminal

| Label | Description |
|----------|--|
| Meter | A2, B2 For Smart Energy Meter |
| CAN | H, L For Li-ion battery communication via CAN protocol. |
| RS485 | A1, B1 For inverter daisy chain (Reserved) For Li-ion battery communication via RS485 protocol. |
| RSD | RSD-1, RSD-2 Reserved (Detail availability contact SUNGROW) |
| RS485_2 | A3, B3 For EV Charger communication via RS485 protocol. |
| Enable | EN_H, EN_ G Enable the battery with a voltage of 12V. |
| DO | COM1, COM2, NO1, NO2 Reserved (Detail availability contact SUNGROW) |
| DRM | D1/5, D2/6, D3/7, D4/8, R, C For external Demand Response Enabling Device ("AU"/ "NZ") For Ripple Control Receiver |
| RJ45-CAN | H, L For Li-ion battery communication via CAN protocol. |

6.3 Electrical Connection Overview

The electrical connection should be realized as follows:

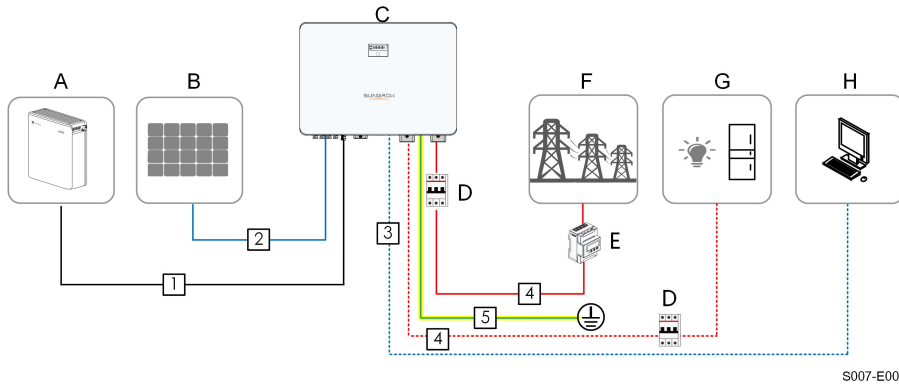

S007-E005

- (A) Battery (B) PV string (C) Inverter
 (D) AC circuit breaker (E) Smart energy meter (F) Grid
 (G) Backup loads (H) Monitoring device

table 6-3 Cable Requirements


| No. | Cable | Type | Cable Diameter | Cross-section |
|-----|----------------------------|---|---|--|
| 1 | Battery power cable | Outdoor multi-core copper wire cable | 6.4 – 8.5 mm | SBR064–256: 6 mm ² |
| | | Complying with 1,000V standard | | SBH100-250: 10 mm ² (7AWG) |
| 2 | PV cable | Outdoor multi-core copper wire cable complying with 600 V and 16 A standard | 6 – 9 mm | 4 – 6 mm ² (12 - 10AWG) |
| 3 | Communication cable | Shielded twisted pair | 4.8 – 6 mm | 0.5 – 1.0 mm ² (20 - 17 AWG) |
| | | CAT 5E outdoor shielded network cable | 4.8 – 6 mm | 0.08 – 0.2 mm ² (28 - 24AWG) |
| 4 | Backup cable AC cable | Outdoor 3-core copper wire cable | 21 – 25.8 mm | 14 – 16 mm ² (6 - 5AWG) |
| 5 | Additional Grounding cable | Outdoor single-core copper wire cable | The same as that of the PE wire in the AC cable | |

If local standard have other requirements for cables, set the cable specification according to the local standard.

6.4 Backup Wiring Diagram

For AU/NZ/SA

For Australia, New Zealand and South Africa, the neutral cable of GRID side and BACK-UP side must be connected together. Otherwise BACK-UP function will not work.

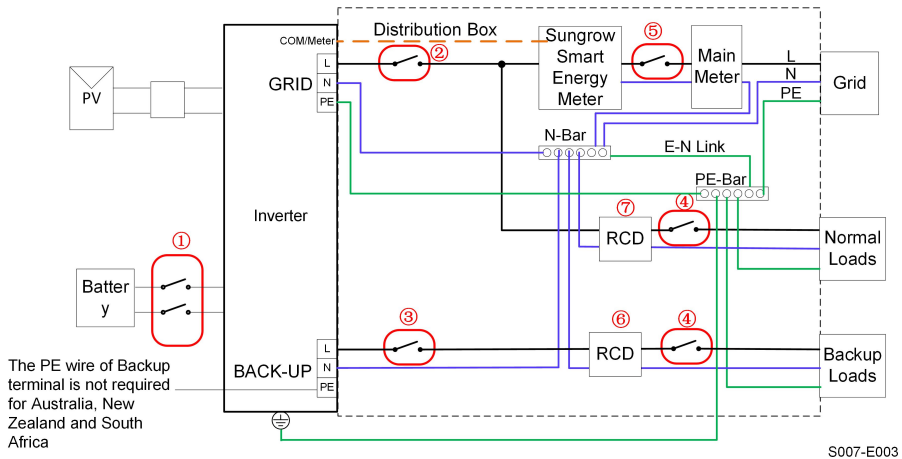

| NO. | SH8.0/10RS |
|-----|--|
| ① | 63A/600V DC breaker * |
| ② | < 63A/230V/400V AC breaker |
| ③ | 63A/230V/400V AC breaker |
| ④ | Depends on loads |
| ⑤ | Depends on household loads and inverter capacity |
| ⑥ ⑦ | 30mA RCD (Comply with local regulation) |

Note 1: * If the battery is integrated with a readily accessible internal DC breaker, no additional DC breaker is required.

Note 2: The recommended values in the table are for reference only. The actual values must comply with local standard and actual conditions.


Note 3: The rated current of breaker ② is suggested to lower than that of breaker ⑤.

Note 4: If the rated current of on-site power cables are lower than those recommended above, the breakers specification should be considered to match the power cables in first priority.

Note 5: The AC port takes power from the grid and is set according to the grid circuit breaker.

For other countries

For other countries, the following diagram is an example for grid systems without special requirement on wiring connection.

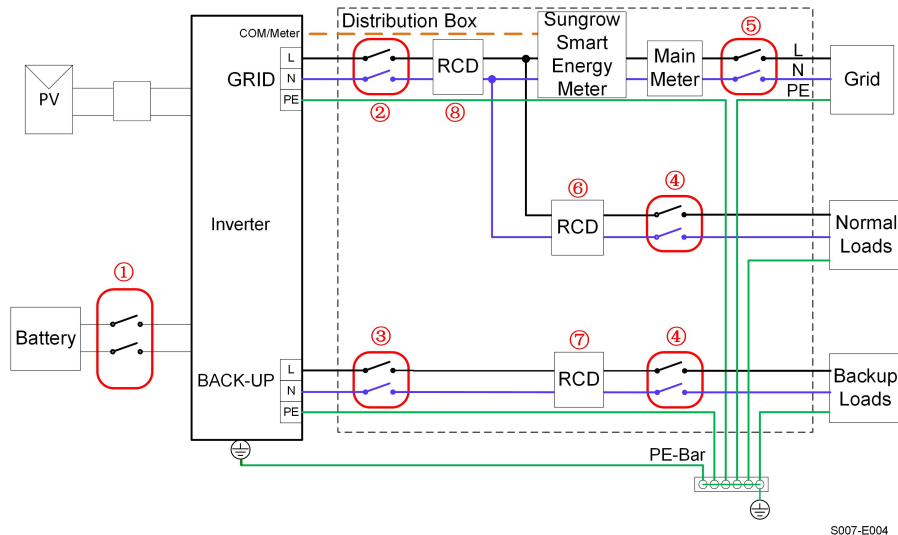

S007-E004

| NO. | SH8.0/10RS |
|-----|---|
| ① | 63A/600V DC breaker * |
| ② | < 63A/230V/400V AC breaker |
| ③ | 63A/230V/400V AC breaker |
| ④ | Depends on loads |
| ⑤ | Depends on household loads and inverter capacity (Optional) |
| ⑥ ⑦ | 30mA RCD (Recommended) |
| ⑧ | 300mA RCD (Recommended) |

Note 1: * If the battery is integrated with a readily accessible internal DC breaker, no additional DC breaker is required.

Note 2: The recommended values in the table are for reference only. The actual values must comply with local standard and actual conditions.


Note 3: The rated current of breaker ② is suggested to lower than that of breaker ⑤.

Note 4: If the rated current of on-site power cables are lower than those recommended above, the breakers specification should be considered to match the power cables in first priority.

Note 5: The AC port takes power from the grid and is set according to the grid circuit breaker.

For TT system

In the TT system, the following diagram is an example for grid systems without special requirement on wiring connection.

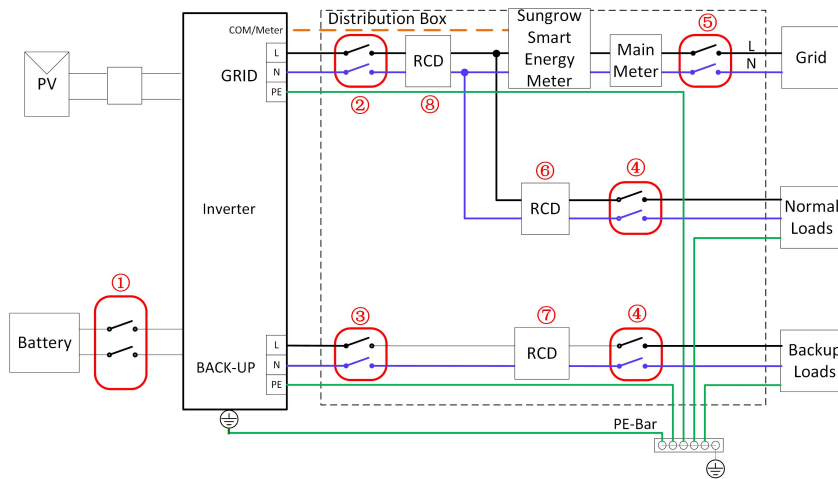

S007-E005

| NO. | SH8.0/10RS |
|-----|---|
| ① | 63A/600V DC breaker * |
| ② | < 63A/230V/400V AC breaker |
| ③ | 63A/230V/400V AC breaker |
| ④ | Depends on loads |
| ⑤ | Depends on household loads and inverter capacity (Optional) |
| ⑥ ⑦ | 30mA RCD (Recommended) |
| ⑧ | 300mA RCD (Recommended) |

Note 1: * If the battery is integrated with a readily accessible internal DC breaker, no additional DC breaker is required.

Note 2: The recommended values in the table are for reference only. The actual values must comply with local standard and actual conditions.


Note 3: The rated current of breaker ② is suggested to lower than that of breaker ③.

Note 4: If the rated current of on-site power cables are lower than those recommended above, the breakers specification should be considered to match the power cables in first priority.

Note 5: The AC port takes power from the grid and is set according to the grid circuit breaker.

Whole Home Backup

For AU/NZ/SA:

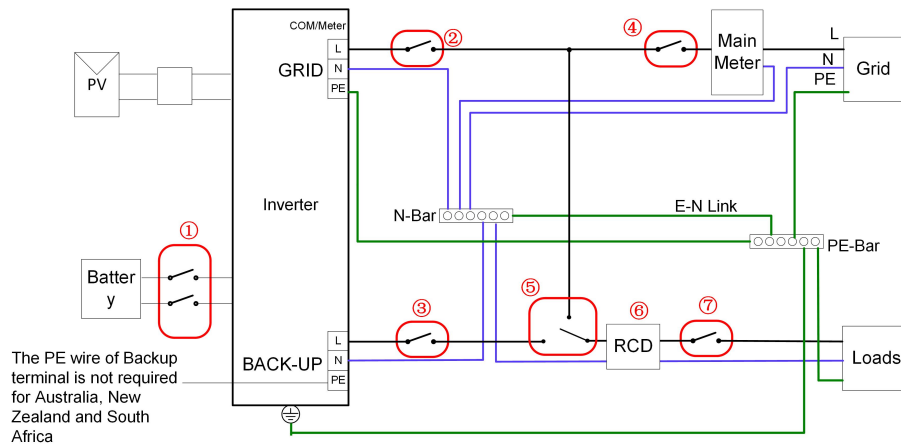

| NO. | SH8.0/10RS |
|-----|--|
| ① | 63A/600V DC breaker * |
| ② | < 63A/230V/400V AC breaker |
| ③ | 63A/230V/400V AC breaker |
| ④ | Depends on household loads and inverter capacity |
| ⑤ | 63A/230V manual changeover switch |
| ⑥ | 30mA RCD (Recommended) |
| ⑦ | Depends on loads |

Note 1: * If the battery is integrated with a readily accessible internal DC breaker, no additional DC breaker is required.

Note 2: The recommended values in the table are for reference only. The actual values must comply with local standard and actual conditions.

6.5 External Protective Grounding Connection

⚠ DANGER

Electric shock!

- **Make sure that the grounding cable is connected reliably. Otherwise, it may cause electric shock.**

⚠ WARNING

- Since the inverter is not equipped with a transformer, neither the negative electrode nor the positive electrode of the PV string can be grounded. Otherwise, the inverter will not operate normally.
- Connect the grounding terminal to the external protective grounding point before AC cable connection, PV string connection, and communication cable connection.
- The external protective grounding point provides a reliable ground connection. Do not use an improper grounding conductor for grounding, Otherwise, it may cause product damage or personal injury.
- Depending on Local Rules, please also ground the PV panel subconstruction to the same common grounding point (PE Bar) in addition to local lightning protection rules.

⚠ WARNING

The external protective grounding terminal must meet at least one of the following requirements.

- The cross-sectional area of the grounding cable is not less than 10 mm² for copper wire or 16 mm² for aluminum wire. It is recommended that both the external protective grounding terminal and the AC side grounding terminal be reliably grounded.
- If the cross-sectional area of the grounding cable is less than 10 mm² for copper wire or 16 mm² for aluminum wire, ensure that both the external protective grounding terminal and the AC side grounding terminal are reliably grounded.

The grounding connection can be made by other means if they are in accordance with the local standards and regulations, and SUNGROW shall not be held liable for the possible consequences.

6.5.1 External Protective Grounding Requirements

All non-current carrying metal parts and device enclosures in the PV power system should be grounded, for example, brackets of PV modules and inverter enclosure.


When there is only one inverter in the PV system, connect the external protective grounding cable to a nearby grounding point.

When there are multiple inverters in the PV system, connect the external protective grounding terminals of all inverters and the grounding points of the PV module brackets to ensure equipotential connections to ground cables (according to the onsite conditions).

6.5.2 Connection Procedure

External grounding cable and OT/DT terminal are prepared by customers.


step 1 Prepare the cable and OT/DT terminal.

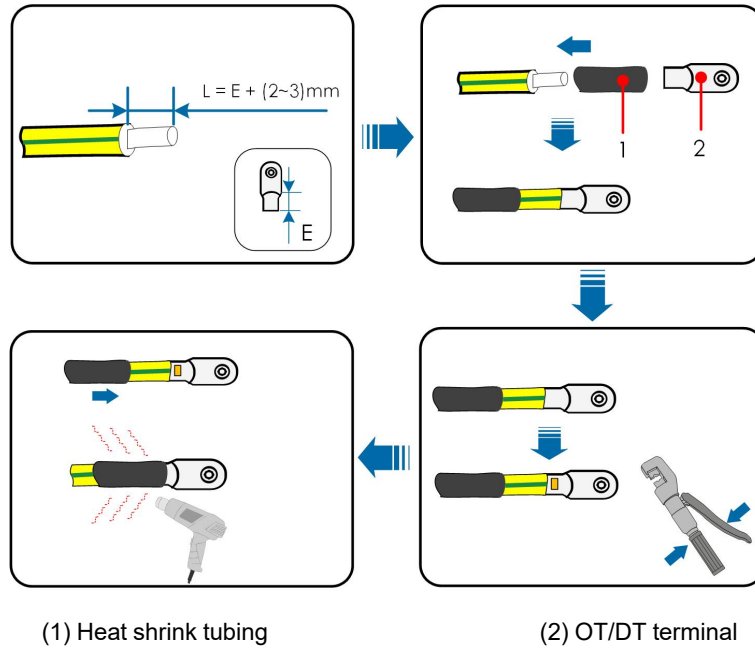

After being crimped, the OT terminal must wrap the wires completely, and the wires must contact the OT terminal closely.

When using a heat gun, protect the device from being scorched.

step 2 Remove the screw on the grounding terminal and fasten the cable with a screwdriver.

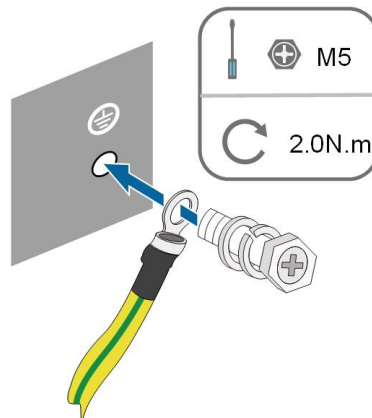

S000-E080

step 3 Apply paint to the grounding terminal to ensure corrosion resistance.

-- End

6.6 AC Cable Connection

6.6.1 AC Side Requirements



Only with the permission of the local grid department, the inverter can be connected to the grid.

Before connecting the inverter to the grid, ensure the grid voltage and frequency comply with requirements, for which, refer to "**Technical Data**". Otherwise, contact the electric power company for help.

AC Circuit Breaker

An independent two-pole circuit breaker must be installed on the output side of the inverter to ensure safe disconnection from the grid. The recommended specifications are as follows.

| Inverter Model | Recommended Specification (back-up) | Recommended Specification (on-grid) |
|----------------|-------------------------------------|-------------------------------------|
| SH8.0/10RS | 63 A | < 63 A |

NOTICE

Testing to AS/NNZS 4777.2:2020 Section for multiple phase combinations has not been conducted.

⚠ WARNING

AC circuit breakers should be installed on the output side of the inverter and the grid side to ensure safe disconnection from the grid.

- **Determine whether an AC circuit breaker with greater overcurrent capacity is required based on actual conditions.**
- **Do not connect any local load between the inverter and the AC circuit breaker.**
- **Multiple inverters cannot share one AC circuit breaker.**

Residual Current Monitoring Device


With an integrated universal current-sensitive residual current monitoring unit included, the inverter will disconnect immediately from the mains power once a fault current with a value exceeding the limit is detected.

However if an external residual current device (RCD) (type A is recommended) is mandatory, the switch must be triggered at a residual current of 300 mA (recommended). RCD of other specifications can also be used according to local standard.


6.6.2 Connecting the AC Cable

step 1 Disconnect the AC circuit breaker and secure it against reconnection.

step 2 Unscrew the swivel nut and take out the sealing ring.

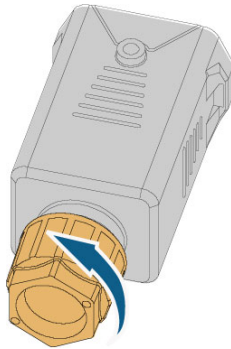


step 3 Thread the AC cable through the swivel nut, appropriate sealing and waterproof cover in sequence.

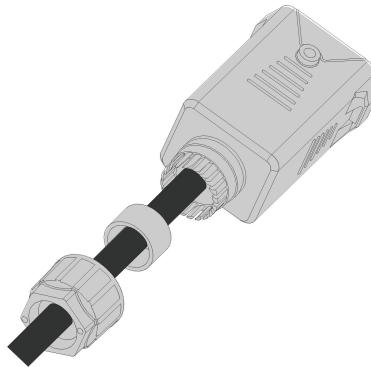


S006-E006

step 4 Strip the cable jacket and the wire insulation as shown in the following figure.

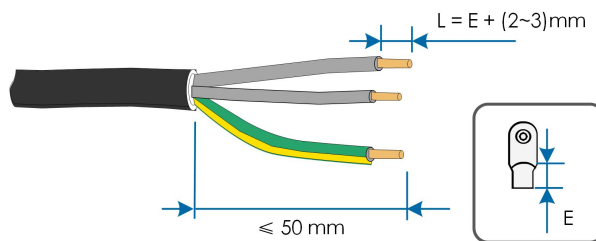


S006-E007

step 5 Crimp the OT/DT terminal.

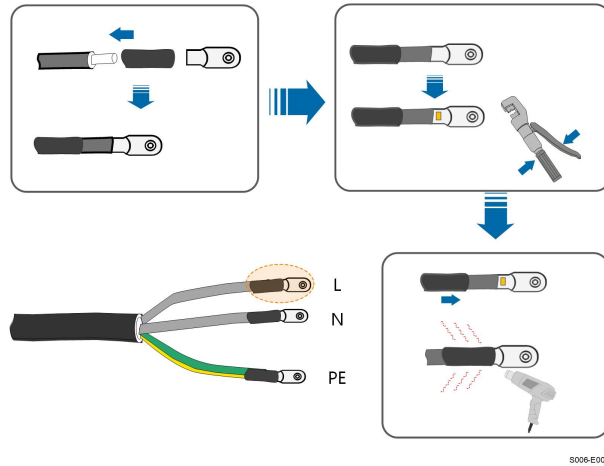


step 6 Remove the waterproof lid from the **GRID** terminal.

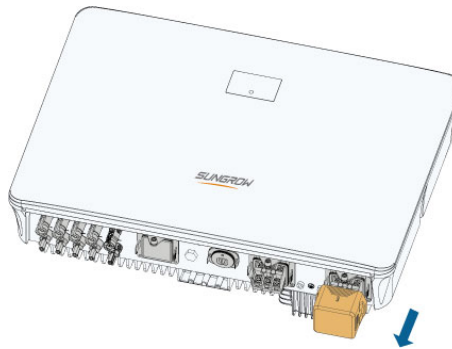


step 7 Fix all the wires to the terminals according to the assignment and tighten to a torque of 2.0 N•m with a screwdriver.

NOTICE

Observe the terminal assignment. Do not connect any phase line to the "PE" terminal or PE wire to "N" terminal. Otherwise, unrecoverable damage to the inverter may follow.

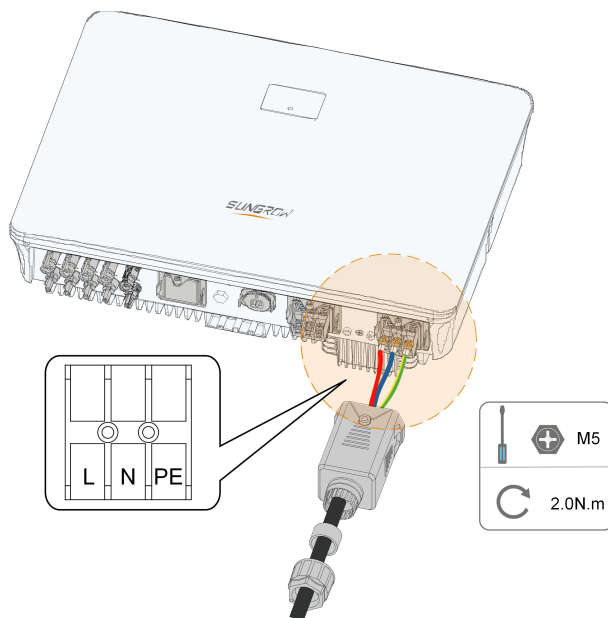

step 8 Secure the AC waterproof cover to the inverter with a torque of 1.2 N•m and tighten the swivel nut to a torque of 5 N•m–6 N•m.

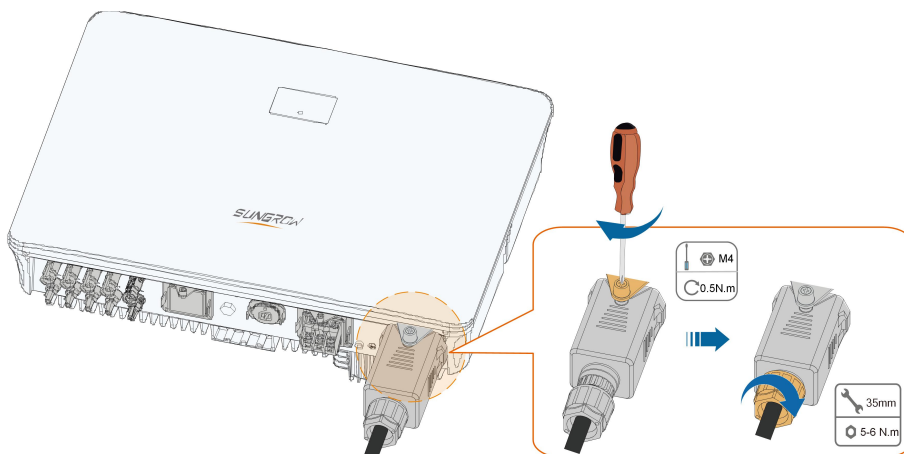

step 9 Connect the PE wire to ground and the phase lines and the “N” line to AC circuit breaker. Then connect the AC circuit breaker to electric board.

step 10 Make sure all wires are firmly installed via the right torque tool or dragging the cables slightly.

-- End

6.7 DC Cable Connection

⚠ DANGER

The PV string will generate lethal high voltage when exposed to sunlight.

- Respect all safety instructions listed in relevant documents about PV strings.

⚠ WARNING

- **Make sure the PV array is well insulated to ground before connecting it to the inverter.**
- **Make sure the maximum DC voltage and the maximum short circuit current of any string never exceed inverter permitted values specified in "Technical Data".**
- **Check the positive and negative polarity of the PV strings, and connect the PV connectors to corresponding terminals only after ensuring polarity correctness.**
- **During the installation and operation of the inverter, please ensure that the positive or negative electrodes of PV strings do not short-circuit to the ground. Otherwise, an AC or DC short-circuit may occur, resulting in equipment damage. The damage caused by this is not covered by the warranty.**
- **Electric arc or contactor over-temperature may occur if the DC connectors are not firmly in place, and the loss caused is not covered by the warranty.**
- **If the DC input cables are reversely connected or the positive and negative terminals of different MPPT are shorted to ground at the same time, while the DC switch is in the "ON" position, do not operate immediately. Otherwise, the inverter may be damaged. Please turn the DC switch to "OFF" and remove the DC connector to adjust the polarity of the strings when the string current is lower than 0.5 A.**
- **Use the DC connectors supplied with the product for DC cable connection. Using incompatible DC connectors may result in serious consequences, and the device damage is not covered under warranty.**
- **Inverters do not support full parallel connection of strings (Full parallel connection refers to a connection method in that strings are connected in parallel and then connected to the inverter separately).**
- **Do not connect one PV string to multiple inverters. Otherwise, the inverters may be damaged.**

NOTICE

The following requirements about PV string connection must be met. Otherwise, it may cause irreversible damage to the inverter, which is not covered by the warranty.

- **Mixed use of PV modules of different brands or models in one MPPT circuit, or PV modules of different orientation or inclination in a string may not damage inverter, but will cause system bad performance!**
- **The inverter enters standby state when the input voltage ranges between 560 V and 600 V. The inverter returns to running state once the voltage returns to the MPPT operating voltage range, namely, 40 V to 560 V.**

NOTICE

Note the following items when laying out cables on site:

- The axial tension on PV connectors must not exceed 80 N. Avoid axial cable stress on the connector for a long time during field wiring.
- Radial stress or torque must not be generated on PV connectors. It may cause the connector waterproof failure and reduce connector reliability.
- Leave at least 50 mm of slack to avoid the external force generated by the cable bending affecting the waterproof performance.
- Refer to the specifications provided by the cable manufacturer for the minimum cable bending radius. If the required bending radius is less than 50 mm, reserve a bending radius of 50 mm. If the required bending radius is greater than 50 mm, reserve the required minimum bending radius during wiring.

6.7.1 PV Input Configuration

- The inverters have four PV inputs, each with independent MPP tracker. Each DC input area can operate independently.
- The PV strings to four DC input areas may differ from each other, including PV module type, number of PV modules in each string, angle of tilt, and installation orientation.

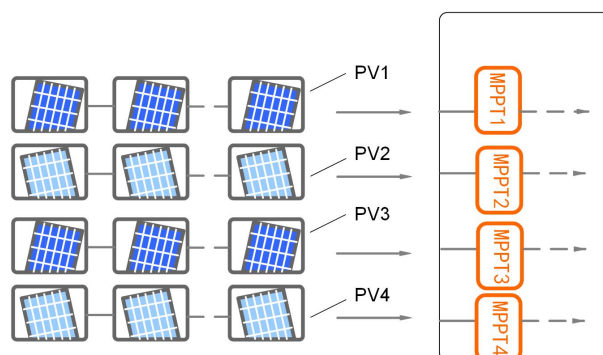


figure 6-3 PV Input Configuratinon

Prior to connecting the inverter to PV inputs, the following electrical specifications must be met simultaneously:

| Inverter Model | Open-circuit Voltage Limit | Max. Current for Input Connector |
|----------------|----------------------------|----------------------------------|
| SH8.0/10RS | 600 V | 20 A |

NOTICE

Take the SH10RS inverter for example:

1. Each MPPT works independently and when string operating voltage exceed 235V, it can get full load capacity of its MPPT.
2. When the string operating voltage is between 100V and 235V, there is no derating in normal case but higher heat could be generated under the situation of prolonged, high-temperature operation which may cause overheat derating.
3. When the string operating voltage is between 50V and 100V, PV input current will be derated with the voltage drop. i.e. 16A@100V; 8A @64V;

6.7.2 Assembling the PV Connectors

⚠ DANGER


High voltage may be present in the inverter!

- Ensure all cables are voltage-free before performing electrical operations.
- Do not connect the DC switch and AC circuit breaker before finishing electrical connection.




To ensure IP65 protection, use only the supplied connector.

step 1 Strip the insulation from each DC cable by 7 mm–8 mm.

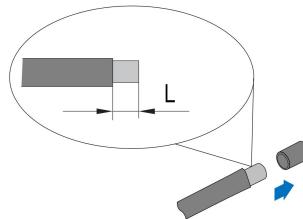


step 2 Assemble the cable ends with the crimping pliers.

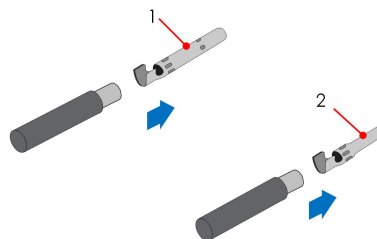

1: Positive crimp contact

2: Negative crimp contact

step 3 Lead the cable through cable gland, and insert the crimp contact into the insulator until it snaps into place. Gently pull the cable backward to ensure firm connection. Tighten the cable gland and the insulator (torque 2.5 N.m to 3 N.m).

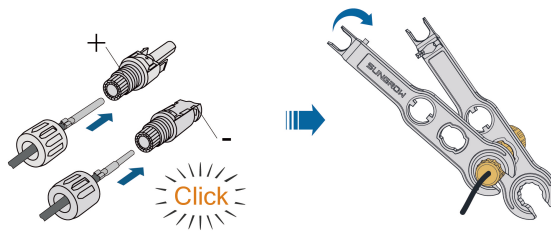

step 4 Check for polarity correctness.


NOTICE

If the PV polarity is reversed, the inverter will be in a fault or alarm state and will not operate normally.


-- End

6.7.3 Installing PV Connector

step 1 Rotate the DC switch to "OFF" position.

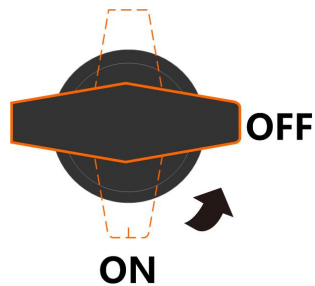


step 2 Check the cable connection of the PV string for polarity correctness and ensure that the open circuit voltage in any case does not exceed the inverter input limit of 600V.

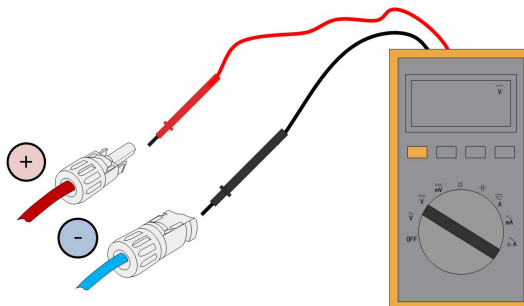

NOTICE

The multimeter must have a DC voltage range of at least 600 V. If the voltage is a negative value, the DC input polarity is incorrect. Please correct the DC input polarity. If the voltage is greater than 600 V, too many PV modules are configured to the same string. Please remove some PV modules.

step 3 Connect the PV connectors to corresponding terminals until there is an audible click.

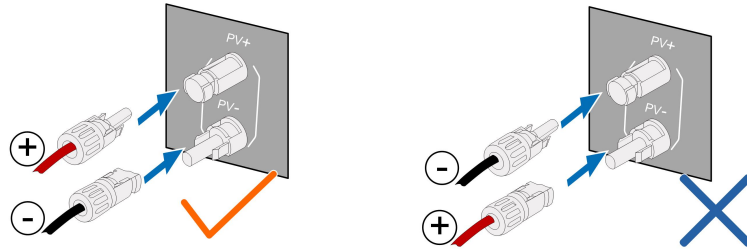

step 4 Follow the foregoing steps to connect PV connectors of other PV strings.

step 5 Seal any unused PV terminal with a terminal cap.

SUNGROW inverters cannot be used with third-party optimizers.

If the PV string is equipped with the optimizer, please refer to the optimizer manual for electrical connections and make sure that the polarity of the optimizer cables is correct.

-- End

6.8 Emergency Load Connection (Backup)

NOTICE

Risk of inverter damage due to incorrect cable connection. Do not connect the grid power wires to BACKUP port.


Observe the plug assignment.

- Do not connect the L line to the "PE" terminal or the PE wire to the "N" terminal. Otherwise, unrecoverable damage to the inverter may follow.
- Do not connect the L line and the N line in reverse, otherwise the inverter may not operate normally.




Do not short-circuit the Backup port during operation. Otherwise, the inverter or power distribution system will be seriously damaged. The loss is not covered by the SUNGROW warranty.

step 1 Unscrew the swivel nut and take out the sealing ring.

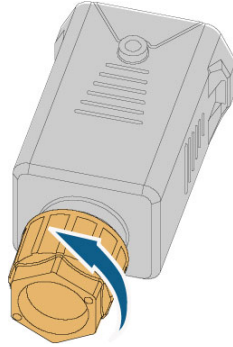


step 2 Thread the BACKUP cable through the swivel nut, appropriate sealing and waterproof cover in sequence.

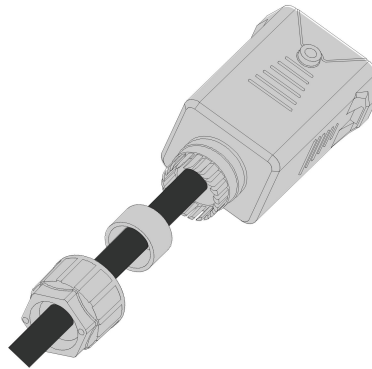


S006-E006

step 3 Strip the cable jacket and the wire insulation as shown in the following figure.

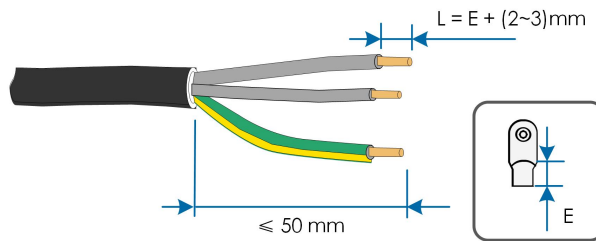


S006-E007

step 4 Crimp the OT/DT terminal.

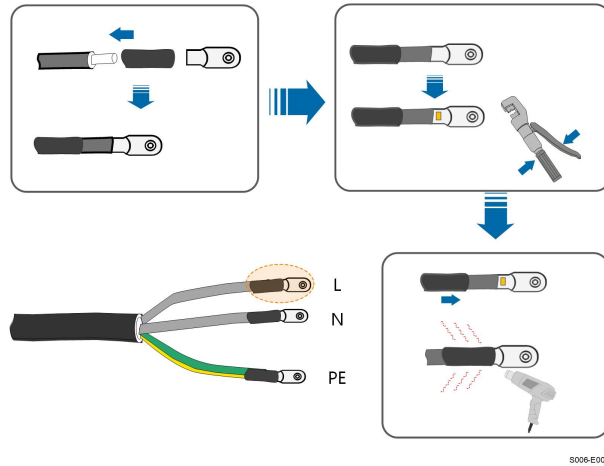


step 5 Remove the waterproof lid from the **BACKUP** terminal.

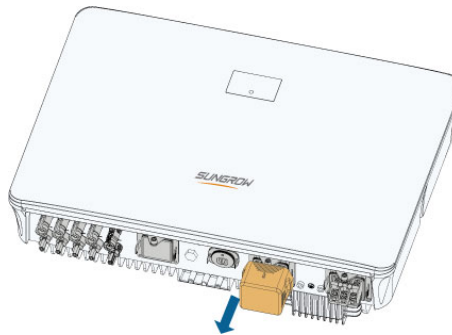


step 6 Fix all the wires to the terminals according to the assignment and tighten to a torque of 2.0 N•m with a screwdriver.

NOTICE

Observe the terminal assignment. Do not connect any phase line to the "PE" terminal or PE wire to "N" terminal. Otherwise, unrecoverable damage to the inverter may follow.

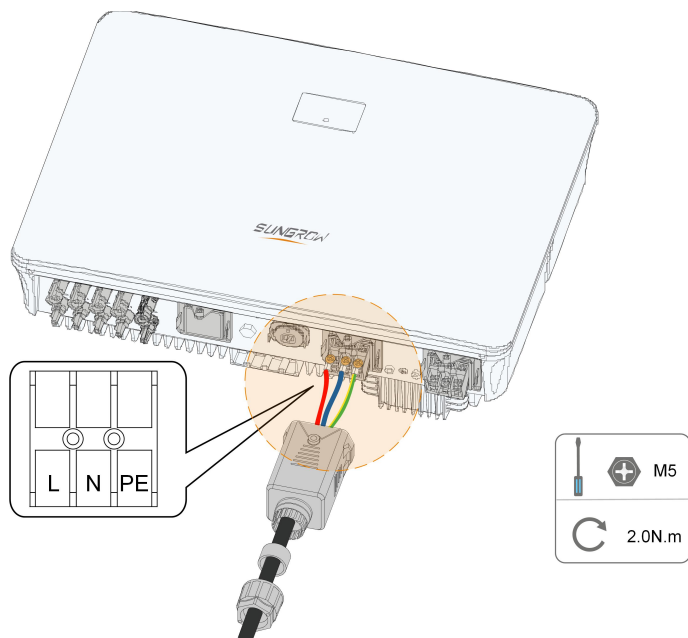

step 7 Secure the BACKUP waterproof cover to the inverter with a torque of 1.2 N•m and tighten the swivel nut to a torque of 5 N•m–6 N•m.

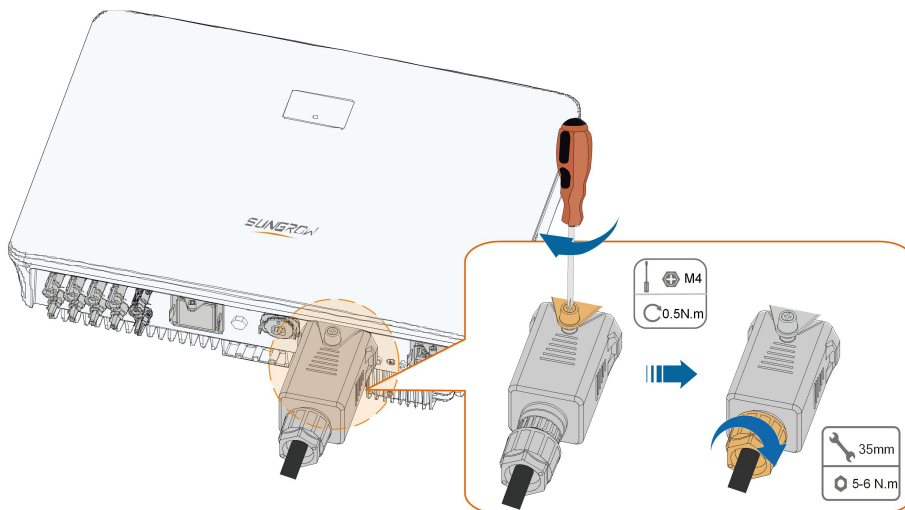

step 8 Pull all the lines outward lightly to check whether they are firmly installed.

-- End

6.9 Battery Connection

This section mainly describes the cable connections on the inverter side. Refer to the instructions supplied by the battery manufacturer for the connections on the battery side and configuration.

⚠ WARNING

Only use properly insulated tools to prevent accidental electric shock or short circuits. If insulated tools are not available, use electrical tape to cover the entire exposed metal surfaces of the available tools except their tips.

⚠ WARNING

The plug connector must be connected only by trained electricians.

⚠ WARNING

Do not disconnect under load!

Battery connectors must not be disconnected while under load. They can be placed in a no load state by shutting down the inverter completely.

⚠ WARNING

During the installation and operation of the inverter, please ensure that the positive or negative polarities of batteries do not short-circuit to the ground. Otherwise, an AC or DC short-circuit may occur, resulting in equipment damage. The damage caused by this is not covered by the warranty.

If the hybrid inverter is not connected to a battery, it will not support reliably the backup function.



The battery should be connected to the common grounding of the house (PE Bar) rather than directly to the inverter PE.


The energy in the battery will not backfeed into the PV modules.

6.9.1 Installing the Battery Connector


NOTICE

When making the connections, always observe the specifications regarding nominal voltage and nominal current. The smallest common value is permissible.

step 1 Strip the insulation from each DC cable by 7–8 mm.

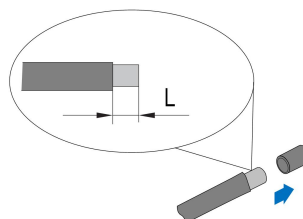


step 2 Assemble the cable ends with the crimping pliers.

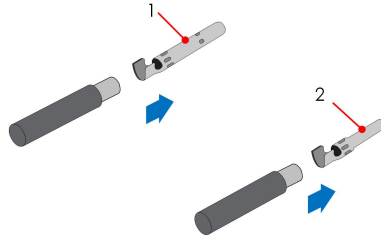


1: Positive crimp contact

2 : Negative crimp contact

step 3 Lead the cable through cable gland, and insert the crimp contact into the insulator until it snaps into place. Gently pull the cable backward to ensure firm connection.

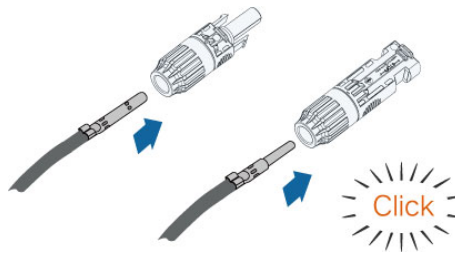


step 4 Tighten the cable gland and the insulator.

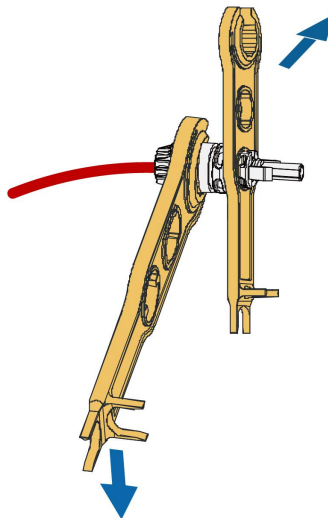

step 5 Check for polarity correctness.

step 6 Plug the connectors into **BAT+** and **BAT-** terminals.

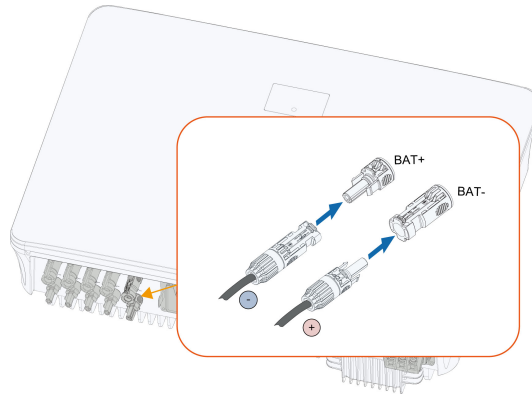

step 7 Ensure that the connectors are securely in place.



The installation distance between the battery and the inverter < 30m.

-- End

6.10 Communication Connection

WLAN function

With the WiNet-S2 module installed, view corresponding information through iSolarCloud App or iSolarCloud Web.

LAN function


- Through the Modbus TCP/IP protocol, the EMS or the Logger from the third party can fully control the on/off, derating, charging and discharging of the inverter.

RS485 function

The RS485 communication interfaces are used to establish communication connection with monitoring devices.

6.10.1 WiNet-S2/EyeM4 Connection

The WiNet-S2 module supports Ethernet communication and WLAN communication. It is not recommended to use both communication methods at the same time.

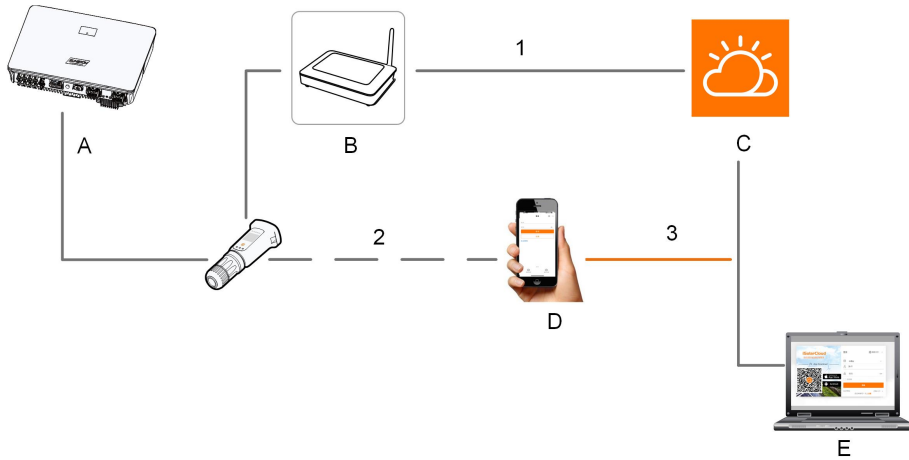


- (A) Inverter
- (B) Router/Switch
- (C) iSolarCloud server
- (D) iSolarCloud App
- (E) iSolarCloud
- (1) ——— Internet
- (2) - - - - Local access
- (3) ——— Remote

For details, see the quick guide for the WiNet-S2 module. Scan the following QR code for the quick guide.



EyeM4 :

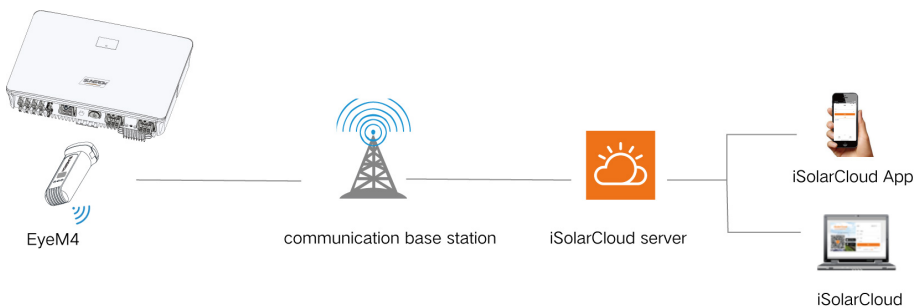


For details, see the quick guide for the EyeM4 module. Scan the following QR code for the quick guide.




6.10.1.1 Ethernet Communication

step 1 **(Optional)** Strip the insulation layer of the communication cable with an Ethernet wire stripper, and lead the corresponding signal cables out. Insert the stripped communication cable into the RJ45 plug in the correct order, and crimp it with a crimper.

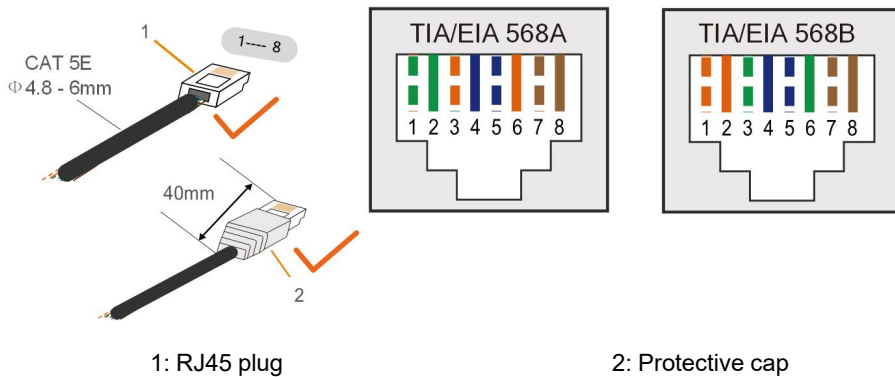


Skip this step if a standard network cable with RJ45 plug is prepared.


step 2 Unscrew the swivel nut from the communication module and take out the inner sealing ring.

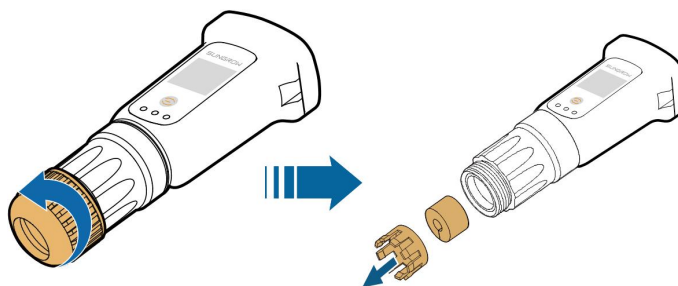


step 3 Unscrew the housing from the communication module.

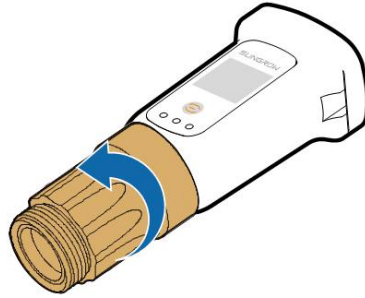


step 4 Thread the network cable through the swivel nut and gasket. Afterwards, route the cable into the opening of the sealing. Finally, insert the cable through the housing.

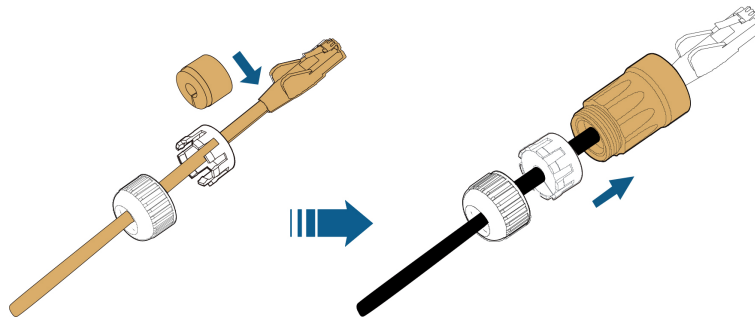

step 5 Insert the RJ45 plug into the front plug connector until there is an audible click and tighten the housing. Install the gasket and fasten the swivel nut.

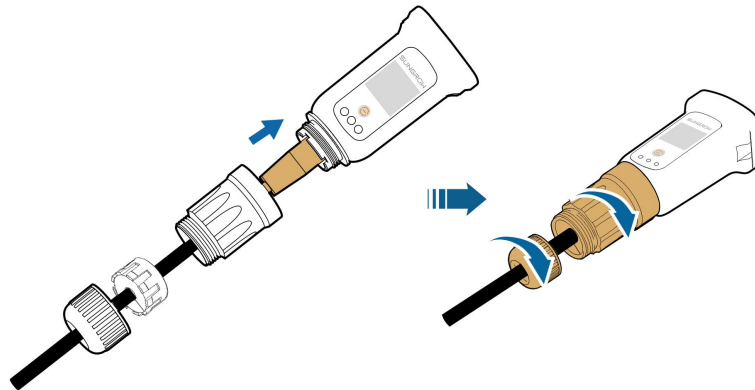

step 6 Remove the waterproof lid from the **COM1** terminal and install WiNet-S2.

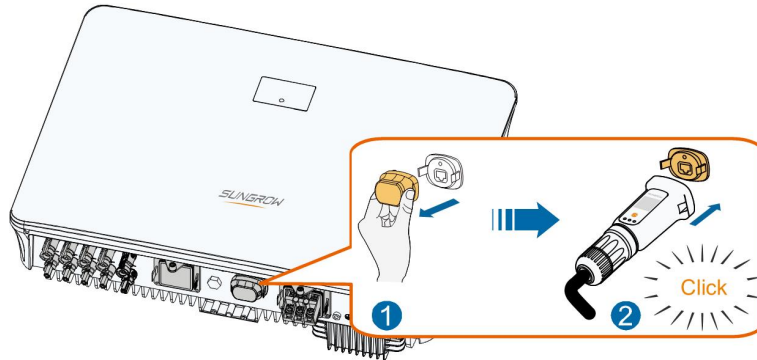

step 7 Slightly shake it by hand to determine whether it is installed firmly.


-- End

6.10.1.2 WLAN Communication


step 1 Remove the waterproof lid from the **COM1** terminal.

step 2 Install the module. Slightly shake it by hand to determine whether it is installed firmly, as shown below.

WiNet-S2

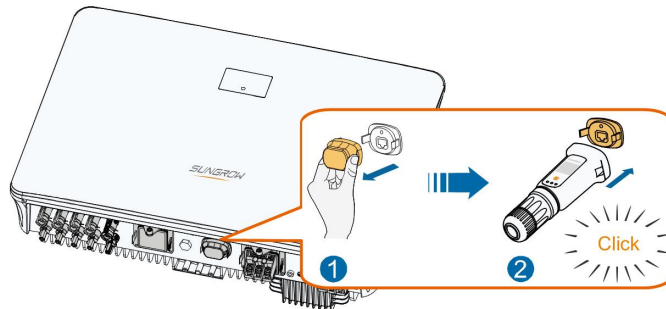

EyeM4

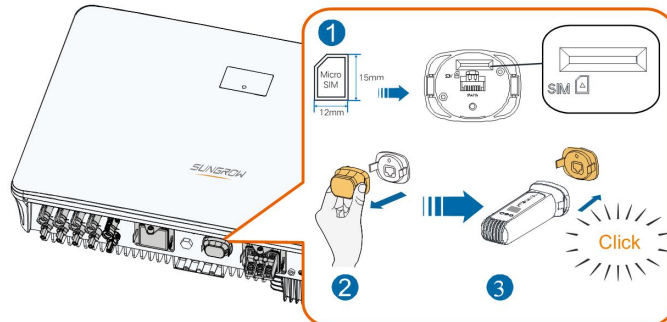

step 3 Refer to the guide delivered with the module for the set-up.

-- End

6.10.2 COM2 Terminal Connection


6.10.2.1 Meter Connection

The inverter can provide export control but will require the use of an external smart meter. The export control functionality has not been tested to AS/NZS 4777.2:2020.



The energy meter is mainly used to detect the direction and magnitude of the current. And the energy meter data may not be used for billing purposes.


step 1 Remove the cable jacket and strip the wire insulation.

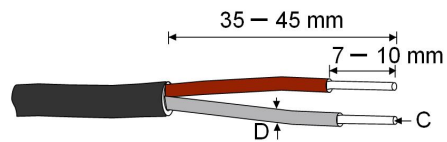

$$C = 0.5 - 1.0 \text{ mm}^2 \quad D \leq 2.8 \text{ mm}$$


S007-E044

step 2 (Optional) When using a multi-strand wire cable, connect the wire head to the cord end terminal. In case of single-strand copper wire, skip this step.

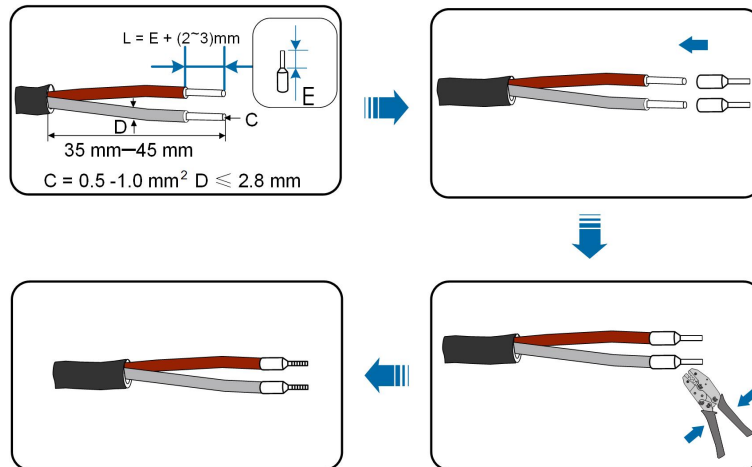


S007-E045

step 3 Unscrew the swivel nut from the connector.

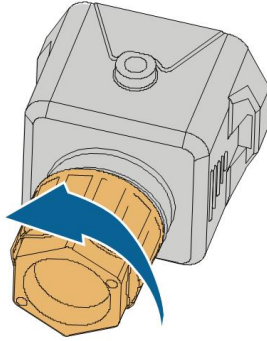


S006-E011

step 4 Remove the seal and route the cable into the opening of the sealing.

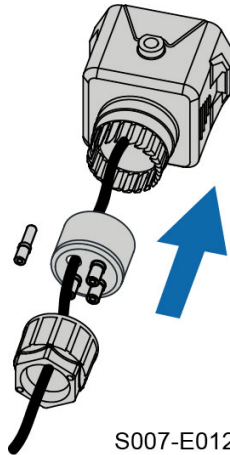


S007-E012


step 5 Plug the wires into the corresponding terminals as shown in the following figure. Ensure that the wires are securely in place by slightly pulling them.

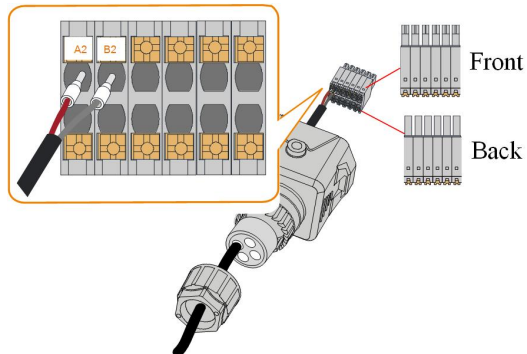


step 6 Remove the waterproof lid from the **COM2** terminal.

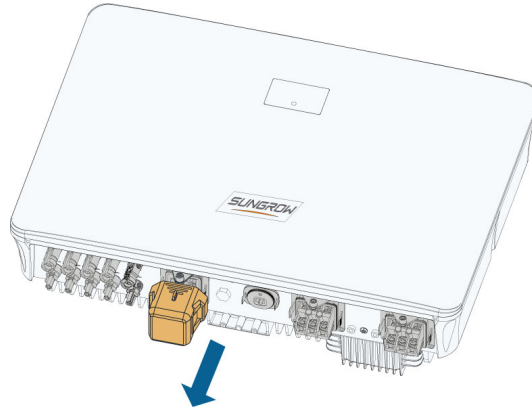

step 7 Insert the terminal plug into the **COM2** terminal at the bottom side of the inverter and then install the housing.

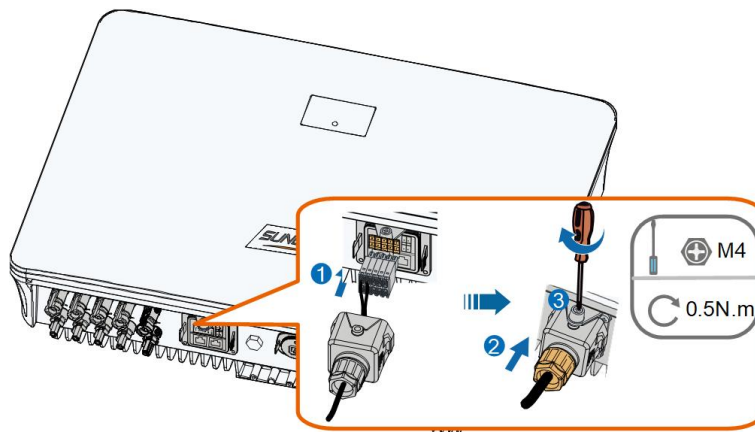


step 8 Slightly pull out the cable and then fasten the swivel nut. Lock the connector with the screw.

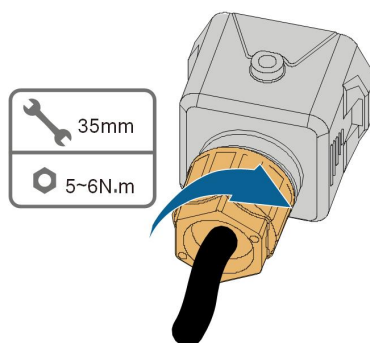


S006-E015


step 9 The other end of the communication cable is connected to the A and B ports of the smart meter. If the smart energy meter is used, please refer to the following wiring method.

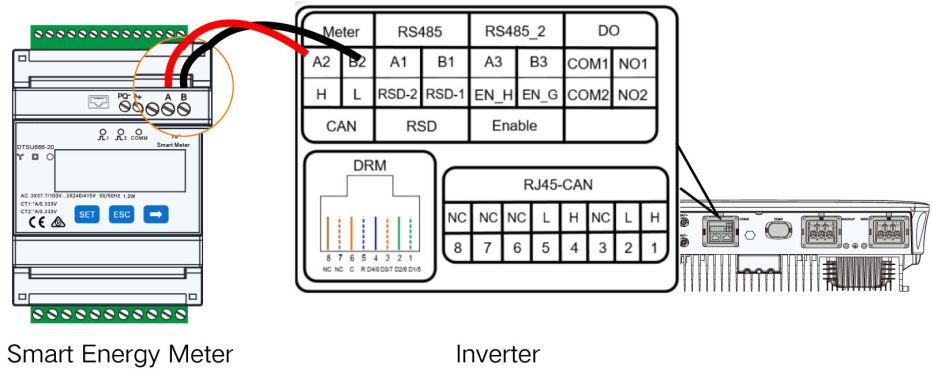

step 10 If the single-phase meter is used, please refer to the following wiring method.

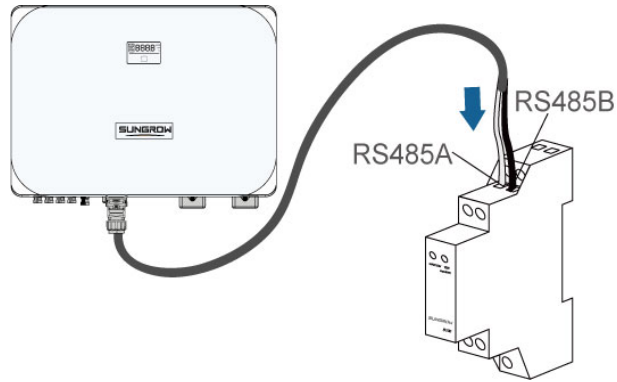

step 11 (Optional) If the length of the communication cable > 10m, please connect a 120Ω resistor in parallel to the meter. Plug the resistor directly into both RS485 communication ports.

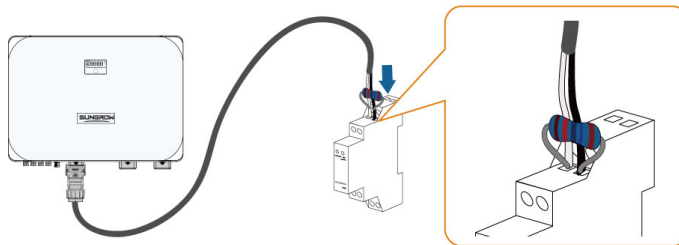

-- End

6.10.2.2 Battery Communication Connection

The battery communication method can be used in the following two ways. For detailed connection description, refer to the section "6.10.2.1 Meter Connection"


Pin terminal connection



Battery

Inverter

The battery communication cable is connected to the inverter COM2 ports H and L.

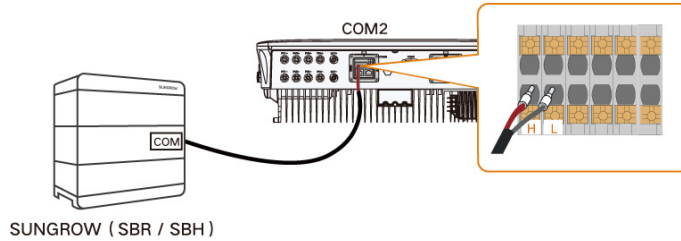


RJ45 connection



Battery

Inverter

The battery communication cable is connected to the inverter COM2 ports RJ45–CAN.

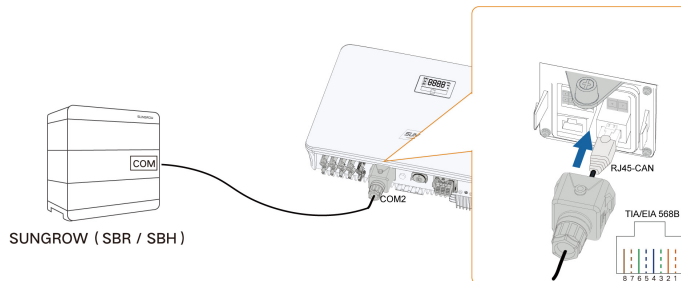

6.10.2.3 DRM Connection

DRM and Ripple Control support only one function at the same time.

DRM

In Australia and New Zealand, the inverter supports the demand response modes as specified in the standard AS/NZS 4777.

The following figure shows the wiring between the inverter and the external DRED.

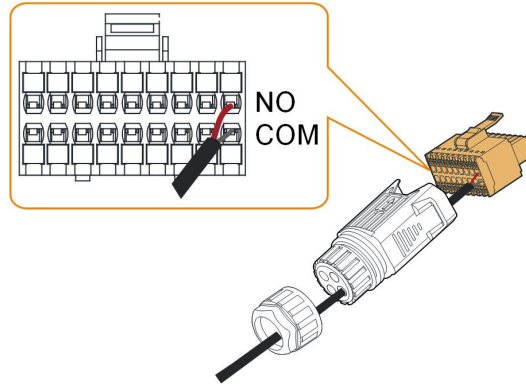



table 6-4 Method of Asserting DRM

| Mode | Asserted by Shorting Terminals on Inverter | Switch Operation on External DRED |
|------|--|-----------------------------------|
| DRM0 | R & C | Close S1 and S5 |
| DRM1 | D1/5 & C | Close S1 |
| DRM2 | D2/6 & C | Close S2 |
| DRM3 | D3/7 & C | Close S3 |
| DRM4 | D4/8 & C | Close S4 |
| DRM5 | D1/5 & R | Close S5 |
| DRM6 | D2/6 & R | Close S6 |
| DRM7 | D3/7 & R | Close S7 |
| DRM8 | D4/8 & R | Close S8 |


Ripple Control

In Germany, the grid company uses the Ripple Control Receiver to convert the grid dispatching signal and send it as a dry contact signal.

Wiring of the ripple control receiver dry contact cables is shown in the figure below:

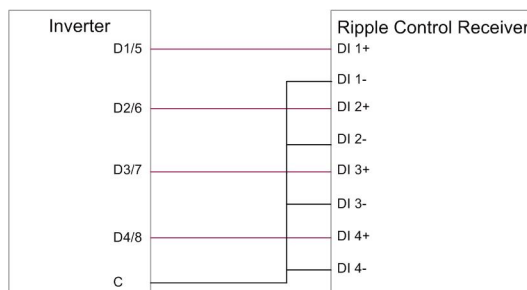

- step 1 **(Optional)** Strip the insulation layer of the communication cable with an Ethernet wire stripper, and lead the corresponding signal cables out. Insert the stripped communication cable into the RJ45 plug in the correct order, and crimp it with a crimper.

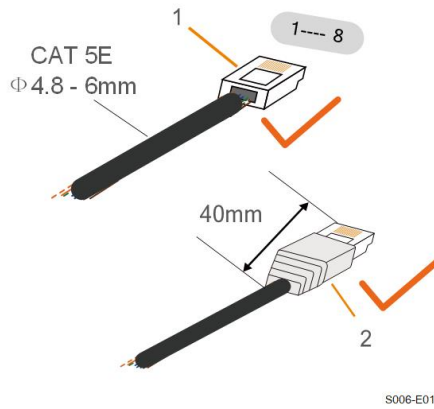

1: RJ45 plug


2 : Protective cap

S006-E018




Skip this step if a standard network cable with RJ45 plug is prepared.

step 2 Unscrew the swivel nut from the connector.

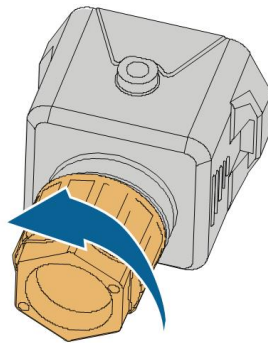


S006-E011

step 3 Remove the seal.

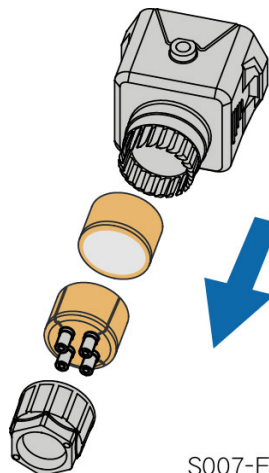


S007-E047


step 4 Lead the cable through the cable gland.

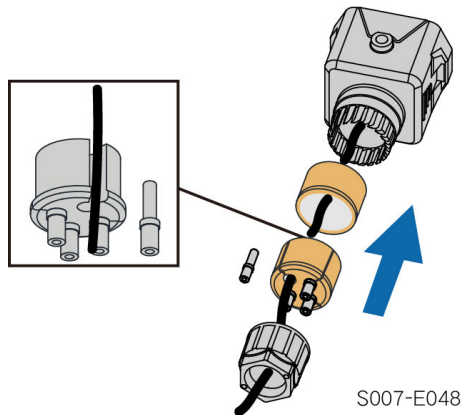

step 5 Plug the wires into the corresponding terminals as shown in the following figure. Ensure that the wires are securely in place by slightly pulling them.

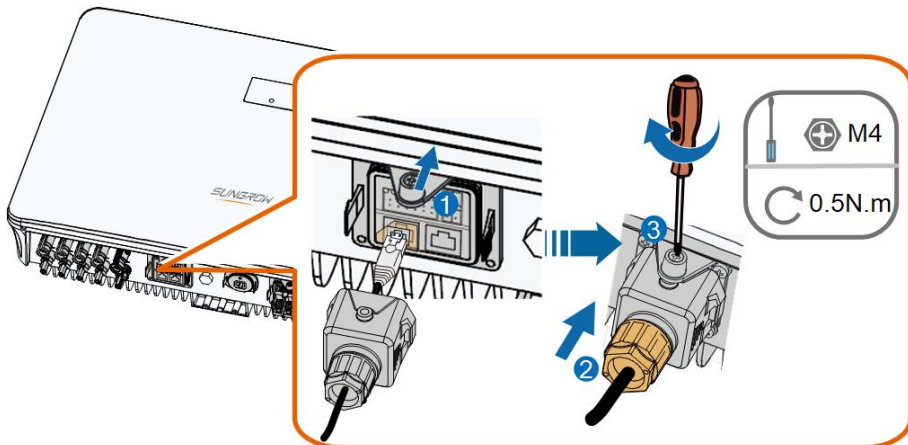

step 6 Slightly pull out the cable and then fasten the swivel nut. Lock the connector with the screw.

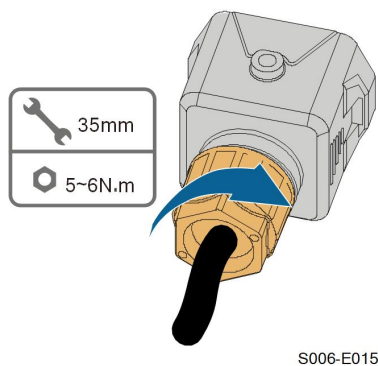


-- End

6.10.2.4 EV-Charger Communication Connection

The electrical connection of the EV charger can be referred to the EV-Charger manual. The inverter communicates with the EV charger through the RS485 communication interface.

Procedure

The communication between the EV charger and the inverter is connected through A3 and B3 of the COM2 port, and the specific connection is as follows.

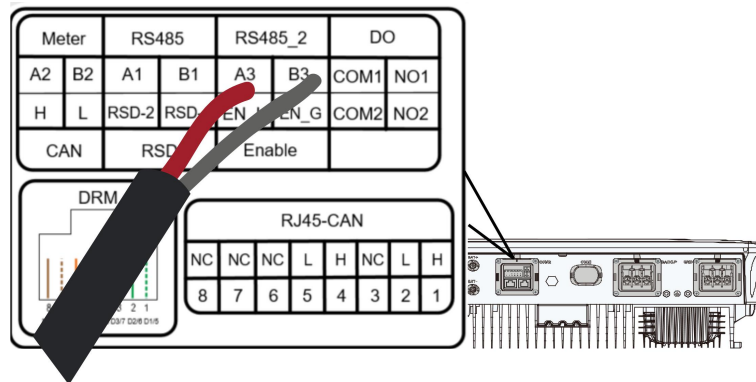


6.11 Protective Cover Installation (Optional)

NOTICE


- Please install the protective cover after finishing all electrical connections of the inverter.

The installation procedure of the protective cover is as follows:


step 1 The protective cover consists of a left cover, a right cover and a top cover.

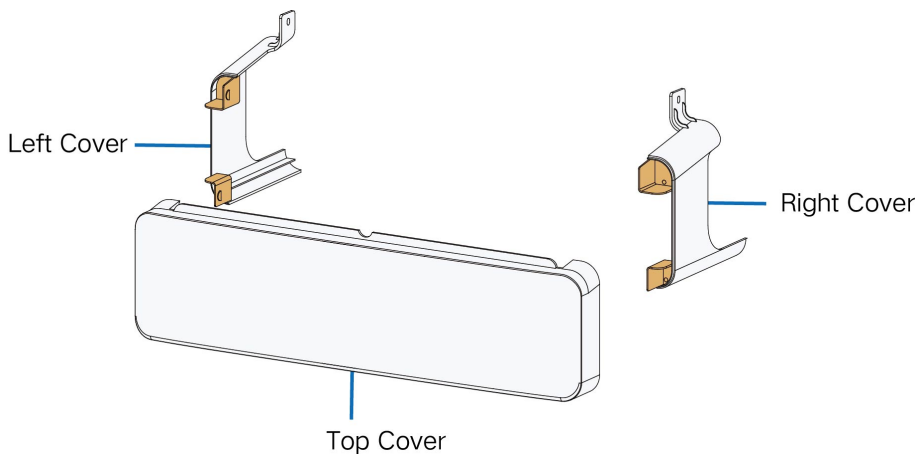


step 2 Slot the left cover and the right cover into the top cover until there is an audible "click".

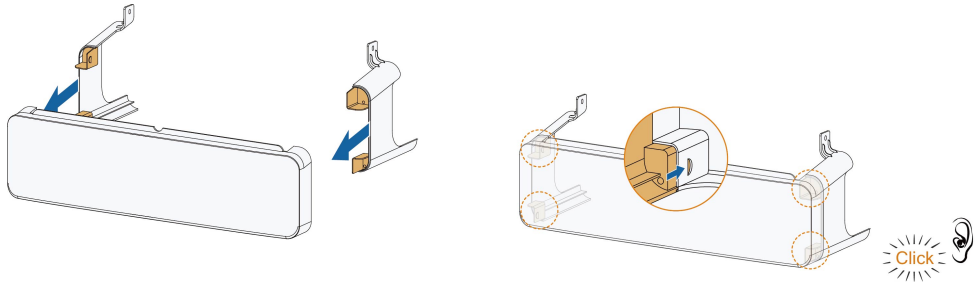


step 3 After the electrical connection of the inverter is completed, install the protective cover to the inverter bottom and make sure that the threaded holes in buckles of the protective cover are aligned with the holes on the sides of the inverter.

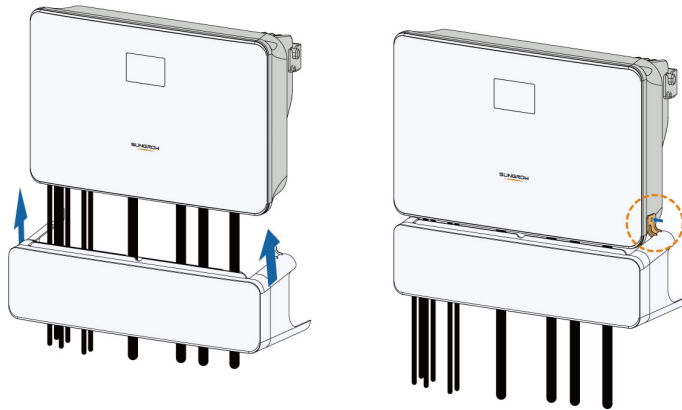

step 4 Use a screwdriver to secure screws with a torque of 1.5 N.m.

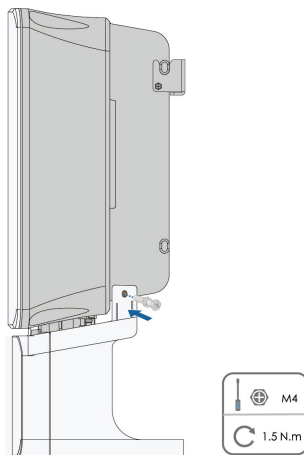

step 5 The installation of the protective cover is completed.

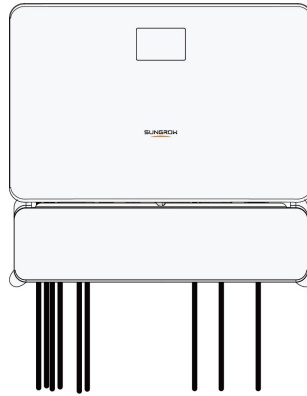

-- End

7 Commissioning

7.1 Inspection Before Commissioning

Check the following items before starting the inverter:

- All equipment has been reliably installed.
- DC switch(es) and AC circuit breaker are in the "OFF" position.
- The ground cable is properly and reliably connected.
- The AC cable is properly and reliably connected.
- The DC cable is properly and reliably connected.
- The communication cable is properly and reliably connected.
- The vacant terminals are sealed.
- No foreign items, such as tools, are left on the top of the machine or in the junction box (if there is).
- The AC circuit breaker is selected in accordance with the requirements of this manual and local standards.
- All warning signs & labels are intact and legible.

7.2 Powering on the System

If all of the items mentioned above meet the requirements, proceed as follows to start up the inverter for the first time.

- step 1 Turn on the AC circuit breaker between the inverter and the grid.
- step 2 (Optional) Connect the external DC circuit breaker between the inverter and the battery pack if a battery is equipped.
- step 3 (Optional) Power on the battery pack manually if a battery is equipped.
- step 4 Rotate the DC switch of the inverter to "ON" position.
- step 5 If the irradiation and grid conditions meet requirements, the inverter will operate normally. Observe the LED indicator to ensure that the inverter operates normally. Refer to ["2.4 LED Panel"](#) for LED screen introduction and LED indicator definition.
- step 6 Refer to the quick guide for WiNet-S2/EyeM4 for its indicator definition.

-- End

7.3 App Preparation


- step 1 Install the iSolarCloud App with latest version. Refer to "8.2 Installing App".
- step 2 Register an account. Refer to "8.3 Account Registration". If you have got the account and password from the distributor/installer or SUNGROW, skip this step.
- step 3 Download the firmware package to the mobile device in advance. Refer to "Firmware Update". This is to avoid download failure due to poor on-site network signal.

-- End

7.4 Plant Creation

Prerequisites:

- The account and password for logging in to iSolarCloud App have been obtained from the distributor/installer or SUNGROW.
- The communication device is normally connected to the inverter.
- System positioning is enabled and iSolarCloud App is allowed to access location information.

- step 1 Open the App, tap  in the upper right corner of the interface, and select the correct access address.

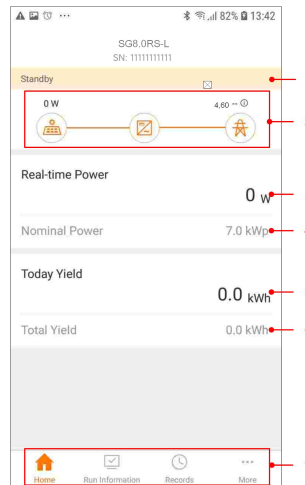

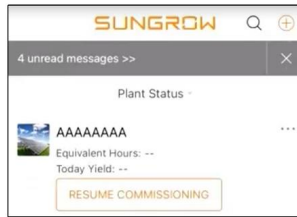


figure 7-1 Select Access Address

- step 2 Enter the account and password on the login interface, and tap **LOGIN** to log in.
- step 3 Tap  in the upper right corner to enter the plant creation interface.



step 4 Fill in the content according to actual needs, and the parameters containing * are required. Tap **Next** to enter the next interface.

 Two side-by-side screenshots of the 'CREATE PLANT' form in the SUNGROW mobile application. The left screenshot shows the initial form with fields for:

- * Plant Name (Please Enter)
- * Plant Type (Please Select)
- * Installed PV Power (kWp) (Please Enter)
- * Country/Region (China)
- * Time Zone (GMT+8, Beijing, Chongqing, Hong Kong, Urumqi)
- * Plant Address (安徽省合肥市蜀山区高新技术产业开发区习友路阳光电源股份有限公司)
- * Grid-connection Type (Please Select)


 The right screenshot shows the continuation of the form with fields for:

- * Grid-connection Type (Please Select)
- Grid-connected Date (2022-05-26)
- * Owner's Email Address (Please Enter)
- Postal Code (Please Enter)
- Plant Image (with a plus sign icon)
- Feed-in Tariff(CNY/kWh) (Please Enter)
- More Configurations (link)
- How to duplicate the plant information with one click (link)


 Both screenshots feature an orange 'NEXT' button at the bottom.

figure 7-2 Plant Creation Settings


| Parameter Name | Description |
|-----------------|--|
| Plant name | The name of the plant. |
| Plant type | The type of the plant, which should be set corresponding to the actual plant type. |
| Installed power | The installed power of the plant. |
| Country/Region | The country/region where the plant is located. |

| Parameter Name | Description |
|-----------------------|---|
| Time zone | The time zone where the plant is located, which can be filled through automatic positioning and manual input. |
| Plant address | <p>The location of the plant, which can be filled in two ways:</p> <ul style="list-style-type: none"> Manually: Manually enter the plant location in the input box. Automatically: Tap  to automatically obtain the current location or search for the location of the plant, and then tap Confirm. |
| Grid-connection type | The way the plant is connected to the grid, including 100% Feed-in , Self-Consumption , Zero Export , and Off-grid . |
| Grid-connected date | The time when the plant is connected to the grid. |
| Owner's email address | Fill in the owner information of the plant, and both registered and un-registered email addresses are supported. |
| Postal code | The postal code of the place where the plant is located. |
| Plant image | Take photos of the plant and upload them. |
| Feed-in tariff | <p>The feed-in tariff can be set in two ways:</p> <ul style="list-style-type: none"> Enter the feed-in tariff directly in the input box. Tap More Configurations, select the tariff unit, enter the feed-in tariff, and tap Confirm. Enable Time-of-Use Tariff if needed. Tap Add Time-of-Use Tariff, add time intervals and price, and tap Confirm. Please note that if Time-of-use Tariff is enabled, the time periods shall cover 24 hours a day, and can not overlap. |
| Consumption tariff | <p>Set the consumption tariff as follows:</p> <ul style="list-style-type: none"> Tap More Configurations, select the tariff unit, enter the consumption tariff, and tap Confirm. Enable Time-of-Use Tariff if needed, and refer to the setting methods of the feed-in tariff. |


step 5 Bind a device through scanning the QR code on the device, manually inputting the device S/N, or uploading a QR code picture. Tap **Confirm** after the QR code is identified or the S/N is verified.

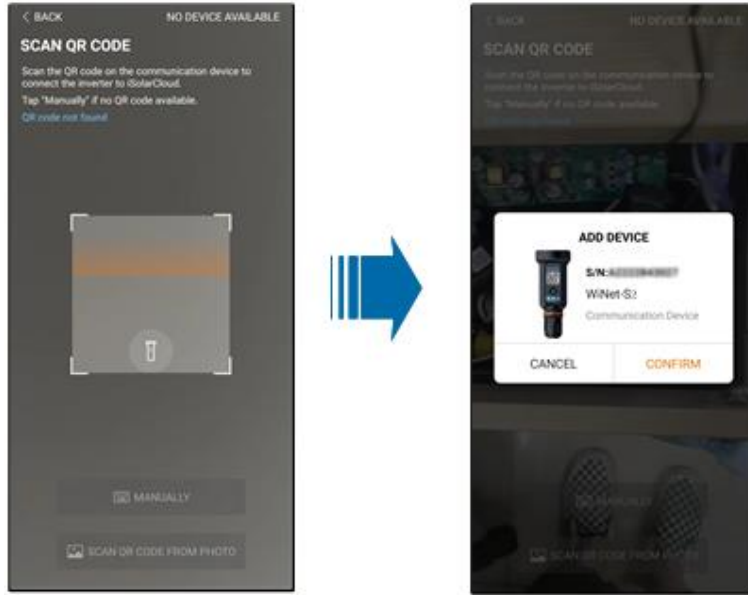


step 6 After a device is bound, tap **Device** and **Commissioning** to go to corresponding interface.

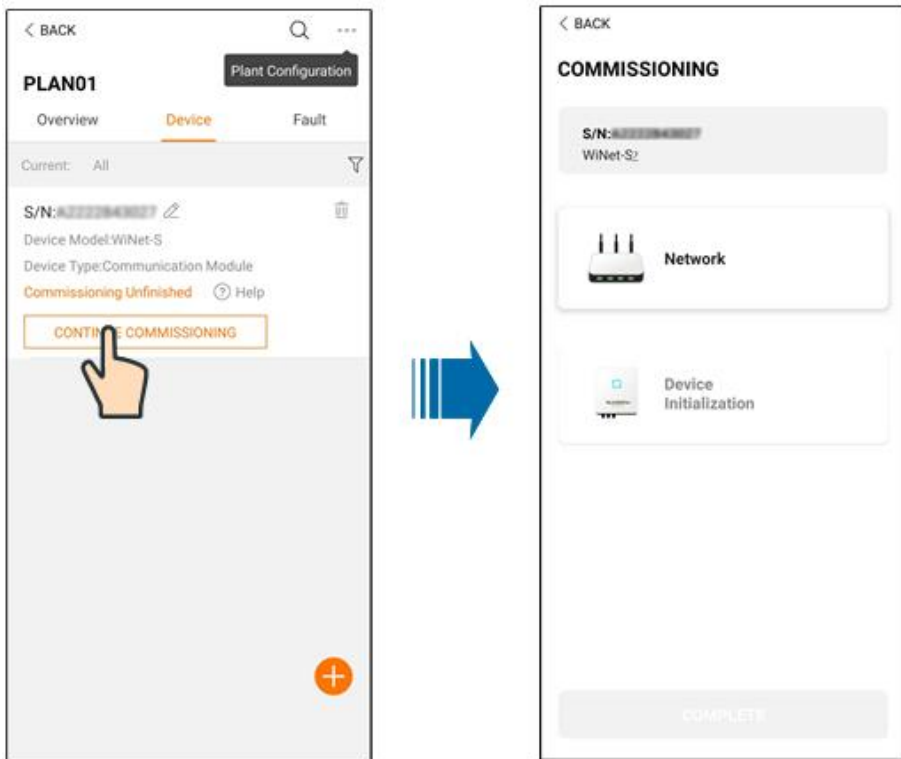

step 7 Tap **Network Configuration** to go to the **WLAN connection** interface. Tap the home network in the WLAN list, enter the password, and then tap **Confirm**.

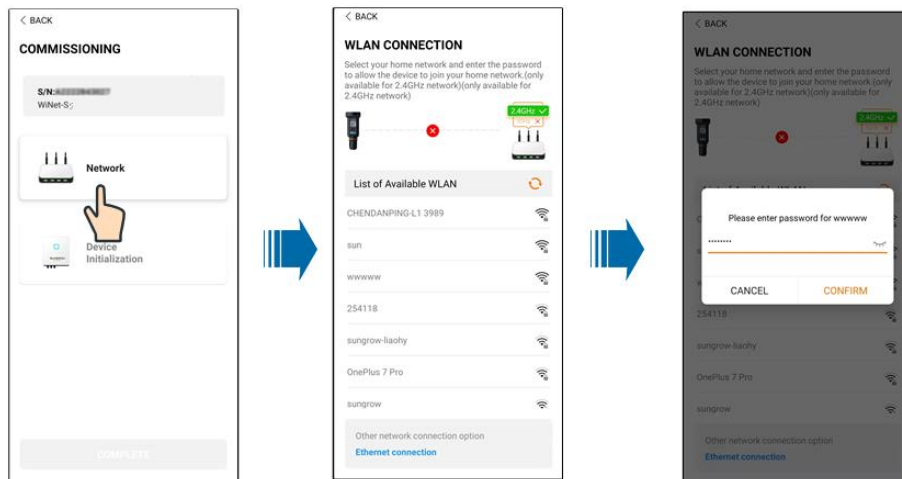


- step 8 Enter the **Activate EasyConnect** interface, and press the multi-function button on the WiNet-S2to enable the Easyconnect mode according to the prompt on the screen. The App automatically enters a waiting processing interface if this mode is enabled, and automatically returns to the commissioning interface after the processing is completed.

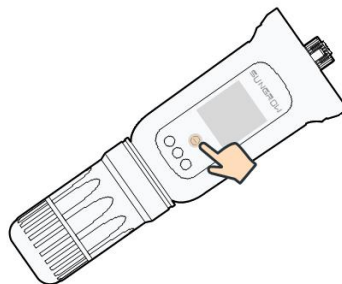


NOTICE

Only the 2.4 GHz working band is supported under the networking mode.
If the Easyconnect fails, please refer to other methods in the WiNet-S2manual to establish the connection.

- step 9 Tap **Device Initialization** to go to the **Device initialization** interface. Set the initialization protection parameters as needed and tap **Settings** to return to the commissioning interface.

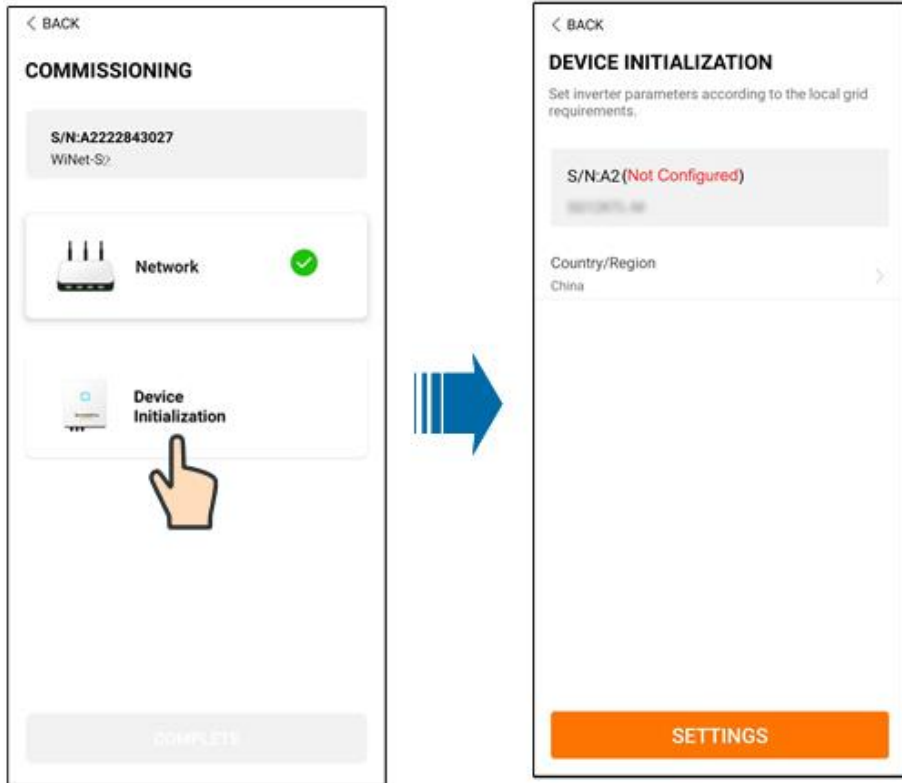

When the country is set to Australia, additionally set the applicable network service provider and then the grid type.

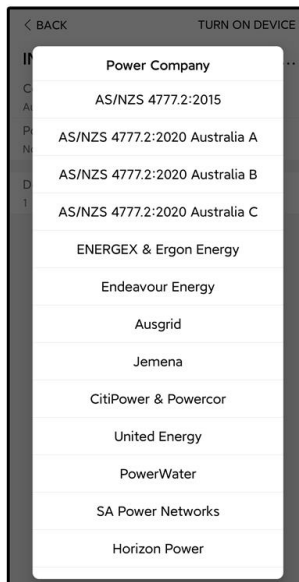

The image shown here is for reference only. Refer to the actual interface for the supported network service providers.

table 7-1 Description of Network Service Provider and Grid Type

| Network Service Provider | Grid Type |
|--------------------------|---|
| AS/NZS 4777.2:2015 | / |
| AS/NZS 4777.2:2020 | / |
| Australia A | / |
| AS/NZS 4777.2:2020 | / |
| Australia B | / |
| AS/NZS 4777.2:2020 | / |
| Australia C | / |
| ENERGEX & Ergon Energy | <ul style="list-style-type: none"> • STNW1170: single-phase < 10 kVA & three-phase < 30 kVA • STNW1174: 30 kVA < $P_n \leq 1500$ kVA |
| Jemena | <ul style="list-style-type: none"> • ≤ 10 kVA per phase (or 30 kVA per three phase) • ELE GU 0014: 30 kVA–200 kVA |
| Endeavour Energy | MDI 0043 |
| Ausgrid | NS194 |
| CitiPower & Powercor | <ul style="list-style-type: none"> • ≤ 5 kVA for single-phase & 30 kVA for three-phase • > 30 kVA three-phase |
| United Energy | <ul style="list-style-type: none"> • UE-ST-2008.1: ≤ 10 kVA for single-phase & 30 kVA for three-phase • UE-ST-2008.2: > 30 kVA three-phase |
| PowerWater | Embedded Generation Notice Photovoltaic Systems:2020 |
| SA Power Networks | <ul style="list-style-type: none"> • TS129-2019: < 10 kW for single-phase & 30 kW for three-phase • TS130-2017: > 30 kW & ≤ 200 kW • TS131-2018: > 200 kW |
| Horizon Power | <ul style="list-style-type: none"> • HPC-9DJ-13-0001-2019: ≤ 10kVA for single-phase & 30 kVA for three-phase • HPC-9DJ-13-0002-2019: > 30kVA & ≤ 1MVA |
| westernpower | EDM#33612889-2019 |
| AusNet Services | Basic Micro Embedded Generation: 2020 |

* For compliance with AS/NZS 4777.2:2020, please select from Australia A/B/C. Please contact your electricity grid operator for which region to use.



- Please check the country supported by this product at [http:// support.sungrow-power.com/](http://support.sungrow-power.com/).
- Set **Country/Region** to the country/region where the inverter is installed. Otherwise, the inverter may report a fault.
- For the commissioning process – country code must be selected before the inverter can operate.

step 10 After a plant is successfully created, return to the App home page to view the plant information.

-- End

8 iSolarCloud App

8.1 Brief Introduction

The iSolarCloud App can establish communication connection to the inverter via the WLAN, providing remote monitoring, data logging and near-end maintenance on the inverter. Users can also view inverter information and set parameters through the App.

* To achieve direct login via WLAN, the wireless communication module developed and manufactured by SUNGROW is required. The iSolarCloud App can also establish communication connection to the inverter via Ethernet connection.



- This manual describes only how to achieve near-end maintenance via WLAN direct connection.
- Screenshots in this manual are based on the V2.1.6 App for Android system, and the actual interfaces may differ.

8.2 Installing App

Method 1

Download and install the App through the following application stores:

- MyApp (Android, mainland China users)
- Google Play (Android, users other than mainland China ones)
- App Store (iOS)

Method 2

Scan the following QR code to download and install the App according to the prompt information.



The App icon appears on the home screen after installation.



8.3 Account Registration

The account distinguishes two user groups, end user and distributor/installer.

- The end user can view plant information, create plants, set parameters, share plants, etc.
- The distributor/installer can help the end user to create plants, manage, install, or maintain plants, and manage users and organizations.

step 1 Tap **REGISTER** to enter the registration screen.

USER REGISTRATION

Account Type

Please select the relevant server for your area; if not available, please select the international station

Distributor/Installer

Distributor/Installer is the person who install or/and manage the plant, and supply service to end user

End User

End User is the person who will own or has owned one inverter or more

step 2 Select the relevant server for your area.

step 3 Select **End user** or **Distributor/Installer** to enter the corresponding screen.

The screenshot shows a mobile registration form titled "Distributor/Installer". At the top left is a back arrow and the word "BACK". Below the title are several input fields:

- "* Contact Phone Number" with a dropdown menu showing "+86" and a "Please Enter" prompt.
- A blue link "Send Verification Code" below the phone number field.
- "* Verification Code" with a "Please Enter" prompt and a "Help" icon.
- "Username" with a "Please Enter" prompt and a help icon.
- "* Password" with a "Please Enter" prompt.
- "* Confirm Password" with a "Please Enter" prompt.
- "* Country/Region" with a "Please Select" prompt and a right-pointing arrow.
- "Company Name" with a "Please Enter" prompt.

 At the bottom left is a checkbox labeled "Accept Privacy Policy". At the bottom center is a grey button labeled "REGISTER".

step 4 Fill in the registration information, including email, verification code, password and affirmation and country (region). The distributor/installer has the permission to fill in the company name and the code of upper level installer/distributor.



The code of upper level distributor/installer can be obtained from the upper level distributor/installer. Only when your organization belongs to the upper level distributor/installer organization, can you fill in the corresponding code.

step 5 Tick **Accept privacy protocol** and tap **Register** to finish the registration operation.

-- End

8.4 Login

8.4.1 Requirements

The following requirements should be met:

- The AC or DC side of the inverter is powered-on.
- The WLAN function of the mobile phone is enabled.
- The mobile phone is within the coverage of the wireless network produced by the communication module.

8.4.2 Login Procedure

step 1 For the WiNet-S2 module, press the multi-function button 3 times to enable the WLAN hot-spot. No password is required and the valid time is 30 minutes.

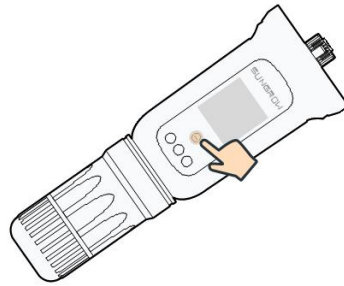


figure 8-1 Enabling the WLAN Hotspot

- step 2 Connect the mobile phone to the WLAN network named as "SG-xxxxxxxxxx" (xxxxxxxxxx is the serial number indicated on the side of the communication module).
- step 3 Open the App to enter the login screen. Tap **Local Access** to enter the next screen.
- step 4 Tap **Confirm**, then enter the password and tap **LOGIN**. Or tap **MANUAL CONNECTION** at the bottom of the interface and select **WiNet-S2**, then enter the password and tap **LOGIN**.



- If the WiFi signal, serial number or inverter related data information cannot be found, unplug and reinsert the WiNet-S2 or press the multi-function button of the WiNet-S2 three times.
- The default account is "user" and the initial password is "pw1111" which should be changed for the consideration of account security. Tap "More" at the lower right corner on home page and choose "Change Password".

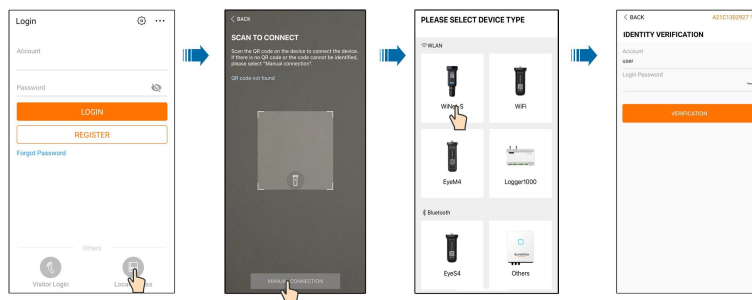


figure 8-2 WLAN Local Access

- step 5 If the inverter is not initialized, navigate to the quick setting screen to initialize the protection parameters. For details, please refer to "**Initial Settings**".

NOTICE

The "**Country/Region**" must be set to the country where the inverter is installed at. Otherwise, the inverter may report errors.

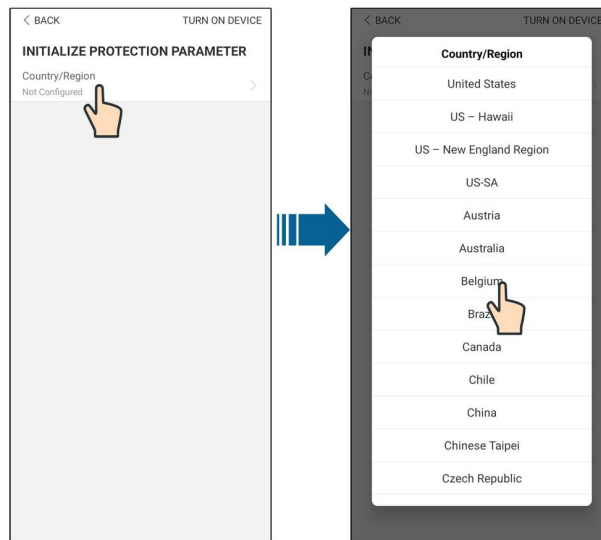


figure 8-3 WLAN Local Access

step 6 After finishing the settings, tap **TUNR ON DEVICE** at the upper right corner and the device will be initialized. The App will send start instructions and the device will start and operate.

step 7 After initialization settings, the App will return automatically to the home page.

-- End

8.5 Initial Settings

8.5.1 Feed-in Limitation

The function of the feed-in limitation is to control the amount of power injected in the grid by the plant. In some situations , this function is also called as **Export limitation** or **Zero export**. The feed-in limitation function requires the using of Smart Energy Meter. Without the Smart Energy Meter, the feed-in limitation function will be unavailable.

table 8-1 Description of feed-in limitation parameters

| Parameter | Default value | Range |
|---|--|-----------------|
| Feed-in Limitation | Off | On / Off |
| Feed-in Limitation Value | Rated power | 0 ~ Rated power |
| Feed-in Limitation Ratio | 100.0% | 0 ~ 100% |
| Rated Power of Original Power Generation Systems | Depends on inverter power of other companies | |

8.5.2 Backup Mode

The backup mode is off by default, the user can set an amount of **Reserved Battery SOC for Off-Grid**. It is the minimum battery level in the on-grid state and will be supplied to the Backup loads in case of grid blackout.

8.6 Function Overview

The App provides parameter viewing and setting functions, as shown in the following figure.

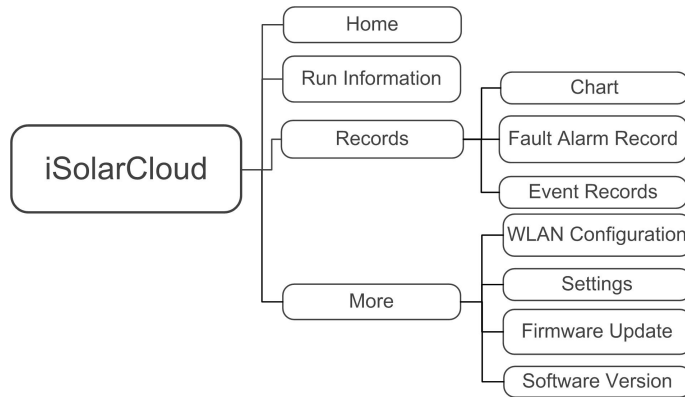


figure 8-4 App Function Tree Map

8.7 Home

Home page of the App is shown in the following figure.

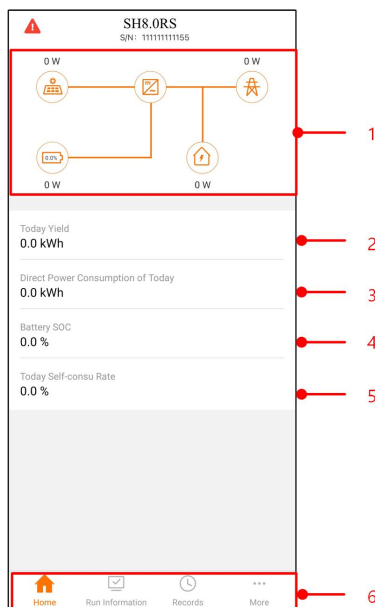



figure 8-5 Home

table 8-2 Home page description

| No. | Name | Description |
|-----|--|--|
| 1 | Load flow chart | Shows the PV power generation power, feed-in power, etc. The line with an arrow indicates energy flow between connected devices, and the arrow pointing indicates energy flow direction. |
| 2 | Today yield | Shows today power generation of the inverter |
| 3 | Direct Power Consumption of Today | Shows electricity directly consumed by loads today |
| 4 | Battery SOC | Indicates remaining battery capacity |
| 5 | Today Self-consu Rate | Indicates today self-consumption rate of the PV system |
| 6 | Navigation bar | Includes menus of Home , Run Information , Records , and More . |

If the inverter runs abnormally, the fault icon  appears on the upper left corner of the screen. Users can tap the icon to view detailed fault information and corrective measures.

8.8 Run Information

Tap **Run Information** on the navigation bar to enter the corresponding screen, as shown in the following figure.

| RUN INFORMATION | |
|------------------------------|------------------|
| PV Information ^ | |
| String 1 Voltage | 0.0 V |
| String 1 Current | 0.00 A |
| String 2 Voltage | 0.0 V |
| String 2 Current | 0.00 A |
| Daily PV Yield | 0.0 kWh |
| Total PV Yield | 0.0 kWh |
| Inverter Information ^ | |
| Running Status | Shut Down |
| Bus Voltage | 0.0 V |
| Internal Air Temperature | 24.9 °C |
| Array Insulation Resistance | 0 kΩ |
| Country (Region) Information | Germany |
| Ripple Control state | No RIPP Schedule |
| Power Limitation Mode | Unlimited Power |

figure 8-6 Run Information

The run information includes the PV information, inverter information, input, output, grid information, load information, and battery information.

8.9 Records

Tap **Records** on the navigation bar to enter the screen, as shown in the following figure.

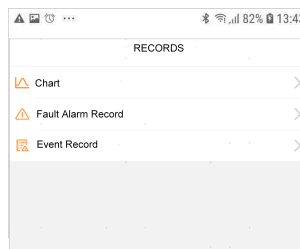


figure 8-7 Records

On **Records** screen, users can view chart and check fault alarm record.

8.9.1 Chart

Tap **Chart** to enter the screen showing daily power generation, as shown in the following figure.

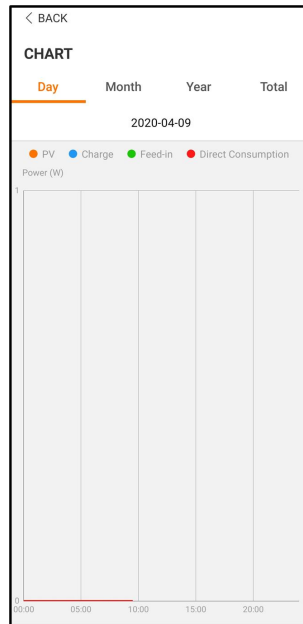


figure 8-8 Power Curve

The App displays power generation records in a variety of forms, including daily power generation graph, monthly power generation histogram, annual power generation histogram, and total power generation histogram.

table 8-3 Description of power generation records

| Item | Description |
|------------------------------------|---|
| Daily power generation graph | Indicates today power generation, charging, feed-in power, and direct consumption power |
| Monthly power generation histogram | Indicates monthly power generation, charging, feed-in power, and direct consumption power |
| Annual power generation histogram | Indicates annual power generation, charging, feed-in power, and direct consumption power |
| Total power generation histogram | Indicates total power generation, charging, feed-in power, and direct consumption power |

8.9.2 Fault Alarm Record

Tap **Fault Alarm Record** to enter the screen, as shown in the following figure.

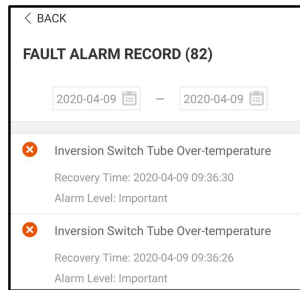


figure 8-9 Fault Alarm Record



Click "📅" to select a time segment and view corresponding records.

Select one of the records in the list and click the record, to view the detailed fault info as shown in following figure.

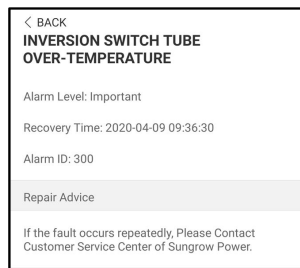


figure 8-10 Detailed fault alarm info

8.9.3 Event Record

Tap **Event Record** to enter the screen, as shown in the following figure.

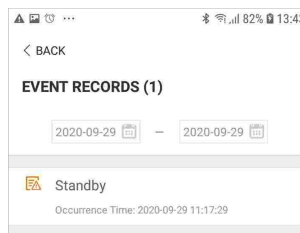


figure 8-11 Event Record



Click "📅" to select a time segment and view corresponding records.

8.10 More

Tap **More** on the navigation bar to enter the screen, as shown in the following figure.


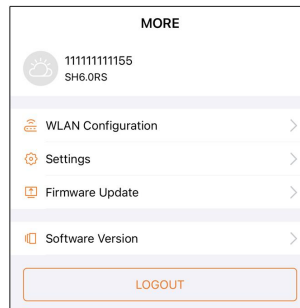


figure 8-12 More

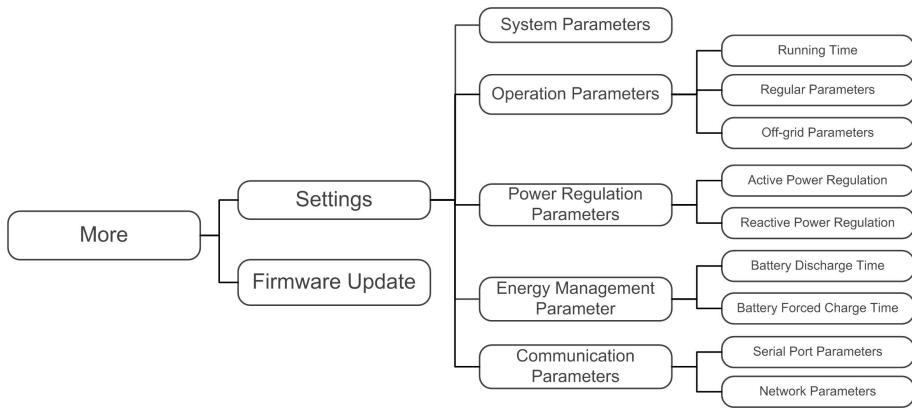

The **More** screen supports the following operations:

- Set parameters including inverter system parameters and energy management parameter.
- Upgrade inverter firmware of the communication module.

8.10.1 System Parameters

Tap **Settings**→**System Parameters** to enter the corresponding interface, as shown in the following figure.

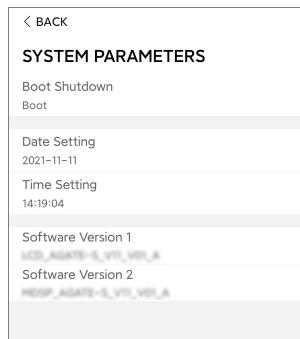


figure 8-13 System Parameters

* The image shown here is for reference only.

Boot/Shutdown

Tap **Boot/Shutdown** to send the boot/shutdown instruction to the inverter.

For Australia and New Zealand, when the DRM state is DRM0, the "Boot" option will be prohibited.

Date Setting/Time Setting

The correct system time is very important. Wrong system time will directly affect the data logging and power generation value. The clock is in 24-hour format.

Software Version

Version information of the current firmware.

8.10.2 Running Time

Tap **Settings**→**Operation Parameters**→**Running Time** to enter the corresponding screen, on which you can set **Connecting Time** and **Reconnecting Time**.

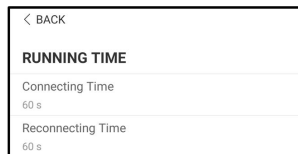


figure 8-14 Running Time

table 8-4 Description of running time parameters

| Parameter | Explanation | Default | Range |
|--------------------------|--|---------|------------|
| Connecting Time | The time that the inverter takes to enter into the running mode from the standby mode in fault-free state | 60s | 10s ~ 900s |
| Reconnecting Time | The time that the inverter takes to recover from the fault state to normal state (the inverter is not running) | 60s | 0s ~ 3600s |

8.10.3 Regular Parameters

Tap **Settings**→**Operation Parameters**→**Regular Parameters** to enter the screen, as shown in the following figure.

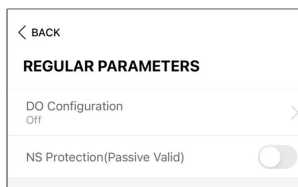


figure 8-15 Regular Parameters

After connecting the load to the DO terminals, a relay control signal will be transmitted. Users can flexibly set the control mode of DO configuration according to individual demand.

table 8-5 The control mode of DO configuration

| Mode | Setting description |
|---------------------|-----------------------------------|
| Off | - |
| Grounding Detection | See "8.10.11 Grounding Detection" |

8.10.4 Off-grid Parameters

Tap **Settings**→**Operation Parameters**→**Off-grid Parameters** to enter the screen, as shown in the following figure.

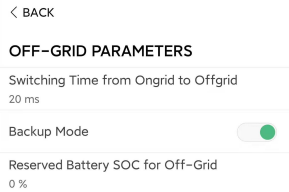


figure 8-16 Off-grid Parameters

Refer to the description in "[8.5.2 Backup Mode](#)".

8.10.5 Active Power Regulation

Tap **Settings**→**Power Regulation Parameters**→**Active Power Regulation** to enter the screen, as shown in the following figure.

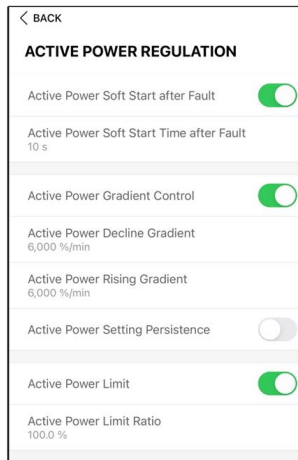


figure 8-17 Active Power Regulation

table 8-6 Description of active power regulation

| Parameter | Description | Default | Range |
|---|--|---------|--------------------|
| Active Power Soft Start after Fault | Switch for activating/deactivating the function of active power soft start after a fault occurs | On | On/Off |
| Active Power Soft Start Time after Fault | The soft start time required for raising active power from 0 to rated value after a fault occurs | 600s | 1s ~ 1200s |
| Active Power Gradient Control | Set whether to enable active power gradient control | On | On/Off |
| Active Power Decline Gradient | Decline gradient of inverter active power per minute | 39%/min | 1%/min ~ 6000%/min |
| Active Power Rising Gradient | Rising gradient of inverter active power per minute | | |
| Active Power Setting Persistence | Switch for activating/deactivating the function of active power setting persistence | Off | On/Off |
| Active Power Limit | Switch for limiting active power | On | On/Off |
| Active Power Limit Ratio | The ratio of active power limit to rated power in percentage | 100.0% | 0 ~ 100% |

8.10.6 Reactive Power Regulation

Tap **Settings**→**Power Regulation Parameters**→**Reactive Power Regulation** to enter the screen, as shown in the following figure.

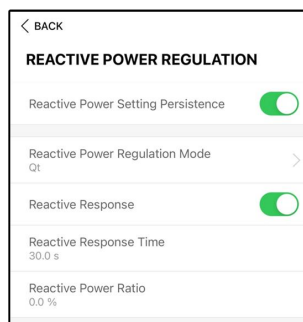


figure 8-18 Reactive Power Regulation

table 8-7 Description of reactive power regulation

| Parameter | Description | Default | Range |
|---|---|---------|-----------------------------|
| Reactive Power Setting Persistence | Switch for activating/deactivating the function of reactive power setting persistence | On | On / Off |
| Reactive Power Regulation Mode | - | Off | Off / PF / Qt / Q(P) / Q(U) |

table 8-8 Descriptions of reactive power regulation mode:

| Mode | Descriptions |
|------|---|
| Off | The PF is fixed at +1.000. |
| PF | The reactive power can be regulated by the parameter PF (Power Factor). |
| Qt | The reactive power can be regulated by the parameter Q-Var limits (in %). |
| Q(P) | The PF changes with the output power of the inverter. |
| Q(U) | The reactive power changes with the grid voltage. |

“Off” Mode

The reactive power regulation function is disabled. The PF is limited to +1.000.

“PF” Mode

The power factor is fixed and reactive power setpoint is calculated according to the current power. The PF ranges from 0.8 leading to 0.8 lagging.

Leading: the inverter is sourcing reactive power to the grid.

Lagging: the inverter is injecting reactive power into the grid.

“Qt” Mode

In the Qt mode, system rated reactive power is fixed, and the system injects reactive power according to the delivered reactive power ratio. The **Reactive Power Ratio** is set through the App.

The setting range of the reactive power ratio is 0~100% or 0~-100%, corresponding to the ranges of inductive and capacitive reactive power regulation respectively.

“Q(P)” Mode

The PF of the inverter output varies in response to the output power of the inverter.

table 8-9 “Q(P)” Mode Parameter Descriptions:

| Parameter | Explanation | Range |
|------------------------|---|---|
| Q(P) Curve | Select corresponding curve according to local regulations | A, B, C* |
| QP_P1 | Output power at P1 on the Q(P) mode curve (in percentage) | 0% ~ 100% |
| QP_P2 | Output power at P2 on the Q(P) mode curve (in percentage) | 20% ~ 100% |
| QP_P3 | Output power at P3 on the Q(P) mode curve (in percentage) | 20% ~ 100% |
| QP_K1 | Power factor at P1 on the Q(P) mode curve | |
| QP_K2 | Power factor at P2 on the Q(P) mode curve | Curve A/C: 0.8 ~ 1 Curve B: -0.6 ~ 0.6 |
| QP_K3 | Power factor at P3 on the Q(P) mode curve | |
| QP_EnterVoltage | Voltage percentage for Q(P) function activation | 100% ~ 110% |
| QP_ExitVoltage | Voltage percentage for Q(P) function deactivation | 90% ~ 100% |
| QP_ExitPower | Power percentage for Q(P) function deactivation | 1% ~ 100% |
| QP_EnableMode | Unconditional activation/deactivation of Q(P) function | Yes / No |

* Curve C is reserved and consistent with Curve A currently.

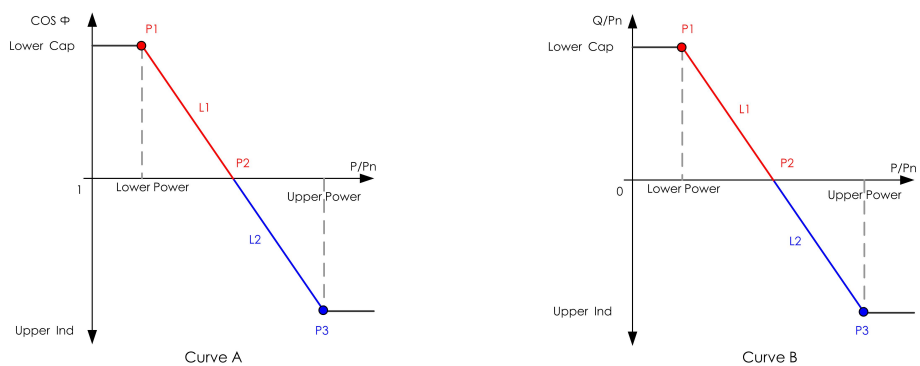


figure 8-19 Q(P) Curve

“Q(U)” Mode

The reactive power output of the inverter will vary in response to the grid voltage.

table 8-10 “Q(U)” Mode Parameter Descriptions:

| Parameter | Explanation | Range |
|-------------------------|---|-------------------------------|
| Q(U) curve | Select corresponding curve according to local regulations | A, B, C* |
| Hysteresis Ratio | Voltage hysteresis ratio on the Q(U) mode curve | 0 ~ 5% |
| QU_V1 | Grid voltage limit at P1 on the Q(U) mode curve | 77% ~ 123% |
| QU_Q1 | Value of Q/Sn at P1 on the Q(U) mode curve | -60% ~ 0 |
| QU_V2 | Grid voltage limit at P2 on the Q(U) mode curve | 77% ~ 123% |
| QU_Q2 | Value of Q/Sn at P2 on the Q(U) mode curve | -60% ~ 60% |
| QU_V3 | Grid voltage limit at P3 on the Q(U) mode curve | 77% ~ 123% |
| QU_Q3 | Value of Q/Sn at P3 on the Q(U) mode curve | -60% ~ 60% |
| QU_V4 | Grid voltage limit at P4 on the Q(U) mode curve | 77% ~ 123% |
| QU_Q4 | Value of Q/Sn at P4 on the Q(U) mode curve | 0 ~ 60% |
| QU_EnterPower | Active power for Q(U) function activation | 20% ~ 100% |
| QU_ExitPower | Active power for Q(U) function deactivation | 1% ~ 20% |
| QU_EnableMode | Unconditional activation/deactivation of Q(U) function | Yes / No / Yes, Limited by PF |

* Curve C is reserved and consistent with Curve A currently.



When selecting Q(U) curve model, select Q(U) model voltage in AU, and Q(U) model ratio in other regions.

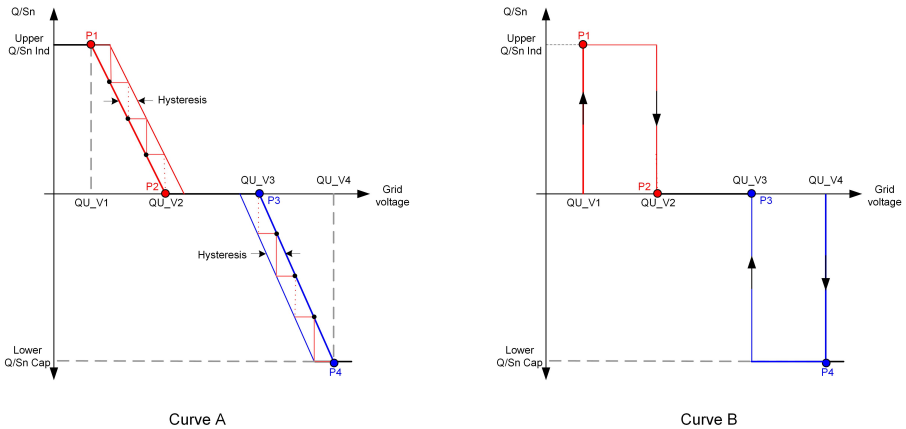


figure 8-20 Q(U) Curve

8.10.7 Battery Discharge Time

Tap **Settings**→**Energy Management Parameter**→**Battery Discharge Time** to enter the corresponding screen, as shown in the following figure.

These are the times of day at which the battery is allowed to discharge to the house loads.

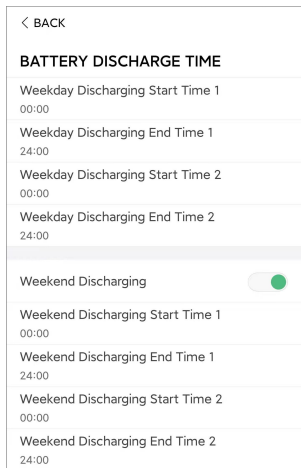


figure 8-21 Battery Discharge Time

8.10.8 Battery Forced Charge Time

Tap **Settings**→**Energy Management Parameter**→**Battery Forced Charge Time** to enter the corresponding screen.

These are the times of day at which the inverter will start charging the battery with rated AC power.

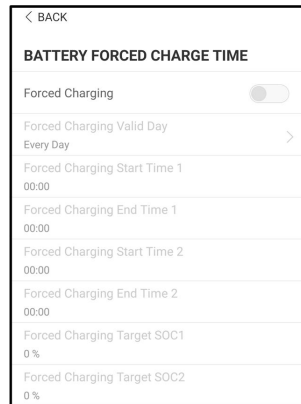


figure 8-22 Battery Forced Charge Time

When there is no PV power, the power imported from the grid charges the energy system during the time period until the target SOC is reached.

It is recommended to set the time period in off-peak tariff time. The time period 1 is in priority to the time period 2 if two periods overlap. The charging energy comes from the excess PV energy in priority and then from the grid. The inverter will take charging power from the grid in the case of PV energy shortage.

8.10.9 Communication Parameters

Tap **Settings**→**Communication Parameters** to enter the screen, as shown in the following figure.





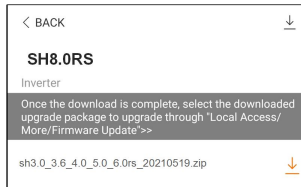
figure 8-23 Communication Parameters


- The device address ranges from 1 to 246.
- The IP address, gateway, subnet mask, preferred DNS server and alternate DNS server can be modified only when the DHCP is set to Off.
- Acquire the IP address, gateway, subnet mask, preferred DNS server and alternate DNS server from the network professional.


8.10.10 Firmware Update

To avoid download failure due to poor on-site network signal, it is recommended to download the firmware package to the mobile device in advance.

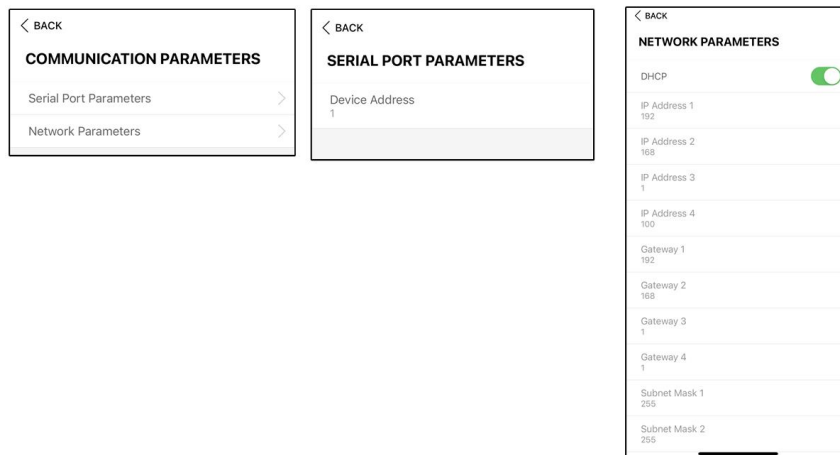
- step 1 Enable the "Mobile data" of the mobile device.
- step 2 Open the App, enter the account and password on the login screen. Tap **Login** to enter the home screen.
- step 3 Tap **More**→**Firmware Download** to enter corresponding screen on which you can view the device list.
- step 4 Select the device model before downloading the firmware. Tap the device name in the device list to enter the firmware upgrade package detail interface, and tap  behind the firmware upgrade package to download it.



- step 5 Return to the **Firmware Download** screen, tap  in the upper right corner of the screen to view the downloaded firmware upgrade package.
- step 6 Login the App via local access mode. Refer to "8.4 Login".
- step 7 Tap **More** on the App home screen and then tap **Firmware Update**.
- step 8 Tap the upgrade package file, a prompt box will pop up asking you to upgrade the firmware with the file, tap **CONFIRM** to perform the firmware upgrade.

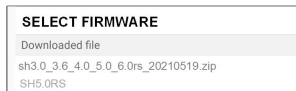

- step 9 Wait for the file to be uploaded. When the upgrade is finished, the interface will inform you of the upgrade completion. Tap **Complete** to end the upgrade.

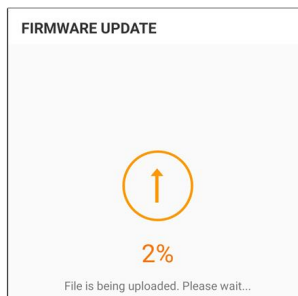

-- End

8.10.11 Grounding Detection



Contact your distributor to obtain the advanced account and corresponding password before setting the earth detection parameters. If the distributor is unable to provide the required information, contact SUNGROW.

Unauthorized personnel are not allowed to log in with this account. Otherwise, SUNGROW shall not be held liable for any damages caused.

Tap **More**→**Settings**→**Operation Parameters**→**Grounding Detection** to enter the corresponding screen.

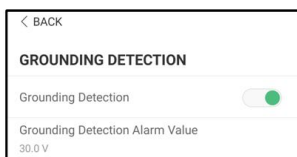


figure 8-24 Grounding Detection

If the grounding detection is enabled, the DO relay will switch on automatically to signal the external alarm if the value exceeds the grounding detection alarm value. The buzzer inside the inverter will beep.

The PV insulation resistance fault (fault sub-code 039) will trigger the DO relay to signal the external alarm.

8.10.12 Frequency Shift Power Control

Tap **More**→**Settings**→**Operation Parameters**→**Other Parameters** to enter the corresponding screen.



| Parameter | Default value | Range |
|--------------------------------------|---------------|------------------|
| Frequency Shift Power Control | OFF | ON / OFF |
| Frequency Shift Test | OFF | ON / OFF |
| Set Test Frequency | 50.00 Hz | 50.00 ~ 55.00 Hz |

If PV inverters are connected on the AC side during battery-backup operation, the hybrid inverter must be able to limit their output power. This limitation becomes necessary when, for example, the hybrid inverter's battery is fully charged and the power available from the PV system exceeds the power requirement of the connected loads.

To prevent excess energy from overcharging the battery, the hybrid inverter automatically detects the problem and changes the frequency at the AC output. This frequency adjustment is analyzed by the PV inverter. As soon as the power frequency of the battery-backup grid

increases beyond the value specified in **Set Test Frequency**, the PV inverter limits its output power accordingly.

Before retrofitting the existing PV system to an off-grid port, the **Frequency Shift Power Control** parameter needs to be enabled. It must be ensured that the connected PV inverters limit their power at the AC output via the hybrid inverter due to changes in frequency. The frequency-dependent active power limitation PF must be set in the PV inverter.




When the battery SOC is greater than 85%, the Hybrid inverter will standby before starting when switching off-grid, and does not support seamless switching.

8.10.13 Import Power Limit

Import power is the sum of the battery charging power and the load power of the Backup. Following local regulations, calculate the maximum system tolerable power based on the wire and circuit breaker that required by the selected model, and the value can be set as the **Import Power Limit**. The setup steps are shown below.

Tap **More**→**Settings**→**Operation Parameters**→**Other Parameters** to enter the corresponding screen.

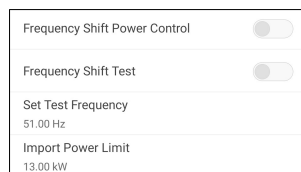

9 System Decommissioning

9.1 Decommissioning the Inverter

9.1.1 Disconnecting Inverter

⚠ CAUTION

Danger of burns!

Even if the inverter is shut down, it may still be hot and cause burns. Wear protective gloves before operating the inverter after it cools down.

For maintenance or other service work, the inverter must be switched off.

Proceed as follows to disconnect the inverter from the AC and DC power sources. Lethal voltages or damage to the inverter will follow if otherwise.

- step 1 Disconnect the external AC circuit breaker and prevent it from inadvertent reconnection.
- step 2 Rotate the DC switch to the "OFF" position for disconnecting all of the PV string inputs.
- step 3 Wait about 10 minutes until the capacitors inside the inverter completely discharge.
- step 4 Ensure that the DC cable is current-free with a current clamp.

-- End

9.1.2 Dismantling the Inverter

⚠ CAUTION

Risk of burn injuries and electric shock!

Do not touch any inner live parts until for at least 10 minutes after disconnecting the inverter from the utility grid and the PV input.



Before dismantling the inverter, disconnect both AC and DC connections.

- step 1 Refer to "[6 Electrical Connection](#)" for the inverter disconnection of all cables in reverse steps.
- step 2 Dismantle the inverter referring to "[5 Mechanical Mounting](#)" in reverse steps.
- step 3 If necessary, remove the wall-mounting bracket from the wall.
- step 4 If the inverter will be reinstalled in the future, please refer to "[4.3 Inverter Storage](#)" for a proper conservation.

-- End

9.1.3 Disposal of Inverter

Users take the responsibility for the disposal of the inverter.

WARNING

Please scrap the inverter in accordance with relevant local regulations and standards to avoid property losses or casualties.

NOTICE

Some parts of the inverter may cause environmental pollution. Please dispose of them in accordance with the disposal regulations for electronic waste applicable at the installation site.

9.2 Decommissioning the Battery

Decommission the battery in the system after the inverter is decommissioned. Proceed as follows to decommission a Li-ion battery.

- step 1 Disconnect the DC circuit breaker between the battery and the inverter.
- step 2 Disconnect the communication cable between the battery and the inverter.
- step 3 Wait for about 1 minute and then use the multimeter to measure the port voltage of the battery.
- step 4 If the battery port voltage is zero, disconnect the power cables from the battery module.

-- End



For disposal of this product, please call the phone number listed in the warranty booklet provided at the time of purchase.

10 Troubleshooting and Maintenance

10.1 Troubleshooting

Once the inverter fails, the fault information can be displayed on the App interface. If the inverter is equipped with an LCD screen, the fault information can be viewed on it.

The fault codes and troubleshooting methods of all Hybrid inverters are detailed in the table below. The device you purchase may only contain some of the fault information, and when the inverter fails, you can check the corresponding information through the fault codes from the mobile App.

| Alarm ID | Alarm Name | Corrective Measures |
|--------------|-------------------|---|
| 2, 3, 14, 15 | Grid Overvoltage | <p>Generally, the inverter will be reconnected to the grid after the grid returns to normal. If the fault occurs repeatedly:</p> <ol style="list-style-type: none">1. Measure the actual grid voltage, and contact the local electric power company for solutions if the grid voltage is higher than the set value.2. Check whether the protection parameters are appropriately set via the App or the LCD. Modify the overvoltage protection values with the consent of the local electric power operator.3. If the fault still exists, contact SUNGROW. |
| 4, 5 | Grid Undervoltage | <p>Generally, the inverter will be reconnected to the grid after the grid returns to normal. If the fault occurs repeatedly:</p> <ol style="list-style-type: none">1. Measure the actual grid voltage, and contact the local electric power company for solutions if the grid voltage is lower than the set value.2. Check whether the protection parameters are appropriately set via the App or the LCD.3. Check whether the AC cable is firmly in place.4. If the fault still exists, contact SUNGROW. |

| Alarm ID | Alarm Name | Corrective Measures |
|----------|------------------------|--|
| 8 | Grid Overfrequency | <p>Generally, the inverter will be reconnected to the grid after the grid returns to normal. If the fault occurs repeatedly:</p> <ol style="list-style-type: none"> 1. Measure the actual grid frequency, and contact the local electric power company for solutions if the grid frequency is beyond the set range. |
| 9 | Grid Underfrequency | <ol style="list-style-type: none"> 2. Check whether the protection parameters are appropriately set via the App or the LCD. 3. If the fault still exists, contact SUNGROW. |
| 10 | Grid Power Outage | <p>Generally, the inverter will be reconnected to the grid after the grid returns to normal. If the fault occurs repeatedly:</p> <ol style="list-style-type: none"> 1. Check whether the grid supplies power reliably. 2. Check whether the AC cable is firmly in place. 3. Check whether the AC cable is connected to the correct terminal (whether the live wire and the N wire are correctly in place). 4. Check whether the AC circuit breaker is connected. 5. If the fault still exists, contact SUNGROW. |
| 12 | Excess Leakage Current | <ol style="list-style-type: none"> 1. The fault can be caused by poor sunlight or damp environment, and generally the inverter will be reconnected to the grid after the environment is improved. 2. If the environment is normal, check whether the AC and DC cables are well insulated. 3. If the fault still exists, contact SUNGROW. |
| 13 | Grid Abnormal | <p>Generally, the inverter will be reconnected to the grid after the grid returns to normal. If the fault occurs repeatedly:</p> <ol style="list-style-type: none"> 1. Measure the actual grid, and contact the local electric power company for solutions if the grid parameter exceeds the set range. 2. If the fault still exists, contact SUNGROW. |

| Alarm ID | Alarm Name | Corrective Measures |
|---------------------------|-----------------------------|--|
| 17 | Grid Voltage Imbalance | <p>Generally, the inverter will be reconnected to the grid after the grid returns to normal. If the fault occurs repeatedly:</p> <ol style="list-style-type: none"> 1. Measure the actual grid voltage. If grid phase voltages differ greatly, contact the electric power company for solutions. 2. If the voltage difference between phases is within the permissible range of the local power company, modify the grid voltage imbalance parameter through the App or the LCD. 3. If the fault still exists, contact SUNGROW. |
| 28, 29, 208, 212, 448-479 | PV Reverse Connection Fault | <ol style="list-style-type: none"> 1. Check whether the corresponding string is of reverse polarity. If so, disconnect the DC switch and adjust the polarity when the string current drops below 0.5 A. 2. If the fault still exists, contact SUNGROW. <p>*The code 28 to code 29 are corresponding to PV1 to PV2 respectively.</p> <p>*The code 448 to code 479 are corresponding to string 1 to string 32 respectively.</p> |
| 532-547, 564-579 | PV Reverse Connection Alarm | <ol style="list-style-type: none"> 1. Check whether the corresponding string is of reverse polarity. If so, disconnect the DC switch and adjust the polarity when the string current drops below 0.5 A. 2. If the alarm still exists, contact SUNGROW. <p>*The code 532 to code 547 are corresponding to string 1 to string 16 respectively.</p> <p>*The code 564 to code 579 are corresponding to string 17 to string 32 respectively.</p> |

| Alarm ID | Alarm Name | Corrective Measures |
|---------------------|--|---|
| 548-563, 580-595 | PV Abnormal Alarm | <p>Check whether the voltage and current of the inverter is abnormal to determine the cause of the alarm.</p> <ol style="list-style-type: none"> 1. Check whether the corresponding module is sheltered. If so, remove the shelter and ensure module cleanness. 2. Check whether the battery board wiring is loose, if so, make it reliably connected. 3. Check if the DC fuse is damaged. If so, replace the fuse. 4. If the alarm still exists, contact SUNGROW. <p>*The code 548 to code 563 are corresponding to string 1 to string 16 respectively.</p> <p>*The code 580 to code 595 are corresponding to string 17 to string 32 respectively.</p> |
| 37 | Excessively High Ambient Temperature | <p>Generally, the inverter will resume operation when the internal or module temperature returns to normal.</p> <p>If the fault persists:</p> <ol style="list-style-type: none"> 1. Check whether the ambient temperature of the inverter is too high; 2. Check whether the inverter is in a well-ventilated place; 3. Check whether the inverter is exposed to direct sunlight. Shield it if so; 4. Check whether the fan is running properly. Replace the fan if not; 5. If the fault still exists, contact SUNGROW. |
| 43 | Excessively Low Ambient Temperature | <p>Stop and disconnect the inverter. Restart the inverter when the ambient temperature rises within the operation temperature range.</p> |

| Alarm ID | Alarm Name | Corrective Measures |
|----------|--|---|
| 39 | Low System Insulation Resistance | <p>Wait for the inverter to return to normal. If the fault occurs repeatedly:</p> <ol style="list-style-type: none"> 1. Check whether the ISO resistance protection value is excessively high via the app or the LCD, and ensure that it complies with the local regulations. 2. Check the resistance to ground of the string and DC cable. Take corrective measures in case of short circuit or damaged insulation layer. 3. If the cable is normal and the fault occurs on rainy days, check it again when the weather turns fine. 4. If there are batteries, check whether battery cables are damaged and whether terminals are loose or in poor contact. If so, replace the damaged cable and secure terminals to ensure a reliable connection. 5. If the fault still exists, contact SUNGROW. |
| 106 | Grounding Cable Fault | <ol style="list-style-type: none"> 1. Check whether the AC cable is correctly connected. 2. Check whether the insulation between the ground cable and the live wire is normal. 3. If the fault still exists, contact SUNGROW. |
| 88 | Electric Arc Fault | <ol style="list-style-type: none"> 1. Disconnect the DC power supply, and check whether any DC cable is damaged, the connection terminal or fuse is loose or there is a weak contact. If so, replace the damaged cable, fasten the terminal or fuse, and replace the burnt component. 2. After performing step 1, reconnect the DC power supply, and clear the electric arc fault via the App or the LCD, after that the inverter will return to normal. 3. If the fault still exists, contact SUNGROW. |
| 51 | Off-Grid Load OverPower Fault | <ol style="list-style-type: none"> 1. Reduce the load power at the off-grid port or cut off some loads. 2. If the fault still exists, contact SUNGROW. |
| 84 | Reverse Connection Alarm of the Meter/CT | <ol style="list-style-type: none"> 1. Check if the meter is wrongly connected. 2. Check if the input and output wiring of the meter is reversed. 3. If the existing system is enabled, please check if the rated power setting of the existing inverter is correct. |

| Alarm ID | Alarm Name | Corrective Measures |
|---------------------------------|---------------------------------------|---|
| 514 | Meter Communication Abnormal Alarm | <ol style="list-style-type: none"> 1. Check whether the communication cable and the terminals are abnormal. If so, correct them to ensure reliable connection. 2. Reconnect the communication cable of the meter. 3. If the alarm still exists, contact SUNGROW. |
| 323 | Grid Confrontation | <ol style="list-style-type: none"> 1. Check whether the output port is connected to actual grid. Disconnect it from the grid if so. 2. If the fault still exists, contact SUNGROW. |
| 75 | Inverter Parallel Communication Alarm | <ol style="list-style-type: none"> 1. Check whether the communication cable and the terminals are abnormal. If so, correct them to ensure reliable connection. 2. Reconnect the communication cable of the meter. 3. If the alarm still exists, contact SUNGROW. |
| 714 | BMS Communication Fault | <ol style="list-style-type: none"> 1. Check whether the communication cable and the terminals are abnormal. If so, correct them to ensure reliable connection. 2. Reconnect the communication cable of the meter. 3. If the fault still exists, contact SUNGROW. |
| 716 | Abnormal Battery Connection | <ol style="list-style-type: none"> 1. Check whether the battery is reversely connected or not connected. If so, correct the battery power cable connection. 2. If the fault still exists, contact SUNGROW. |
| 932–935, 937, 939–943, 964, 840 | Battery Alarm | <p>Generally, the battery can automatically recover. In case the alarm persist for a long time:</p> <ol style="list-style-type: none"> 1. If the alarm is caused by ambient temperature, such as over temperature alarm or low temperature alarm, take measures to change the ambient temperature, such as improving heat dissipation conditions. 2. If the fault persists, contact battery manufacturer. |

| Alarm ID | Alarm Name | Corrective Measures |
|---|---------------|---|
| 703, 707, 708, 711, 712, 715, 717, 732– 737, 739– 747, 832– 837, 839, 841, 844, 864, 866– 868, 870, 1000, 1001 | Battery Fault | <ol style="list-style-type: none"> 1. In case of abnormal battery voltage, check whether the battery power cable connection is abnormal (reverse connection, loose, etc.). If so, correct it to ensure reliable connection. 2. Check whether the battery real-time voltage is abnormal if the battery power cable is correctly connected. If so, contact the battery manufacturer. If not, contact SUNGROW. 3. In case of abnormal battery temperature, take measures to change the ambient temperature, such as improving heat dissipation conditions. 4. If the fault persists, contact battery manufacturer. |
| 7, 11, 16, 19–25, 30– 34, 36, 38, 40–42, 44– 50, 52–58, 60–69, 85, 87, 92, 93, 100–105, 107–114, 116–124, 200–211, 248–255, 300–322, 324–328, 401–412, 600–603, 605, 608, 612, 616, 620, 622– 624, 800, 802, 804, 807, 1096– 1122 | System Fault | <ol style="list-style-type: none"> 1. Wait for the inverter to return to normal. 2. Disconnect the AC and DC switches, and disconnect the battery side switches if there are batteries. Close the AC and DC switches in turn 15 minutes later and restart the system. 3. If the fault still exists, contact SUNGROW. |

| Alarm ID | Alarm Name | Corrective Measures |
|---|-----------------------------------|--|
| 59, 70–74, 76–83, 89, 216–218, 220–233, 432–434, 500–513, 515–518, 635–638, 900, 901, 910, 911, 996 | System Alarm | <ol style="list-style-type: none"> 1. The inverter can continue running. 2. Check whether the related wiring and terminal are abnormal, check whether there are any foreign materials or other environmental abnormalities, and take corresponding corrective measures when necessary. 3. If the alarm persists, please contact SUNGROW. |
| 264-283 | MPPT Reverse Connection | <ol style="list-style-type: none"> 1. Check whether the corresponding string is of reverse polarity. If so, disconnect the DC switch and adjust the polarity when the string current drops below 0.5 A. 2. If the fault still exists, contact SUNGROW. <p>*The code 264 to code 279 are corresponding to string 1 to string 20 respectively.</p> |
| 332-363 | Boost Capacitor Overvoltage Alarm | <ol style="list-style-type: none"> 1. The inverter can continue running. 2. Check whether the related wiring and terminals are abnormal, check whether there are any foreign materials or other environmental abnormalities, and take corresponding corrective measures when necessary. 3. If the alarm persists, please contact SUNGROW. |
| 364-395 | Boost Capacitor Overvoltage Fault | <ol style="list-style-type: none"> 1. Disconnect the AC and DC switches, and disconnect the battery side switches if there are batteries. Close the AC and DC switches in turn 15 minutes later and restart the system. 2. If the fault still exists, contact SUNGROW. |

| Alarm ID | Alarm Name | Corrective Measures |
|-----------------------------|-----------------------|--|
| 1548-1579 | String Current Reflux | <ol style="list-style-type: none"> 1. Check whether the number of PV modules of the corresponding string is less than other strings. If so, disconnect the DC switch and adjust the PV module configuration when the string current drops below 0.5 A. 2. Check whether the PV module is shaded. 3. Disconnect the DC switch to check whether the open circuit voltage is normal when the string current drops below 0.5 A. If so, check the wiring and configuration of the PV module. 4. Check whether the orientation of the PV module is abnormal. |
| 1600 - 1615, 1632 - 1655 | PV Grounding Fault | <ol style="list-style-type: none"> 1. When the fault occurs, it is forbidden to directly disconnect the DC switch and unplug PV terminals when the direct current is greater than 0.5 A; 2. Wait until the direct current of the inverter falls below 0.5 A, then disconnect the DC switch and unplug the faulty strings; 3. Do not reinsert the faulty strings before the grounding fault is cleared; 4. If the fault is not caused by the foregoing reasons and still exists, contact Sungrow Customer Service. |
| 1616 | System Hardware Fault | <ol style="list-style-type: none"> 1. It is prohibited to disconnect the DC switch when the DC current is greater than 0.5 A when the fault occurs. 2. Disconnect the DC switch only when the inverter DC side current drops below 0.5 A. 3. It is prohibited to power up the inverter again. Please contact Sungrow Customer Service. |



If the communication cable between the hybrid inverter and the battery is not connected correctly during the first installation, the battery may not work properly or the parameter information of the battery may not be displayed on the inverter. Please check the communication cable to ensure a correct connection.

10.2 Maintenance

10.2.1 Maintenance Notices

The DC switch can be secured with a lock in the OFF position or a certain angle beyond the OFF position.(For countries “AU” and “NZ”)

DANGER

Risk of inverter damage or personal injury due to incorrect service!

- **Be sure to use special insulation tools when perform high-voltage operations.**
- **Before any service work, first disconnect the grid-side AC circuit breaker and check the inverter status. If the inverter indicator is off, please wait until night to disconnect the DC switch. If the inverter indicator is on, directly disconnect the DC switch.**
- **After the inverter is powered off for 10 minutes, measure the voltage and current with professional instrument. Only when there is no voltage nor current can operators who wear protective equipment operate and maintain the inverter**
- **Even if the inverter is shut down, it may still be hot and cause burns. Wear protective gloves before operating the inverter after it cools down.**
- **When maintaining the product, it is strictly prohibited to open the product if there is an odor or smoke or if the product appearance is abnormal. If there is no odor, smoke, or obvious abnormal appearance, repair or restart the inverter according to the alarm corrective measures. Avoid standing directly in front of the inverter during maintenance.**

CAUTION

To prevent misuse or accidents caused by unrelated personnel: Post prominent warning signs or demarcate safety warning areas around the inverter to prevent accidents caused by misuse.

NOTICE

Restart the inverter only after removing the fault that impairs safety performance. As the inverter contains no component parts that can be maintained, never open the enclosure, or replace any internal components.

To avoid the risk of electric shock, do not perform any other maintenance operations beyond those described in this manual. If necessary, contact your distributor first. If the problem persists, contact SUNGROW. Otherwise, the losses caused is not covered by the warranty.

NOTICE

Touching the PCB or other static sensitive components may cause damage to the device.

- **Do not touch the circuit board unnecessarily.**
- **Observe the regulations to protect against electrostatic and wear an anti-static wrist strap.**

10.2.2 Routine Maintenance

| Item | Method | Period |
|------------------------------|--|---|
| Device clean | Check the temperature and dust of the inverter. Clean the inverter enclosure if necessary. | Six months to a year (depending on the dust contents in air) |
| Electrical connection | Check whether all cable are firmly connected in place. Check whether there is damage to the cables, especially the surface in contact with metal. | 6 months after commissioning and then once or twice a year |
| General status of the system | <ul style="list-style-type: none"> • Visual check for any damage or deformation of the inverter. • Check any abnormal noise during the operation. • Check each operation parameter. • Be sure that nothing covers the heat sink of the inverter. | Every 6 months |

11 Appendix

11.1 Technical Data

| Parameter | SH8.0RS | SH10RS |
|---|------------------------------------|----------------------------------|
| Input (DC) | | |
| Recommended max. PV input power | 16000 Wp | 20000 Wp |
| Max. PV input voltage | 600 V | |
| Min. operating PV voltage / Start-up input voltage | 40 V / 50 V | |
| Rated PV input voltage | 360 V | |
| MPP voltage range | 40 V - 560 V | |
| MPP voltage range for rated power | 190 V - 480 V | 235 V - 480 V |
| No. of independent MPP inputs | 4 | |
| Default No. of PV strings per MPPT | 1 | |
| Max. PV input current | 64 A (16 A / 16 A / 16 A / 16 A) | |
| Max. DC short-circuit current | 80 A (20 A / 20 A / 20 A / 20 A) | |
| Input / Output (AC) | | |
| Max. AC input power from grid | 14500 VA | |
| Rated AC output power | 8000 W | 10000 W 9999 W for Australia |
| Max. AC output apparent power | 8000 VA | 10000 VA 9999VA for Australia |
| Max. AC output current | 36.4 A | 45.5 A |
| Rated AC voltage | 1 / N / PE, 220 V / 230 V / 240V | |
| AC voltage range | 154 V - 276 V | |
| Rated grid frequency | 50 Hz / 60Hz | |
| Grid frequency range | 45 Hz – 55 Hz / 55 Hz – 65 Hz | |
| Harmonic (THD) | < 3 % (of rated power) | |
| Power factor at rated power / Adjustable power factor | > 0.99 / 0.8 leading – 0.8 lagging | |
| Feed-in phases / connection phases | 1 / 1 | |

| Parameter | SH8.0RS | SH10RS |
|---|---|---------------|
| Efficiency | | |
| Max. efficiency / European efficiency | 97.4% / 96.8% | 97.5% / 97.1% |
| Protection | | |
| Grid monitoring | | Yes |
| DC reverse polarity protection | | Yes |
| AC short circuit protection | | Yes |
| Leakage current protection | | Yes |
| Surge Protection | DC Type II / AC Type II * | |
| DC switch (solar) | | Yes |
| PID Zero | | Yes |
| Battery input reverse polarity protection | | Yes |
| Protective Class | I | |
| Overvoltage Category | III for AC, II for PV & BAT | |
| Active Anti-Islanding Method | Frequency Shift | |
| Battery Data | | |
| Battery type | Li-ion battery | |
| Battery voltage | 80 V - 460 V | |
| Max. charge / discharge current | 50 A*** / 50 A** | |
| Max. charge / discharge power | 10000 W / 10000 W | |
| General Data | | |
| Dimensions (W x H x D) | 605 mm x 435 mm x 181 mm | |
| Weight | 29 kg | |
| Mounting method | Wall-mounting bracket | |
| Topology (Solar / Battery) | Transformerless / Transformerless | |
| Degree of protection | IP65 | |
| Operating ambient temperature range | -25°C to 60°C | |
| Allowable relative humidity range | 0 - 100 % | |
| Cooling method | Natural convection | |
| Max. operating altitude | 4000 m | |
| Noise (typical) | 35 dB (A) | |
| Display | LED digital display and LED indicator | |
| Communication | RS485, WLAN, Ethernet, CAN | |
| DI / DO | DI*1 / DO*2 / DRM0 | |
| DC connection type | MC4 (PV, Max.6mm ²) / Plug and play connector (battery, Max.10mm ²) | |

| Parameter | SH8.0RS | SH10RS |
|--------------------------------------|---|--------------------|
| AC connection type | Plug and play connector (Max.16mm ²) | |
| Country of manufacture | China | |
| Pollution degree | 3 | |
| Backup Data (on grid mode) | | |
| Rated output power for backup load | 14500 W | |
| Rated output current for backup load | 63 A | |
| Backup Data (off-grid mode) | | |
| Rated voltage | 1 / N / PE, 220 V / 230 V / 240 V (±2 %) | |
| Frequency range | 50 Hz / 60 Hz (±0.2 %) | |
| Total output THDv for linear load | < 2 % | |
| Switch time to emergency mode | < 10 ms | |
| Rated output power | 8000 W / 8000 VA | 10000 W / 10000 VA |
| Peak output power | 13680 VA , 10s | |

* Only when the DC switch is set to "ON", the DC Type II is able to provide effective protection against electrical surges.

** With SBR series batteries, the maximum charge and discharge current is 30A.

11.2 Quality Assurance

When product faults occur during the warranty period, SUNGROW will provide free service or replace the product with a new one.

Evidence

During the warranty period, the customer shall provide the product purchase invoice and date. In addition, the trademark on the product shall be undamaged and legible. Otherwise, SUNGROW has the right to refuse to honor the quality guarantee.

Conditions

- After replacement, unqualified products shall be processed by SUNGROW.
- The customer shall give SUNGROW a reasonable period to repair the faulty device.

Exclusion of Liability

In the following circumstances, SUNGROW has the right to refuse to honor the quality guarantee:

- The free warranty period for the whole machine/components has expired.
- The device is damaged during transport.
- The device is incorrectly installed, refitted, or used.
- The device operates in harsh conditions beyond those described in this manual.

- The fault or damage is caused by installation, repairs, modification, or disassembly performed by a service provider or personnel not from SUNGROW.
- The fault or damage is caused by the use of non-standard or non-SUNGROW components or software.
- The installation and use range are beyond stipulations of relevant international standards.
- The damage is caused by unexpected natural factors.

For faulty products in any of above cases, if the customer requests maintenance, paid maintenance service may be provided based on the judgment of SUNGROW.

11.3 Contact Information

In case of questions about this product, please contact us.

We need the following information to provide you the best assistance:

- Model of the device
- Serial number of the device
- Fault code/name
- Brief description of the problem

For detailed contact information, please visit: <https://en.sungrowpower.com/contactUS>