

CLIPSAL®

by Schneider Electric

Clipsal Saturn Socket Outlets

Fascia Removal Instructions

⚠ WARNING

 
HAZARD OF ELECTRIC SHOCK OR ARC FLASH

This product must only be installed by a licensed electrical contractor or other persons authorised by legislation to work on the fixed wiring of any electrical installation.

Failure to follow these instructions can result in death, serious injury or equipment damage.


Fascia Removal Process

To remove front fascia from grid please follow the steps:




1.

1. Locate screwdriver slot on the edge of the product.
2. Insert a flat blade screwdriver into the slot.
3. Using a levering action remove the front fascia.

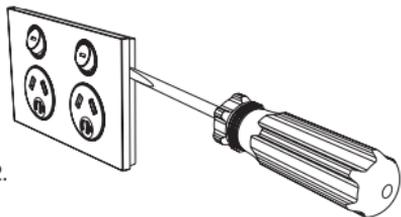

2.

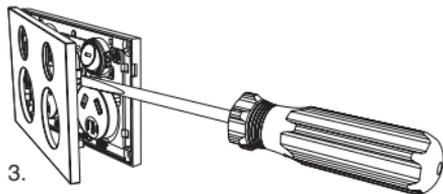

3.

Products in This Range

The fascia can be removed from the following products in the same manner:

Power outlet single 250V 10A	4015/Z4015
Power outlet single 250V 10A - suit lighting	4015L/Z4015L
Power outlet double 250V 10A	4025/Z4025
Power outlet quad 250V 10A	4025H2/Z4025H2
Power outlet double 250V 10A with 10A extra switch (non-removable)	4025X/Z4025X
Power outlet double 250V 10A with 16A extra switch (removable)	4025XA/Z4025XA

Schneider Electric (Australia) Pty Ltd

Contact us: clipsal.com/feedback

clipsal.com

National Customer Care Enquiries:

Tel 1300 2025 25

Fax 1300 2025 56

Schneider Electric (Australia) Pty Ltd reserves the right to change specifications, modify designs and discontinue items without incurring obligation and whilst every effort is made to ensure that descriptions, specifications and other information in this catalogue are correct, no warranty is given in respect thereof and the company shall not be liable for any error therein.

© 2014 Schneider Electric. All Rights Reserved.

Trademarks are owned by Schneider Electric Industries SAS or its affiliated companies.