

## DUKE2 4 WATTAGES SELECTABLE LED BATTEN IP20 2FT/4FT/5FT WHITE CCT3 SELECTABLE

RDKX06CCT3-01 RDKX12CCT3-01 RDKX15CCT3-01

**PLEASE READ INSTRUCTION BEFORE COMMENCING INSTALLATION AND RETAIN FOR FUTURE REFERENCES. ! Electrical products can cause death or injury, or damage to property. The installation must be carried out by a qualified electrician.**

**Note:**

The luminaire must be disconnected before carrying out any insulation resistance testing. Product technical information and specification may change over time without prior notification. For the latest technical information please visit our web site [www.robust.com.au](http://www.robust.com.au) and [www.robusted.co.nz](http://www.robusted.co.nz)

-25°C < Ta < +40°C, 220-240V ~ 50/60Hz, Class I, IP20

Luminaire is non-dimmable.

Complies with the emergency pack (RHA2WEMSTA-PSU) to achieve the duration 90 minutes emergency.

### Installation

1. Ensure mains supply is switched off before commencing work.
2. Select suitable location for luminaire.
3. Safety note! The power supply cord must not be exposed to mechanical damage.
4. Disassemble the fitting base from the fitting (as per fig. 2 & 3).
5. Mark appropriate fixing hole positions on wall based on the fitting base, check location of buried cables, pipes and other building services before drilling.
6. Drill holes in the wall and insert the wall plugs. And feed supply cables through cable entry hole and attach base to wall (as per fig.4).
7. Connect supply: Live/Brown to SL, Neutral/Blue to N and Yellow/Green to E.
8. Move switch on the metal tray to select colour temperature. And then choose the wattage on the driver via DIP switch.

Default setting: RDKX06CCT3: 24W, 3000K  
RDKX12CCT3: 38W, 3000K  
RDKX15CCT3: 60W, 3000K

**WARNING: DO NOT CHANGE SETTING WHEN THE FITTING IS ON!**

9. Refit the front diffuser to the base and screw it firmly using one screw.  
(Note: The pinboard at the right end of diffuser should be inserted into the pin clamp at the right end of cover.)
10. Press down the tabs to the reset position on the ends of fitting and ensure that it fits securely.

Note: This luminaire has no user serviceable parts. If damaged, disconnect from mains and discontinue use.


**DIP Switch:**

| RDKX06CCT3 |     |     |     |     | RDKX12CCT3 |     |     |     | RDKX15CCT3 |      |     |     |     |     |
|------------|-----|-----|-----|-----|------------|-----|-----|-----|------------|------|-----|-----|-----|-----|
|            | 14W | 18W | 21W | 24W |            | 17W | 24W | 31W | 38W        |      | 36W | 45W | 53W | 60W |
| PIN1       | OFF | ON  | OFF | ON  | PIN1       | OFF | ON  | OFF | ON         | PIN1 | OFF | ON  | OFF | ON  |
| PIN2       | OFF | OFF | ON  | ON  | PIN2       | OFF | OFF | ON  | ON         | PIN2 | OFF | OFF | ON  | ON  |



LED Group Australia Pty Limited  
Suite B, 2 Pittwin Road  
Capalaba  
Queensland 4157  
Australia  
Tel: 07 3890 5444  
Fax: 07 3890 4777  
Email: [purchases@robust.com](mailto:purchases@robust.com)  
Website: [www.robust.com.au](http://www.robust.com.au)

LED Group  
Crowe Horwath  
72 Trafalgar Street  
NELSON 7010  
New Zealand  
Tel: +64 3668 5285  
Email: [nz\\_purchases@robust.com](mailto:nz_purchases@robust.com)  
Website: [www.robusted.co.nz](http://www.robusted.co.nz)

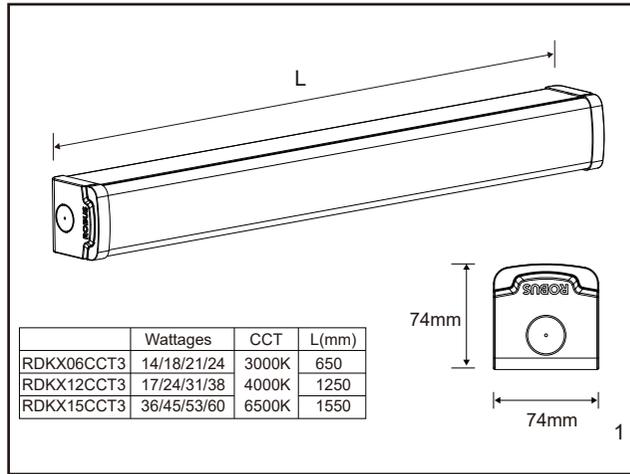

|            | Wattages    | CCT   | L(mm) |
|------------|-------------|-------|-------|
| RDKX06CCT3 | 14/18/21/24 | 3000K | 650   |
| RDKX12CCT3 | 17/24/31/38 | 4000K | 1250  |
| RDKX15CCT3 | 36/45/53/60 | 6500K | 1550  |

