ROBUS®

SPEEDBEAM EXPRESS 4 WATTAGE SELECTABLE LED BATTEN IP20 4FT WHITE CCT3 SELECTABLE

RSBEX12CCT3-01

PLEASE READ INSTRUCTION BEFORE COMMENCING INSTALLATION AND RETAIN FOR FUTURE REFERENCES.

! Electrical products can cause death or injury, or damage to property. If in any doubt about the installation or use of this product, consult a competent electrician. Product or a person falling from height can cause serious personal injury. Please ensure suitable equipment is used by a competent person.

Note:

Product technical information and specification may change over time without prior notification. For the latest technical information please visit our web site https://au.robus.com and www.robusled.co.nz

-20°C < Ta < +40°C, 220-240V ~ 50Hz, Class I, IP20

Luminaire is non-dimmable.

Compatible with R3EM2PA-04 emergency pack, (2-hour emergency duration) and RHEMW-04 microwave sensor accessory. Note: These accessories must be fixed onto the locations marked “emergency” for emergency pack, or “Sensor” for the microwave sensor on the inside of the fittings.

Must never be “hot-plugged” or connected to the fitting when live.

Installation

1. Ensure mains supply is switched off before commencing work.
2. Select suitable location for luminaire. Safety note! The power supply cable must not be exposed to mechanical damage.
3. Disassemble the fitting base from the fitting.
4. Mark appropriate fixing hole positions on the wall via using the base of fitting to attach onto the wall, check location of buried cables, pipes and other building services before drilling.
5. Drill holes on the wall and insert the wall plugs. And feed supply cables through cable entry hole, attach the base onto wall and fix it using the screws.
6. Connect power supply cable to terminal: Live SL– Brown, Neutral –Blue and Yellow/Green - Earth. Permanent Live (PL) as optional (for EM).
7. Select the wattage (34W, 28W, 22W or 17W) and colour temperature CCT (3000K, 4000K or 5700K) using DIP switch on the driver. Factory default setting: 4000K, 34W. WARNING: DO NOT CHANGE WATTAGE and CCT WHEN THE FITTING IS ON!
8. Refit the optical assembly unit to the base and secure using the lock mechanism.

Note: 1. This luminaire has no user serviceable parts. If damaged, disconnect from mains and discontinue use.

2. Suitable for Besa box mounting option as well.





The Installation must be carried out by a qualified electrician

LED Group Australia Pty Limited
Unit 3, 2 Pittwin Road
Capalaba
Queensland 4157
Australia


Tel: 07 3890 5444
Fax: 07 3890 4777
Email: purchasesau@robus.com
https://au.robus.com

Cuthbert Stewart Ltd
22 Fisher Crescent,
Mt Wellington, Auckland.
PO Box 62293, Sylvia Park 1644,
Auckland, New Zealand.


Ph: 0800 288 423
Customer Support:
support@csl-online.nz

Issue 1 160925


Weight: 1.3kg

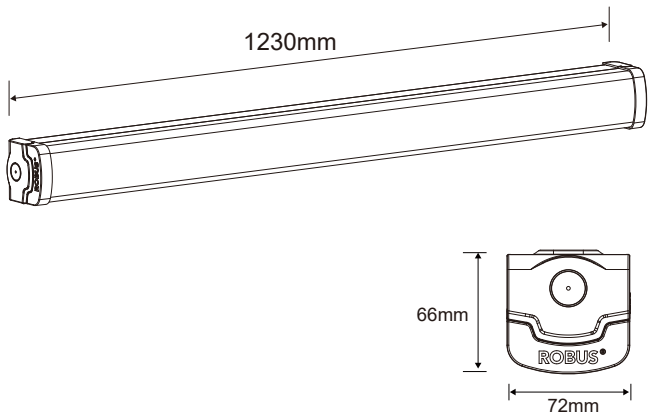


1

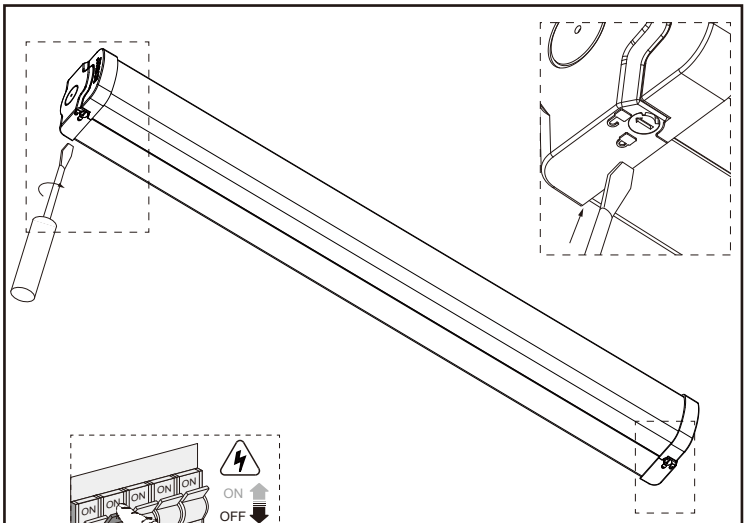

2

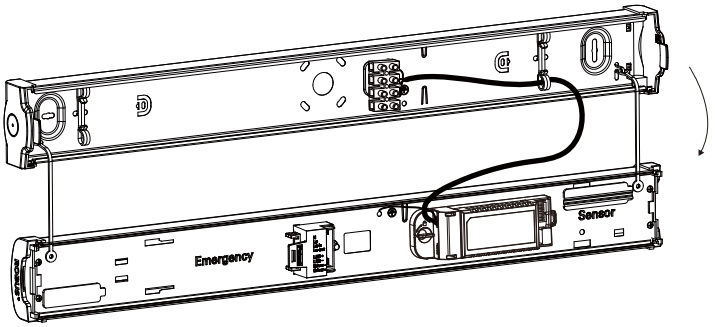

3

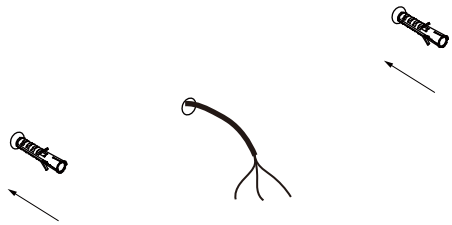

4

DIP Switch CCT

PIN1	PIN2	CCT
ON	ON	**NW 4000K**
ON	OFF	CW 5700K
OFF	ON	WW 3000K


1 2

DIP Switch wattage


PIN1	PIN2	
ON	ON	**34W**
ON	OFF	28W
OFF	ON	22W
OFF	OFF	17W

1 2

Default setting: 4000K, 34W

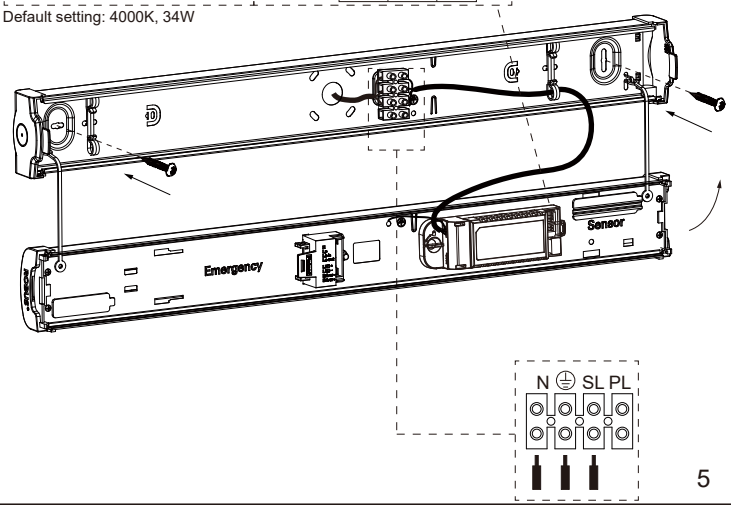

5

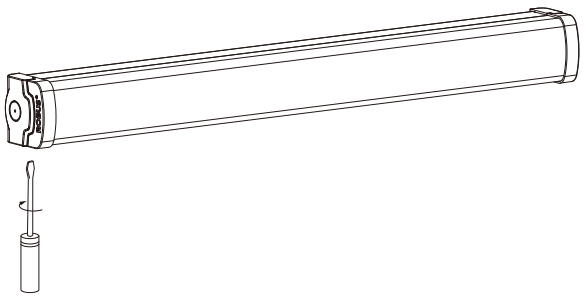

6

The Installation must be carried out by a qualified electrician

LED Group Australia Pty Limited
Unit 3, 2 Pittwin Road
Capalaba
Queensland 4157
Australia

Tel: 07 3890 5444
Fax: 07 3890 4777
Email: purchasesau@robus.com
https://au.robus.com

Cuthbert Stewart Ltd
22 Fisher Crescent,
Mt Wellington, Auckland.
PO Box 62293, Sylvia Park 1644,
Auckland, New Zealand.

Ph: 0800 288 423
Customer Support:
support@csl-online.nz